

# PHILIPS



## Linea V design cordless phone

1.8" display/white backlight

Handset speakerphone



M3501W

## The finest line to connect

Design takes centre stage with the precision-engineered Philips LINEA V, with edgy form harmonising with an iconic silhouette. Elegant architecture supports smart functions and comfort, making the LINEA V a must-have masterpiece.

### Eco-conscious product

- Zero power emission when ECO+ mode is activated

### Ultimate calling experience

- High-contrast 4.6 cm (1.8") 2-line reverse display
- HQ-Sound: high quality acoustic engineering for superb sound
- Handset speakerphone allows you to talk hands-free
- Save up to 50 of your favourite contacts in your phonebook
- Privacy settings: call block and call barring
- Enjoy 10 hours of talk time on a single charge
- Stay connected during power cuts via micro-USB power bank

### Exquisite design with high quality execution

- Slender design and compact footprint for space efficiency
- Calibrated, seamlessly integrated keys for precise dialling
- Charge handset either way around

# Highlights

## 4.6 cm (1.8") reverse display



High-contrast, white-on-black reverse LCD display ensures easy reading and also blends well with the overall sleek design language.

## 50-name phone book

Save up to 50 favourite contacts in your phonebook.

## Calibrated keypad



The calibrated keypad allows you to clearly feel every keystroke, whenever you are dialling a number or entering a contact from your phonebook. Detailed study of keypad materials and structures, as well as extensive user tests, results in the right balance between the key-pressing force and the key response to ensure precise dialling.

## Compact footprint




Slender design and compact footprint for space efficiency

## ECO+ mode



Philips phones are energy efficient and designed to be respectful to the environment. When ECO mode is activated the emitted radiation is reduced by up to 60% and up to 95% when the phone is charging. With ECO+ mode activation the radiation drops to zero.

## Handset speakerphone

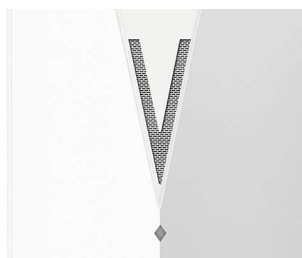

Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

## Hassle-free charging

Charge handset either way around

## HQ-Sound



HQ-Sound: high-quality acoustic engineering for superb sound reproduction. We build upon decades of experience and breakthrough

innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything — high-quality components, digital signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural it's almost like being there in person.

## Micro-USB connector

The integrated micro-USB connector socket on the base unit ensures that the phone can stay powered via a pre-charged power bank, allowing you to make calls even if there is a power cut. The power-bank charging feature supports most power-bank products which are able to provide a minimum output current below 85 mA without automatic shutdown. Power bank sold separately.

## Privacy settings

Value your privacy and quiet at home? Black List restricts specific numbers or those starting with certain digits, protecting you from receiving unwanted calls. You can choose to block up to 4 sets of numbers. Each set can consist of 1 to 24 digits. If the number of an incoming call starts with any of these number sets or is one of the exact numbers that you chose to block, your phone will not ring. With Call Barring, you can avoid the surprise of expensive phone bills by blocking calls to specific numbers starting with certain digits (for example, pay-per-call numbers).

## Up to 10 hours' talk time

Enjoy 10 hours of talk time on a single charge

# Specifications

## Sound

Volume control on handset  
Ringtones on handset: 10 polyphonic  
HQ-Sound

## Convenience

Alarms: Alarm Clock  
Menu structure in the handset: List Menu  
Base Station keys: Paging key  
Number of keys: 20  
Speakerphone — talk hands-free  
Call Management: Call Waiting\*, Caller ID\*,  
Microphone mute, Missed Calls, Received Calls,  
Dialled calls  
Call barring: Restrict the phone from making  
specific outgoing calls  
Signal strength indication  
Backlit keypad: Soft Amber  
Signal strength indicator: 3 bar indicator  
Battery level indicator: 3 bar battery icon  
Date/Time display  
Multi-base capability: 1  
Battery charge indication  
Programmable hot keys: Key 1 and 2, except  
France only with Key 1  
Keypad lock  
Key tone on/off  
Auto hang up  
Illuminated keypad

Up to 10 hrs' talk time  
Up to 180 hrs standby time  
Charge time: 8 hours  
Line cord length: 1.8 m  
Power cord length: 1.8 m  
Range: Open field <300 m; indoor <50 m  
Block callers/Blacklist\*: Restrict the phone from  
ringing on specific incoming numbers  
Event notifications: For events status

## Power

Battery Capacity: 300 mAh  
Mains power: AC 100–240 V ~50/60 Hz  
Battery type: 2 x AAA NiMH Rechargeable  
Power Consumption: <0.7 W

## Packaging dimensions

Height: 22.5 cm  
Packaging type: Carton  
Type of shelf placement: Laying  
Width: 12.1 cm  
Depth: 10.1 cm  
Number of products included: 1  
EAN: 69 51613 99950 9  
Gross weight: 0.523 kg  
Nett weight: 0.345 kg  
Tare weight: 0.178 kg

## Picture/Display

Display size: 4.6 cm/1.8"  
Backlight colour: White  
Display type: 1-line dot matrix + 1-line numeric +  
hard icons  
Backlight: Yes

## Memory Capacity

Call log entries: 20 entries  
Phonebook: 50 names and numbers  
Redial List Capacity: 10 entries  
Phonebook store in the base

## Security

Transmission encryption: Yes

## SAR Value

Philips handsets: <0.1 W/kg

## Eco Design

Eco+

## USB Charging

Yes

## Network Features

Compatible: GAP

