

Philips Micro Hi-Fi System

MCM196D

Dock & play your digital music

Play and charge your iPod

You're in touch with the latest and the coolest - Philips MCM196D lets you play your iPod music out loud with the docking cradle! Enjoy great sound in a compact form factor that fits in any room.

Play your iPod content out loud at home

- Play and charge your iPod
- Single remote control for the system and iPod

Enrich your sound experience

- Play MP3/WMA-CD, CD and CD-RW
- Autostop stereo cassette deck
- Digital Sound Control for optimized music style settings
- Dynamic Bass Boost for deep and dramatic sound
- 2x4W RMS total output power


Start the day your way

- · Wake-Up and Sleep Timer
- Digital tuning with 40 preset stations for extra convenience



Highlights

Digital Sound Control

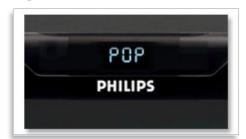

Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen

music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of

the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.















Specifications

Sound

- Output Power: 2x4W RMS / 8W Total power
- Sound Enhancement: Digital Sound Control 4 modes, Dynamic Bass Boost

Loudspeakers

Main Speaker: Bass Reflex Speaker System, 3.5" woofer

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc Playback Modes: Repeat/one/all/program, Shuffle Play, 20-Track Programmable
- · Loader Type: Top
- Cassette Deck Technology: Mechanical
- Cassette Playback Modes: Electronic Speed Control
- Cradle playback mode: Charging iPod, Fast forward and backward, Next and Previous track, Play and Pause

Audio Recording

- · Recording Media: Tape
- Tape Recording Enhancement: Automatic Recording Level, CD Synchro Start Recording, One-Touch Recording

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo, AM
- · Auto digital tuning
- Station presets: 40
- Tuner Enhancements: Auto Store

Connectivity

- Other connections: FM fixed pigtail antenna, Line out, AM Antenna, Cradle connection
- Aux in: 3.5mm
- Headphone: 3.5 mm

Convenience

- · Alarms: CD Alarm, Radio Alarm, Sleep timer
- · Clock: On main display
- Display Type: LCD

Accessories

- Included Accessories: AM/FM Antenna, Guarantee booklet, Quick Use Guide
- Remote control: 24-key remote with Lithium battery
- User Manual: English, French, Spanish
- · Quick start guide: English, French, Spanish
- · Cradle: Cradle and adaptors for iPod

Dimensions

- Set dimensions (W x H x D): 146 x 228 x 216 mm
- Main speaker dimensions (W x H x D): 146 x 228 x 160 mm
- Packaging dimensions (W x H x D): 380 x 275 x 350 mm
- Weight incl. Packaging: 5.6 kg

Power

• Power supply: 120V, 60Hz

iPod compatibility

 Compatible with: iPod, iPod mini, iPod nano, iPod with color display, iPod 5th Generation



Issue date 2009-11-06

Version: 1.0.5

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

12 NC: 8670 000 26951 UPC: 6 09585 12879 8

www.philips.com