

Philips
DVD player

DivX Ultra

DVP5150



Turn up your experience

with 8 channel DivX Ultra playback

Be impressed with this Philips DVD player. Step into another home entertainment arena as you immerse yourself with DivX movies and Windows Media Audio in your own living room.

Great audio and video performance

- Progressive Scan component video for optimized image quality
- 12-bit/108MHz video processing for sharp, natural images
- 192kHz/24 bit audio DAC enhances analogue sound input
- Dolby Digital EX for enhanced 6.1 surround sound

Plays it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, (S)VCD, DivX
- DivX Ultra Certified for enhanced playback of DivX videos
- Music: CD, MP3-CD, CD-R/RW & Windows Media™ Audio
- Picture CD (JPEG) with music (MP3) playback


Fits everywhere, goes anywhere

- Ultra-slim design

PHILIPS
sense and simplicity


Highlights

Progressive Scan

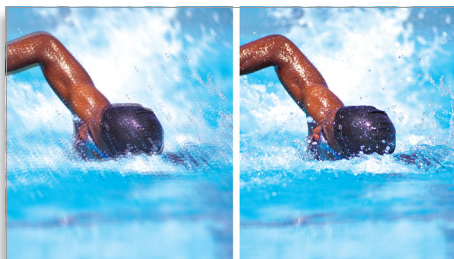


Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

12-bit/108MHz video DAC

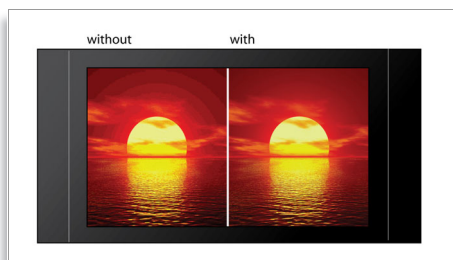


12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

192kHz/24 bit audio DAC

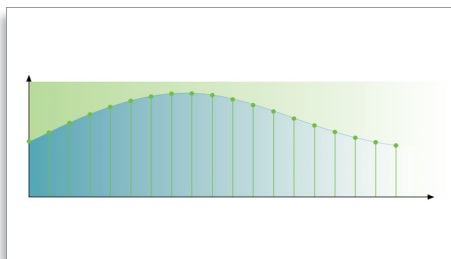

192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

Dolby Digital EX

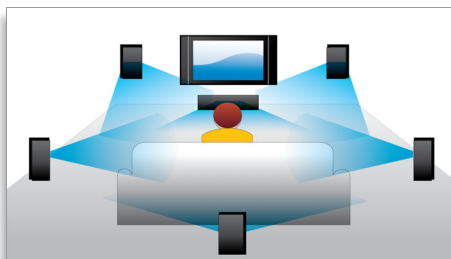

Dolby Digital EX decoding is a new technology that adds an extra sense of dimensional detail and intensified involvement to the already thrilling Dolby Digital 5.1-channel listening experience. The extra surround channel creates an even more exciting, enveloping surround-sound effect.

Multi-format Movies with DivX

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Music: Windows Media™ Audio

Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

Picture CD with MP3 Playback

Picture CD is a CD-R or CD-RW disc on which you can store your MP3 and digital pictures. When inserting a Picture CD in the DVD player, a screen menu will pop up, showing your JPEG's and/or MP3 files on the disc. Just select the music and pictures files you wish to enjoy and press play or OK. You can watch your pictures on TV with your music playing simultaneously.

Ultra-slim design

The attractive enclosure has a very low profile.

Specifications

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive Scan, Video upsampling, Smart Picture

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 100
- Distortion and Noise (1kHz): 85 dB
- Crosstalk (1kHz): 100 dB
- Dynamic Range (1kHz): 90 dB
- Sound System: Dolby Digital, Dolby Prologic II

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD-R/-RW, DivX, DVD+R/+RW
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW
- Compression format: MP3, Dolby Digital, PCM, WMA
- MP3 bit rates: 32 - 256 kbps

Still Picture Playback

- Playback Media: DVD-R/-RW, DVD+R/+RW, CD-

R/RW, Picture CD, Kodak Picture CD

- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow with MP3 playback, Zoom

Connectivity

- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, ComponentVideo out Progressive, Analog audio Multi-channel out

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Hindi

Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 10 W
- Standby power consumption: < 0.8 W

Accessories

- Included Accessories: 2 x AAA Batteries, Audio/Video cable, Quick start guide, Remote Control, World Wide Warranty leaflet, User Manual

Dimensions

- Set dimensions (W x H x D): 435 x 37 x 235 mm
- Packaging dimensions (W x H x D): 490 x 82 x 320 mm



Issue date 2009-08-09

Version: 3.0.8

12 NC: 8622 810 13524
EAN: 87 10895 96504 0

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com