



Philips  
5.1 Home theater

3D Angled Speakers  
HDMI 1080p

HTS5540

## Obsessed with sound

True cinematic experience with sound evenly spread

Maximize your home cinema sound experience with dynamic 3D Directional Angled Speakers! Play your favorite entertainment content on the innovative Philips 5000 series home theater system

### **Great listening experience**

- 1200W RMS power delivers great sound for movies and music
- DTS, Dolby Digital and Pro Logic II surround sound
- DoubleBASS technology for fuller and deeper bass
- 3D Angled Speakers disperse sound evenly around the room

### **Designed to enhance your living space**

- Sleek high gloss finishing with unique touch controls

### **Connect and enjoy all your entertainment**

- Plays DVD, VCD, CD and USB devices
- Wireless rear audio ready for fewer wires across your room

# PHILIPS

# Highlights

## 3D Angled speakers




3D Angled Speakers feature angled drivers to deliver sound not only towards the front but also to the sides, creating a wider sweet spot so you can enjoy more immersive and cinematic surround sound.

## 1200W RMS power



1200W RMS power delivers great sound for movies and music

## DTS, DolbyDigital, ProLogic II

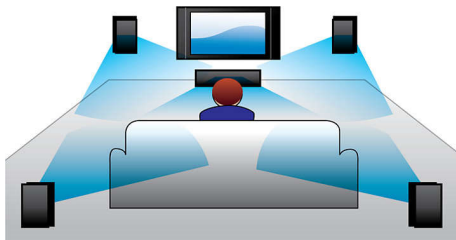

A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by

processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

## DoubleBASS technology



DoubleBASS ensures you hear even the deepest bass tones from compact-sized subwoofers. It captures low frequencies and recreates them in the audible range of the subwoofer - delivering sound with more boom and panache, and ensuring you a full, uncompromised listening experience.

## Sleek high gloss finishing




Sleek high gloss finishing with unique touch controls

## Plays it all



Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

## Wireless rear audio ready

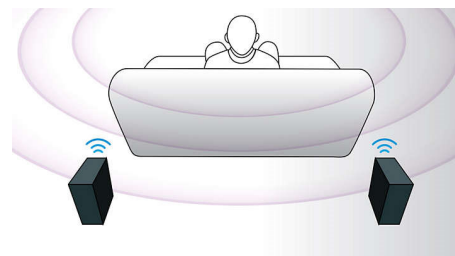

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections. You could buy the Philips wireless rear speakers separately.

# Specifications

## Sound

- Frequency response: 20-20k Hz
- Sound Enhancement: Dialog Enhancement, DoubleBass, FullSound, Night Mode, Dolby Digital Prologic II
- Sound System: Dolby Digital 5.1, DTS 96/24, DTS Digital Surround, Stereo
- Equalizer settings: Action, Rock, Classic, Concert, Drama, Jazz, Sports
- Signal to noise ratio: > 65 dB
- Total Power RMS @ 30% THD: 1200 W

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Center speaker drivers: 2 x 3" full range woofers
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer freq range: 20 - 150 Hz
- Center speaker impedance: 3 ohm
- Subwoofer driver: 1 x 8" woofer
- Subwoofer type: Passive
- Center speaker freq range: 150 - 20k Hz
- Drivers per Satellite speaker: 2 x 3" full range woofers
- Subwoofer impedance: 3 ohm
- Drivers per Tallboy speaker: 2 x 3" Full range woofers
- Tallboy speaker freq range: 150 - 20k Hz
- Tallboy speaker impedance: 4 ohm

## Connectivity

- Front / Side connections: Microphone In, MP3 Link, USB
- Rear Connections: AUX IN 1, AUX IN 2, Component Video output, Composite video (CVBS) output, Digital coaxial in, Easy-Fit Speaker Connectors, FM Antenna Socket, HDMI output, Wireless Rear Audio

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

## Convenience

- EasyLink (HDMI-CEC): One touch play, One touch standby, Remote Control-Passthrough

## Power

- Power consumption: 150 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.9 W

## Accessories

- Compatible accessories: RWSS5510 Wireless Rear

Audio, STS1300 Floor stand

- Included accessories: Audio/Video cable, Batteries for remote control, FM antenna, Quick start guide, Remote Control, Stand Screw x 2, User Manual, World Wide Warranty leaflet

## Dimensions

- Main Unit (W x H x D): 435 x 58 x 358 mm
- Weight incl. Packaging: 24.90 kg
- Main Unit Weight: 3.56 kg
- Packaging (W x H x D): 400 x 470 x 1180 mm
- Center Speaker (W x H x D): 280 x 95 x 92 mm
- Center Speaker Weight: 1.40 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 100 x 280 x 115 mm
- Subwoofer (W x H x D): 196 x 392 x 342.2 mm
- Front Speaker Weight: 1.05 kg
- Subwoofer Weight: 5.25 kg
- Front Speaker cable length: 4 m
- Rear Tallboy Speaker (WxHxD): 260 x 1101 x 260 mm
- Rear Speaker Weight: 3.77 kg
- Rear Speaker cable length: 10 m
- Subwoofer cable length: 4 m

## Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320 kbps

## File Format

- Audio: mp3, wma
- Video: asf, avi, divx, mpeg, mpg, wmv
- Picture: JPEG, JPG

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Karaoke Playback

- Advance functions: Scoring, Voice Cancellation
- Standard functions: Echo level control, Mic volume control, Pitch control

## Still Picture Playback

- Compression format: JPEG, JPEG HD
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4, XviD, WMV SD
- Video disc playback system: NTSC, PAL



Issue date 2024-05-02

Version: 12.3.6

EAN: 87 12581 52519 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)