

Philips
DVD player

HDMI 1080p

DivX Ultra

DVP3368X



Get sharper, clearer pictures

with true high-def HDMI 1080p

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW

Brings audio and video to life

- HDMI digital output for easy connection with only one cable
- Progressive Scan component video for optimised image quality
- 5.1 channel audio output for surround sound
- Screen Fit for optimal viewing every time

Easy to set up and use

- One-touch MP3 creation directly from CDs onto USB sticks
- EasyLink controls all EasyLink products with a single remote

Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drives

PHILIPS
sense and simplicity

DVD player
HDMI 1080p DivX Ultra

Highlights

DivX Ultra Certified




With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/W and DVD recordable discs. DivX Ultra merges DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

EasyLink




EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Hi-Speed USB 2.0 Link

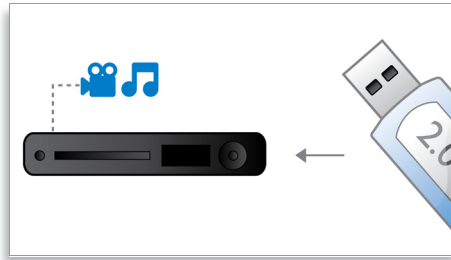

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

5.1 channel audio output

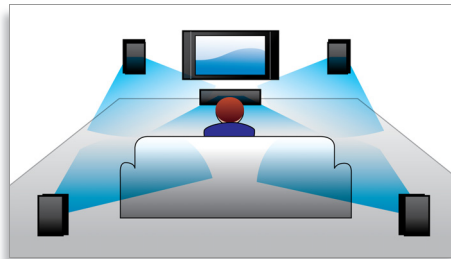

5.1 channel audio output for surround sound

One-touch MP3 creation



Convert the contents of your favourite CDs to MP3 files on your Philips product and store them directly on a thumb drive or on your

DVP3368X/94


portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC and even while the CD is playing.

HDMI for simple AV connection



HDMI stands for High Definition Multimedia Interface. It is a direct digital connection that can carry digital HD video as well as digital multi-channel audio. By eliminating the conversion to analogue signals it delivers perfect picture and sound quality, completely free from noise. HDMI is fully backwards-compatible with DVI (Digital Video Interface).

Screen Fit

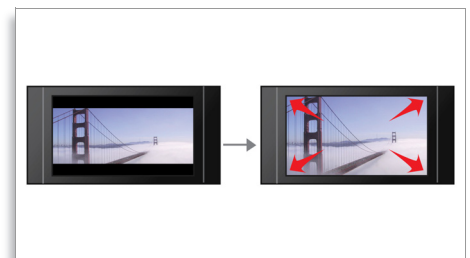

Whatever you're watching, on whatever TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full screen

HDMI™

DivX®
ULTRA

DOLBY
DIGITAL

PROGRESSIVE
SCAN

MP3-CD PLAYBACK

Energy Star
ENERGY STAR

DVD
VIDEO

Specifications

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive scan, Video upscaling, Video Upscaling (720p, 1080i/p), High Def (720p, 1080i, 1080p)

Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1 kHz): 80 dB
- Crosstalk (1 kHz): 90 dB
- Dynamic Range (1 kHz): 80 dB
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD+R/+RW, DVD-R/-RW, DVD-Video, DivX
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra
- Video disc playback system: PAL

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps
- Compression format: MP3, Dolby Digital, PCM, WMA

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD

- Picture Compression Format: JPEG
- Picture Enhancement: Rotate, Zoom, Slideshow, Flip photos, High Definition Resolution, Slideshow with MP3 playback

Connectivity

- Rear Connections: Analogue audio Left/Right out, Component Video out Progressive, Digital coaxial out, HDMI output, Analogue audio multi-channel out
- Front/Side connections: USB

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Hindi

Power

- Power consumption: < 10 W
- Power supply: 230 V, 50 Hz
- Standby power consumption: < 1.0 W

Accessories

- Included accessories: 2 x AAA Batteries, Remote Control, User Manual, Quick start guide, Warranty Leaflet, Audio/Video cable

Dimensions

- Packaging dimensions (W x H x D): 415 x 82 x 282 mm
- Set dimensions (W x H x D): 360 x 37 x 210 mm

Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3, DivX
- Multimedia connections: USB memory class device



Issue date 2009-12-22

Version: 1.0.5

12 NC: 8670 000 50826
EAN: 87 12581 47259 7

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com