



Philips  
SoundRing wireless  
speaker

**Bluetooth®**

Built-in microphone for calls  
Rechargeable battery  
16W



**SB3700**

## Surround yourself with natural, immersive sound

### Obsessed with sound

Fill your room with wonderfully natural and immersive sound. This Philips SB3700/10 SoundRing wireless speaker takes music wirelessly from your iPod Touch, iPhone, iPad and computer's iTunes - and delivers it to your entire room.

#### **Crystal clear sound**

- SoundRing for all-around sound from a compact device
- FullSound enhances sound detail for rich and powerful sound
- 16W RMS total output power

#### **Elegant and contemporary**

- A truly distinctive design to complement your lifestyle
- 360-degree design for gorgeous look from any angle

#### **Advanced versatility**

- Wireless music streaming via Bluetooth
- Audio-in for easy portable music playback
- Built-in rechargeable battery for even better portability
- Built-in microphone for hands-free phone calls

# PHILIPS

SoundRing wireless speaker  
Bluetooth® Built-in microphone for calls, Rechargeable battery, 16W

# Specifications

## Compatibility

- iPad: iPad 1, iPad 2, new iPad
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S
- iPod touch: 3rd generation or later
- Android tablets & smartphones
- other Bluetooth-enabled device

## Loudspeakers

- Speaker drivers: 4x1.5"/4cm full-range driver
- Output power (RMS): 16W

## Accessories

- Included accessories: AC-DC Adapter, 3.5mm stereo line in cable, Warranty certificate, World Wide Warranty leaflet, Quick start guide
- User Manual: in CD

## Connectivity

- Bluetooth profiles: A2DP, HFP, HSP
- Bluetooth range: Line of sight, 10M or 30FT
- USB charging
- Audio in (3.5mm)

## Dimensions

- Product dimensions: (WxDxH) 197 x 114 x 193 mm
- Packaging dimensions (WxDxH): 237 x 229 x 176 mm


## Power

- Power supply: 100-240VAC, 50/60Hz

SB3700/98


# Highlights

## SoundRing

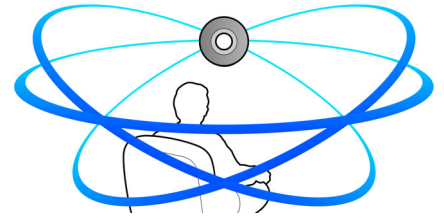

A truly distinctive design and engineered to provide room-filling sound. It comprises a central bass sound pipe and four high definition drivers - two front-firing and two side-firing drivers powered by Neodymium magnets, to radiate sound all around, for a great clarity throughout the whole room.

## FullSound™

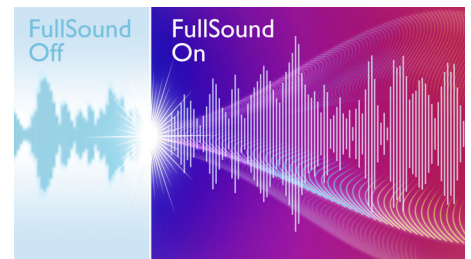

Philips' proprietary FullSound technology uses latest-generation Digital Signal Processing to faithfully enhance music rendering. Music content is dynamically analyzed and optimized to let you experience music with great detail and warmth.

## Wireless music streaming

Your speaker supports Bluetooth music streaming. It lets you enjoy your favorite tunes in high quality music wirelessly from your Bluetooth enabled devices.

## AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

## Built-in rechargeable battery

For greater convenience in the same elegant style, this SoundRing can be charged on the stand supplied. Just dock the speaker on it to enjoy more hours of listening pleasure.



Issue date 2014-07-15

Version: 1.1.2

12 NC: 8670 001 03146  
EAN: 08 71258 16883 01

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)