

Philips  
5.1 Home theatre

DVD  
USB 2.0

HTD5540



## Powerful cinematic surround sound with deep sound

Bring the power of the cinema into your home! This Philips home theatre has speakers with double bass pipes offering powerful 1000-W surround sound and in Full HD 1080p with DVD Disc playback.

### **Great listening experience**

- 1000 W RMS power delivers great sound for movies and music
- Exposed speaker drivers for powerful surround sound
- Dolby Digital for ultimate movie experience

### **Designed to enhance your cinema at home**

- Modern design to complement your home environment


### **Simply enjoy all your entertainment**

- Audio-in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies and picture quality
- Plays DVD, VCD, CD and USB devices
- DivX Ultra Certified for enhanced DivX video playback

# PHILIPS

# Highlights

## Dolby Digital

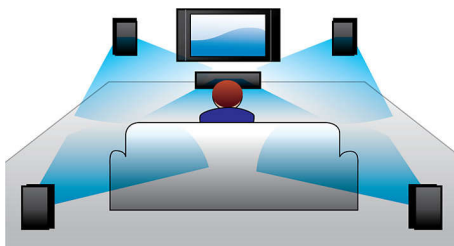

Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## 1000 W RMS power



1000 W RMS power delivers great sound for movies and music

## Plays it all



Play virtually any disc and any media devices you want - whether they are DVDs, VCDs, CDs or USB devices. Experience the

unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theatre system.

## HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analogue signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution—ensuring more details and more true-to-life pictures.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like

standby and play can now be carried out with absolute ease.

## Audio in



Audio-in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio-in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus in one convenient file format.

# Specifications

## Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1
- Subwoofer output power: 166 W
- Equalizer settings: Movie, Music, Original, News, Gaming
- Centre speaker output power: 166 W
- Tallboy speaker output power: 2 x 166 W
- Satellite speaker output power: 2 x 166 W
- Total Power RMS @ 30% THD: 1000 W

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Centre speaker drivers: 1 x 3" Full range woofer
- Satellite speaker freq range: 150–20,000 Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer freq range: 20–150 Hz
- Centre speaker impedance: 4 ohm
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Passive
- Centre speaker freq. range: 150–20,000 Hz
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Subwoofer impedance: 4 ohm
- Drivers per Tallboy speaker: 1 x 3" Full range woofer
- Tallboy speaker freq range: 150–20,000 Hz
- Tallboy speaker impedance: 4 ohm

## Connectivity

- Front Connections: Audio in, Hi-Speed USB
- Rear Connections: AUX IN 1, Composite video (CVBS) output, Digital optical in, HDMI 1.4 output (ARC), Mini Easy-Fit Speaker Jacks

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Pre-set Channels: 40

## Outer Carton

- EAN: 87 12581 67788 6
- Length: 66.9 cm
- Number of consumer packages: 1
- Width: 39.9 cm
- Gross weight: 16.2 kg
- Height: 43 cm
- Net weight: 14.4 kg
- Tare weight: 1.8 kg

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC)

## Power

- Power consumption: 105 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.5 W

## Packaging dimensions

- Height: 43 cm

- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 66.9 cm
- Depth: 39.9 cm
- Number of products included: 1
- EAN: 87 12581 67788 6
- Gross weight: 16.2 kg
- Net weight: 14.4 kg
- Tare weight: 1.8 kg

## Product dimensions

- Height: 5.8 cm
- Width: 36 cm
- Depth: 33.6 cm
- Weight: 2.4 kg

## Accessories

- Compatible accessories: STS3001 Speaker stand
- Included accessories: Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, User manual on CD-ROM, World Wide Warranty leaflet, AAA Battery (x1)

## Dimensions

- Centre Speaker (W x H x D): 223 x 100 x 80 mm
- Centre Speaker Weight: 0.65 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 90 x 185 x 82 mm
- Subwoofer (W x H x D): 178 x 303 x 343 mm
- Front Speaker Weight: 0.53 kg
- Subwoofer Weight: 3.66 kg
- Front Speaker cable length: 3 m
- Rear Tallboy Speaker (W x H x D): 247 x 242 x 1090 mm
- Rear Speaker Weight: 2.72 kg
- Rear Speaker cable length: 7 m
- Subwoofer cable length: 3 m

## Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320 kbps

## File Format

- Audio: mp3, wma
- Video: avi, DivX, mpeg, mpg
- Picture: JPEG, BMP, GIF

## Picture/Display

- Picture enhancement: Video upscaling

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Still Picture Playback

- Picture Compression Format: BMP, GIF, JPEG, TIFF
- Picture Enhancement: Rotate, Zoom

## Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2



Issue date 2024-05-02

Version: 5.0.4

EAN: 87 12581 67788 6

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified and associated logos are trademarks of DivXNetworks, Inc. and are used under licence.

\* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.