

Philips
DVD home theatre system



HTS3566D



High definition home cinema

Dock included for iPod

Indulge in an unbeatable home cinema experience with this system. Delivering incredible surround sound and clear pictures via HDMI 1080p upscaling, it also plays from virtually any type of disc and also from USB drives and portable media players

Connect and enjoy multiple sources

- Dock included for iPod
- Hi-Speed USB 2.0 Link plays media from USB flash drives
- MP3 Link plays music from portable media players

Brings audio and video to life

- HDMI 1080p upscales to high definition for sharper pictures
- Dolby Digital and Pro Logic II surround sound

Plays all your movies and music

- Plays WMV, DivX, WMA, MP3 and JPEG digital camera photos
- DivX Ultra Certified for enhanced playback of DivX videos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL

Easy to set up and use

- EasyLink for easy control of connected devices via HDMI CEC
- Floor standing speakers for freedom of placement
- Easy-fit™ connectors with colour-coding for a simple setup

PHILIPS
sense and simplicity


Highlights

HDMI 1080p




HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

Hi-Speed USB 2.0 Link

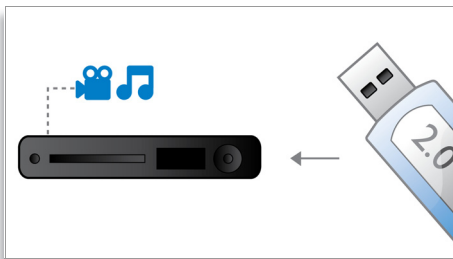

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Plays it all

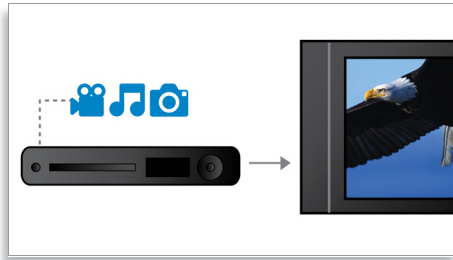

Play virtually any media format you want - whether they are WMV, DivX, MP3s or JPEGs. Experience the unbeatable convenience of great playability and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.


DivX Ultra Certified



With DivX support, you can enjoy DivX encoded videos in the comfort of your living

room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/RW and DVD recordable discs. DivX Ultra combines DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Dolby Digital and Pro Logic II

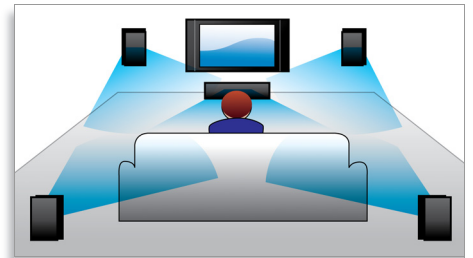


A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

Floor standing speakers

Floor standing speakers for freedom of placement

Plays it all

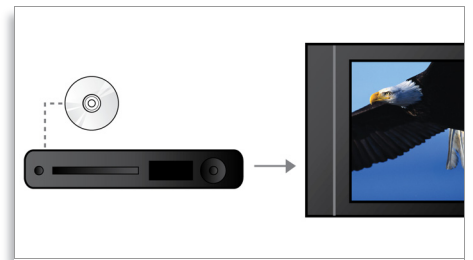

Play virtually any disc you want - whether they are CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW, DVD-RW or DVD+R DL. Experience unbeatable flexibility and the convenience of playing all your discs on the one device.



Specifications

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive Scan

Sound

- Output power (RMS): 4 x 125 W, 2 x 250 W
- D/A converter: 24-bit, 192 kHz
- Frequency response: 180-14000 Hz
- Signal to noise ratio: >65 dB
- Sound System: Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Rock, Action, Classic, Concert, Drama, Lounge, Gaming, Sports

Video Playback

- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2, WMV
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: NTSC

Audio Playback

- Compression format: MP3, WMA
- Playback Media: CD-R/RW, CD, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Picture compression format: JPEG
- Playback Media: DVD+R/+RW, CD-R/RW, DVD-R/-RW, USB flash drive
- Picture enhancement: Rotate, Zoom, Slideshow with music playback

Tuner/Reception/Transmission

- No. of pre-set Audio Channels: 40
- Tuner Bands: FM

Connectivity

- Front/Side connections: Hi-Speed USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, S-Video out, Composite video (CVBS) output, Digital coaxial in, AUX in, FM Antenna, Easy-Fit speaker connectors

Power

- Power supply: 120 V, 60 Hz
- Standby power consumption: < 1 W
- Power consumption: 180 W

Loudspeakers

- Satellite speaker drivers: 3" full-range woofer
- Satellite speaker impedance: 6 ohm
- Satellite speaker freq range: 150-20,000 Hz
- Centre Speaker: Magnetically shielded, 3-way
- Centre speaker drivers: 1 x 2" tweeter, 2 x 2.5" woofers
- Centre speaker impedance: 3 ohm
- Centre freq range: 150-20,000 Hz

- Subwoofer driver: 8" high-efficiency woofer
- Subwoofer impedance: 8 ohm
- Subwoofer freq range: 40-150 Hz
- Subwoofer type: Passive
- Satellite Speaker: 2 Floor standing pillars

Accessories

- Included Accessories: Remote Control, 2 x AAA Batteries, CVBS video cable, FM antenna, Product Registration Card, Quick start guide, User Manual, World Wide Warranty leaflet

Dimensions

- Set dimensions (W x H x D): 435 x 58 x 360 mm
- Set weight: 3.7 kg
- Front Speaker Width: 103 mm
- Front Speaker Height: 203 mm
- Front Speaker Depth: 71 mm
- Front Speaker Weight: 0.56 kg
- Rear Speaker Width: 262 mm
- Rear Speaker Height: 1199 mm
- Rear Speaker Depth: 264 mm
- Rear Speaker Weight: 3.53 kg
- Center speaker dimensions (W x H x D): 244 x 105 x 74 mm
- Centre Speaker Weight: 0.84 kg
- Subwoofer dimensions (W x H x D): 163 x 363 x 369 mm
- Subwoofer Weight: 5.08 kg
- Packaging dimensions (W x H x D): 970 x 435 x 410 mm
- Weight incl. Packaging: 22 kg

Outer Box

- Gross weight: 22.35 kg
- Gross weight: 49.273 lb
- Outer carton (L x W x H): 38.2 x 16.1 x 17.1 inch
- Outer carton (L x W x H): 97 x 41 x 43.5 cm
- Net weight: 19 kg
- Net weight: 41.887 lb
- Tare weight: 7.386 lb
- Tare weight: 3.35 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 97 x 43.5 x 41 cm
- Packaging dimensions (W x H x D): 38.2 x 17.1 x 16.1 inch
- Gross weight: 22.35 kg
- Gross weight: 49.273 lb
- Net weight: 41.887 lb
- Net weight: 19 kg
- Tare weight: 7.385 lb
- Tare weight: 3.35 kg

Product dimensions

- Cable length: 0 cm
- Cable length: 0 inch
- Product dimensions (W x H x D): 0 x 0 x 0 inch
- Product dimensions (W x H x D): 0 x 0 x 0 cm
- Weight: 0 lb
- Weight: 0 kg



Issue date 2009-04-21

Version: 5.0.10

12 NC: 8670 000 36344
UPC: 6 09585 14694 5

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com