

Philips  
DVD home theatre system



HTS3378

## Spectacular surround sound with deep powerful bass

This full-digital system delivers outstanding surround sound, providing a theatre-like movie experience in your home. It plays back a wide variety of formats from any sort of disc and from portable media players and USB sticks.

### Brings audio and video to life

- DoubleBASS for an extended, deep bass experience
- FullSound™ to bring your MP3 music to life
- Clear Voice for more audible vocals in movies and music
- HDMI 1080p upscales to high definition for sharper pictures
- Advanced Class D Amplifier for compact, powerful sound
- Karaoke scoring for fun and exciting song contests at home

### Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drives

### Easy to set up and use

- EasyLink controls all EasyLink products with a single remote

### Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays WMV, DivX, WMA, MP3 and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL

**PHILIPS**  
sense and simplicity


# Highlights

## HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

## Hi-Speed USB 2.0 Link

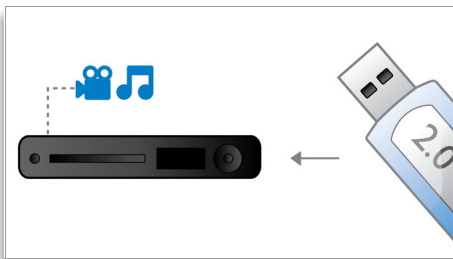

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

## EasyLink




EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Karaoke scoring



Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.


## Plays it all

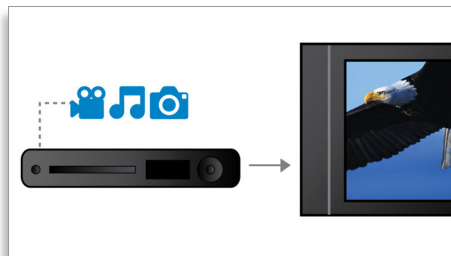

Play virtually any media format you want - whether they are WMV, DivX, MP3s or JPEGs.

Experience the unbeatable convenience of great playability and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

## Plays it all

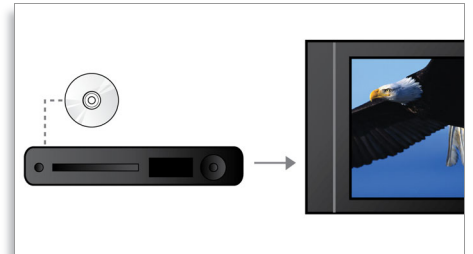

Play virtually any disc you want - whether they are CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW, DVD-RW or DVD+R DL. Experience unbeatable flexibility and the convenience of playing all your discs on the one device.

## DivX Ultra Certified



With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/RW and DVD recordable discs. DivX Ultra merges DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.



# Specifications

## Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan

## Sound

- Total Power (RMS): 1000 W
- Output power (RMS): 6 x 167 W
- D/A converter: 24-bit, 192 kHz
- Frequency response: 40-20,000 Hz
- Signal to noise ratio: >60 dB
- Sound System: DTS, Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Rock, Action, Classic, Concert, Drama, Lounge, Gaming, Sports

## Video Playback

- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2, WMV
- Playback Media: DVD-Video, CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD
- Video disc playback system: NTSC, PAL

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: DVD+R/+RW, DVD-R/-RW
- MP3 bit rates: 32-256 kbps and VBR

## Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: DVD+R/+RW, CD-R/RW, DVD-R/-RW, USB flash drive
- Picture Enhancement: Rotate, Zoom, Slideshow with music playback

## Tuner/Reception/Transmission

- Tuner Bands: FM

## Connectivity

- Front/Side connections: Microphone input 3.5 mm jack, Hi-Speed USB, MP3 Line-in
- Rear Connections: HDMI output, Component

Video output, Composite video (CVBS) output, AUX in, FM Antenna, Easy-Fit speaker connectors, Digital coaxial in, Digital optical in

## Power

- Power supply: 120/230 VAC, 50/60 Hz
- Standby power consumption: < 1 W
- Power consumption: 180 W

## Loudspeakers

- Satellite Speaker: 4 Floor standing pillars
- Satellite speaker drivers: 3" full-range woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150-20,000 Hz
- Centre speaker drivers: 3" full-range woofer
- Centre freq range: 150-20,000 Hz
- Centre speaker impedance: 4 ohm
- Subwoofer driver: 6.5" high-efficiency woofer
- Subwoofer freq range: 40-150 Hz
- Subwoofer impedance: 4 ohm
- Subwoofer type: Passive

## Accessories

- Included accessories: Remote Control, 2 x AAA Batteries, CVBS video cable, FM antenna, Power cord, Quick start guide, User Manual, World Wide Warranty leaflet

## Dimensions

- Set dimensions (W x H x D): 435 x 58 x 360 mm
- Set weight: 4.04 kg
- Surround Speaker dimensions (W x H x D): 262 x 1199 x 264 mm
- Surround Speaker Weight: 3.55 kg
- Center speaker dimensions (W x H x D): 244 x 100 x 74 mm
- Centre Speaker Weight: 0.849 kg
- Subwoofer dimensions (W x H x D): 242 x 352 x 360 mm
- Subwoofer Weight: 5.61 kg
- Packaging dimensions (W x H x D): 1030 x 307 x 425 mm
- Weight incl. Packaging: 21 kg



Issue date 2010-02-17

Version: 2.1.10

12 NC: 8670 000 48805  
EAN: 87 12581 45957 4

© 2010 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)