

Philips  
Mini Hi-Fi System

DVD

FWD14



## DVD and MP3-CD Playback

with USB Direct

Savor the magic of movies and music on the Philips DVD mini hi-fi system, with DVD and MP3-CD playback. Dolby Digital ensures a rich movie experience. Enjoy music powerfully enhanced by Dynamic Bass Boost and 800W PMPO.

### Enrich your movie experience

- Play DVD, MP3-CD, CD and CD-R/RW
- Dolby Digital for ultimate movie experience

### Enrich your sound experience

- USB Direct for MP3/WMA music playback
- Dynamic Bass Boost for deep and dramatic sound
- Autostop cassette deck
- 800W PMPO/40W RMS total power

### Easy to use

- MP3 Link for portable music playback
- Digital tuning with preset stations for extra convenience


# PHILIPS

# Highlights

## Plays DVD/CD/MP3

Play DVD, MP3-CD, CD and CD-R/RW

## Dolby Digital

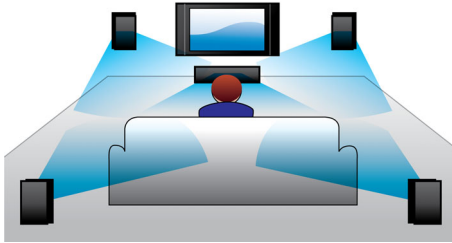

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

## Dynamic Bass Boost




Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## MP3 Link




The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

## Digital tuning with presets

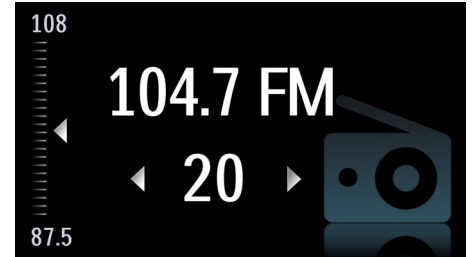

Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

## Autostop cassette deck

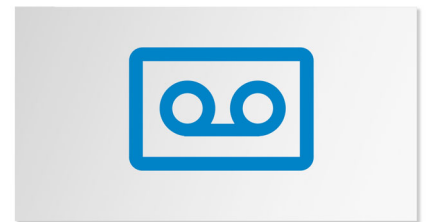

Autostop cassette deck

## 800W PMPO / 40W RMS

This system has 800W PMPO / 40W RMS total output power. RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.



# Specifications

## Sound

- Output power: 2 x 20 W RMS, 800 W PMPO
- Sound enhancement: Dynamic Bass Boost, digital sound control 4 modes, Dolby Digital

## Loudspeakers

- Number of speaker boxes: 2
- Speaker drivers: 4" woofer
- Speaker types: bass reflex speaker system

## Video Playback

- DVD region code: 3
- Playback media: DVD, DVD-R/-RW, SVCD, picture CD, DVD+RW
- Disc playback modes: disc menu, fast forward, fast backward, slow forward, slow backward, A-B Repeat, angle, Zoom, resume playback from stop, PBC
- USB Direct Playback: JPEG

## Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD
- Disc playback modes: repeat/one/all/program, repeat/shuffle/program
- Cassette deck technology: mechanical
- Number of decks: 1
- Cassette Playback Modes: electronic speed control, semi-auto stop
- USB Direct playback modes: play/pause, previous/next, program play, repeat, shuffle, stop

## Audio recording

- Recording media: tape
- Tape recording enhancement: automatic recording level, CD synchro start recording

## Tuner/Reception/Transmission

- Tuner bands: FM stereo
- Station presets: 40
- Tuner enhancement: auto digital tuning

## Connectivity

- Audio/Video output: 2xRCA (Audio), component video out, composite video (CVBS) out, digital output (cinch), microphone socket
- Aux in: 2xRCA (Audio)
- USB: USB host
- MP3 Link: 3.5mm stereo line in

## Convenience

- Number of discs: 1
- Display type: LCD display
- Loader type: motorised
- Clock: on main display, sleep timer
- On-Screen display languages: English

## Accessories

- Remote control
- Cables/Connection: composite video cable (Y), MP3 Link cable, power cord
- Others: Quick start guide, User Manual
- User Manual: English
- Warranty: World Wide Guarantee booklet

## Dimensions

- Gross weight: 7 kg
- Main speaker dimensions (W x D): 194 x 213 mm
- Main speaker height: 287 mm
- Main unit depth: 320 mm
- Packaging width: 479 mm
- Main unit height: 77 mm
- Packaging height: 375 mm
- Main unit width: 415 mm
- Packaging depth: 372 mm

## Power

- Power supply: 100 - 240V AC, 50/60Hz

## Digital photo playback

- Picture Compression Format: JPEG



Issue date 2014-02-12

Version: 1.0.2

12 NC: 8670 000 55967  
EAN: 87 12581 50330 7

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)