

Philips
Car entertainment system



CED320



Seamless music and video enjoyment on the road

Enjoy multiple source movies, music & photos on the road with the Philips CED320. The system also features anti-theft detachable front panels & Blackout for security, and anti-shock protection for smooth grooves on the go.

Enrich your AV entertainment experience

- MP3 Link for portable music playback
- Play DVD, DVD+/-R, DVD+/-RW, (S)VCD, DivX® and MPEG4 movies
- USB Direct and SDHC card slots for music and video playback

Superb performance with full features

- 3-band parametric equalizer with 8 presets
- Built-in 50W x 4 amplifiers for excellent sound quality
- Dynamic Bass Boost electronically enhances the low tones
- Super anti-shock protection for smooth music enjoyment
- 3.5" full color display for video and photo playback
- Rear-view camera mode for backing up safety
- Dual video outputs for entertainment in rear seats

Design that blends into your car

- Detachable flip-down front panel for anti-theft security
- Perfect-fit 1.0 DIN chassis design

PHILIPS
sense and simplicity

Specifications

Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size: 3.5"
- Resolution: 320(W) x 234(H) x 3(RGB)
- Brightness: 220 cd/m²
- Contrast ratio (typical): 350
- Aspect ratio: Widescreen
- Effective viewing area: 75.32 x 42.822 mm
- Pixel pitch: 0.2385(W) x 0.183(H)
- Key illumination: Blue/Red

Video Playback

- Playback Media: DVD, DVD-R/-RW, DVD+R/+RW, DVD+RW, Video CD, SVCD, DivX, Picture CD
- Disc Playback Modes: A-B Repeat, Angle, Chapter repeat, Disc Menu, Fast Backward, Fast Forward, OSD, PBC, Repeat, Resume Playback from Stop, Search forward/reverse, Still Picture, Zoom
- USB Direct Playback: JPEG, MPEG
- Video disc playback system: NTSC, PAL

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA, WMA-CD
- Compression format: Dolby Digital, MP3, WMA, WMA9
- Disc Playback Modes: Fast Forward/Backward, Introscan, Next/Previous Album Search, Next/Previous Track Search
- MP3 bit rates: 32-320kbps and variable bit rate
- ID3 Tag support: Song title, artist, album
- USB Direct / SD Modes: Play/Pause, Fast Backward/Fast Forward, Previous/Next, Repeat, Shuffle

Tuner/Reception/Transmission

- Tuner Bands: AM, FM Stereo

- No. of preset stations: 18(FM), 12(AM)
- Auto digital tuning
- Tuner Enhancements: Auto search and store

Sound

- Equalizer: 3-bands
- Equalizer settings: Classic, Jazz, Pop, Rock, Flat, Optimal, Techno, User defined
- Output power (MAX): 50Wx4 channels
- Sound Enhancement: Dynamic Bass Boost
- Output power (RMS): 24Wx4 channels (4 ohms, 10% T.H.D.)

Connectivity

- USB: USB 2.0 Host
- MP3-Link: For portable MP3 music playback
- Memory card: SD, SDHC
- Sub-woofer preamp output: With gain control
- Video Output - Analog: Composite video out
- Preamp output: 1 pair RCA(L/R)

Security/Anti-theft

- Display blackout: 10/20 sec selectable
- Front panel: Detachable & flip-down

Accessories

- Remote control: Slim remote with battery
- Quick start guide: English
- User Manual: English

Power

- Power supply: 12V DC

Dimensions

- Product dimensions (W x H x D): 188 x 58 x 193 mm
- Chassis: 1 Din



Highlights

DBB Dynamic Bass Boost



Activate the Dynamic Bass Boost (DBB), and the low-end bass frequencies are electronically enhanced to achieve consistent sound reproduction, especially when the speaker volume is set at a low level. You hear impressive bass at all times.

Detachable front panel




Detachable flip-down front panel for anti-theft security

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

USB Direct and SDHC card slots

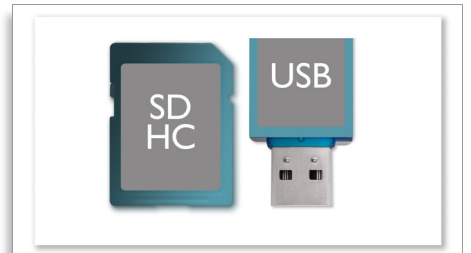

Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more music, videos and photos via the built-in USB Direct and SDHC card slots.



Issue date 2011-01-06

Version: 1.0.2

12 NC: 8670 000 56385
EAN: 87 12581 50508 0

© 2011 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com