

Philips
Mini Hi-Fi System

120W

FWM208



Obsessed with sound

Experience uninterrupted enjoyment of your CD, MP3 or WMA songs with 120W RMS output power on the Philips Mini hi-fi system. Extend your music pleasure by listening to your tunes at home from your portable USB device.

Enjoy your music from multiple sources

- Play MP3/WMA-CD, CD and CD-RW
- MP3 Link for portable music playback
- USB Direct for MP3/WMA music playback

Enrich your sound experience

- MAX Sound for instant power boost
- Digital Sound Control for optimized music style settings
- 120W RMS total output power
- 2000W PMPO/ 120W RMS total power

Easy to use

- Digital tuning with preset stations for extra convenience
- Clock, alarm and sleep timer
- Connection for TV or DVD player

PHILIPS

Highlights

MAX Sound



MAX Sound technology produces an instant boost in bass, maximizing volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.

Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Digital tuning with presets



Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

Clock, alarm and sleep timer

Clock, alarm and sleep timer

Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

Connection for TV/ DVD player


Connection for TV or DVD player

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

120W RMS

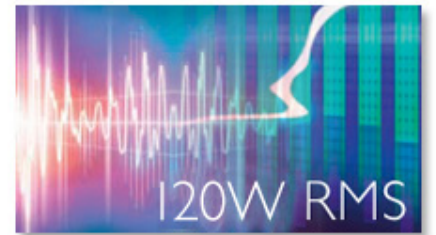

This system has 120W RMS total output power. RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.



Specifications

Sound

- Sound enhancement: Dynamic Bass Boost, digital sound control, MAX sound
- Total Sound Power (RMS): 120 W
- Output power: 4 x 30 W/ch RMS

Loudspeakers

- Number of speaker boxes: 2
- Speaker drivers: 2" tweeter, 4" woofer
- Loudspeaker enhancement: 2-way
- Speaker types: bass reflex speaker system

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc playback modes: fast forward/backward, next/previous track search, repeat/one/all/program, repeat/shuffle/program
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, program play, repeat, shuffle, stop

Tuner/Reception/Transmission

- Tuner bands: FM stereo, MW
- Station presets: 40
- Tuner enhancement: auto digital tuning

Convenience

- Alarms: CD alarm, radio alarm, USB alarm
- Number of discs: 1

- Clock: on main display, sleep timer
- Loader type: tray
- Display type: LCD display

Connectivity

- Aux in: 2xRCA (Audio)
- MP3 Link: 3.5mm stereo line in

Accessories

- Remote control
- Cables/Connection: *Flat pin adaptor, MP3 Link cable
- Others: Quick start guide
- User Manual: B-Portuguese, Spanish
- Warranty: World Wide Guarantee booklet

Dimensions

- Gross weight: 10.4 kg
- Main unit depth: 284 mm
- Main unit height: 292 mm
- Main unit width: 220 mm
- Speaker height: 310 mm
- Speaker depth: 186 mm
- Packaging width: 730 mm
- Packaging height: 348 mm
- Packaging depth: 275 mm
- Speaker weight: 207 mm

Power

- Power supply: 110 - 240 V



Issue date 2014-02-12

Version: 1.0.4

12 NC: 8670 000 51103
EAN: 87 12581 47429 4

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Avoid extensive use of the set in a volume higher than 85 decibel because this may damage your hearing.
* Adaptor supplied is needed for all Latin American countries, except in Brazil.