

Philips 3000 series
Blu-ray Disc/ DVD player

3D playback
DivX Plus HD
BD-Live



BDP3480

Explore 3D cinematic experience

With Blu-ray 3D

Bring the magic of movies home in full High Definition with Blu-ray 3D and DivX Plus HD on this sleek player. Conveniently enjoy your favorite video and music files directly from USB flash drives or portable hard disks with USB 2.0.

See more

- Blu-ray 3D Disc playback for a full HD 3D experience at home
- DivX Plus HD Certified for high definition DivX playback
- Access your favorite YouTube videos & Picasa photos easily

Hear more

- Dolby Digital DTS2.0 for ultimate movie experience
- Dolby TrueHD for high fidelity sound

Engage more

- SimplyShare to connect & stream all entertainment wirelessly
- Turn your Smartphone into a remote for Philips AV products
- USB 2.0 plays video/music from USB flash/hard disk drive

PHILIPS

Highlights

Blu-ray 3D Disc playback




Full HD 3D provides the illusion of depth for a heightened, realistic cinema viewing experience at home. Separate images for the left and right eyes are recorded in 1920 x 1080 full HD quality and alternately played on screen at a high speed. By watching these images through special glasses that are timed to open and close the left and right lenses in synchronization with the alternating images, the full-HD 3D viewing experience is created.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Dolby TrueHD

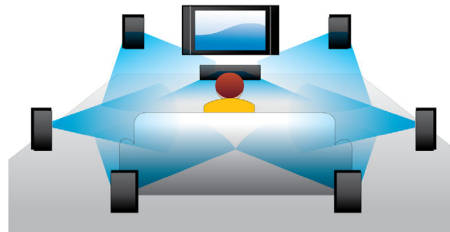

Dolby TrueHD deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD complete your high definition entertainment experience.

Dolby Digital DTS2.0

Dolby Digital DTS2.0 for ultimate movie experience

Access YouTube and Picasa



Get YouTube videos and Picasa photos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even having to turn on your computer. Simply ensure that your Blu-ray player or Home cinema system is connected to the Internet, either wirelessly over Wi-Fi or with a cable to the LAN connector - then sit back and enjoy the best of YouTube & Picasa.

MyRemote app



The Philips MyRemote app lets you use your iPhone or iPod Touch or Android Smartphone as a remote to control your Philips networked AV products. The app automatically recognizes your* Philips Blu-ray player, Home theater or Streamium audio system connected to your home Wi-Fi network, and gives you instant control over the devices from anywhere in your home. And if you have more than one Philips networked AV product, the app will allow you to switch between them and control each one independently. This free app is created exclusively by Philips.

USB 2.0

The Universal Serial Bus or USB is an industry standard that allows high-speed, easy connection of peripherals to PCs, consumer electronics and mobile products. The USB 2.0 provides better and faster performance - up to 40 times quicker than the USB 1.0 and with a data transfer rate of up to 480 Mbps from the original 12 Mbps. When plugged in, everything configures automatically. With USB 2.0, simply plug in your USB portable devices or hard disk drives, select the movie, music or photo and play away.



Specifications

Accessories

- Compatible accessories: WUB1110 Wi-Fi USB Adaptor
- Included accessories: 2 x AAA Batteries, CD-R (User Manual), Product Registration Card, Quick start guide, Remote Control, User Manual

Audio Playback

- Compression format: AAC, MP3, PCM, WAV, WMA

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- BD Region Code: B
- DVD Region Code: 2
- Compression formats: DivX Plus™ HD, H.264, MPEG1, MPEG2, MPEG4, XviD
- Disc Playback Modes: A-B Repeat, Angle, Disc Menu, Pause, Repeat, Resume Playback from Stop, Search forward/reverse, Skip, Slow Forward, Standard Play, Zoom
- Video Enhancement: Progressive Scan, Video Upscaling, Deep Color, x.v. Color

File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, m2ts, mkv, mp4, mpeg, mpg

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Connectivity

- Front Connections: USB 2.0/Wi-Fi dongle slot
- MyRemote App: SimplyShare, Virtual Remote
- Rear Connections: Composite video (CVBS) output, Digital coaxial out, Ethernet, HDMI output, Analog audio Left/Right out

Convenience

- BD-Live(1GB USB memory needed)
- Child Protection: Parental Control
- EasyLink (HDMI-CEC): 21:9 format subtitle support, One touch play, One touch standby, Remote Control-Passthrough
- Firmware upgradeable: Firmware upgradeable via USB, Online firmware upgrade
- On-Screen Display languages: Czech, Danish,

Dutch, English, Finnish, French, German, Italian, Norwegian, Polish, Portuguese, Spanish, Swedish, Turkish

Dimensions

- Product (W x H x D): 435 x 38 x 212 mm
- Product weight: 1.37 kg
- Packaging (W x H x D): 495 x 87 x 300 mm
- Weight incl. Packaging: 2.16 kg

Picture/Display

- Aspect ratio: 4:3, 16:9, 21:9
- D/A converter: 12Bit/148MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

Power

- Power consumption: 12 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: 0.25 W

Sound

- D/A converter: 24 bit, 192 kHz
- Dynamic Range (1kHz): =80 dB
- Frequency response: (20kHz) ±0.5dB (Max./Min. 2ch, DVD) Hz
- Signal to noise ratio: 80dB
- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out

Outer Carton

- EAN: 87 12581 67433 5
- Gross weight: 1,63 kg
- Outer carton (L x W x H): 41,5 x 30 x 8,7 cm
- Nett weight: 1,23 kg
- Number of consumer packagings: 1
- Tare weight: 0,40 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 41,5 x 30 x 8,7 cm
- EAN: 87 12581 67433 5
- Gross weight: 1,63 kg
- Nett weight: 1,23 kg
- Number of products included: 1
- Packaging type: Dummy
- Tare weight: 0,4 kg
- Type of shelf placement: Dummy

Product dimensions

- Product dimensions (W x H x D): 36 x 4,2 x 21,9 cm
- Weight: 1,06 kg



Issue date 2014-05-08

Version: 6.0.8

12 NC: 8670 000 99367
EAN: 87 12581 67433 5

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com