



Philips  
CD Soundmachine

CD, MP3-CD, USB, FM

Tape  
Remote Control  
12 W

AZ790

## Powerful portable sound

with 12 W RMS total output power

Enjoy digital music from your portable device in powerful sound on the Philips CD Soundmachine — any time, anywhere. Thanks to USB Direct, Bass Reflex Speakers and 12 W RMS total output power.

### Enjoy your music from multiple sources

- USB Direct for MP3/WMA music playback
- Autostop cassette deck
- Digital tuning with preset stations for extra convenience
- Audio-in for easy portable music playback
- Play MP3/WMA-CD, CD and CD-RW

### Easy to use

- Handy remote control for extra convenience
- Stereo headphone jack for better personal music enjoyment
- Sleep timer helps you to drop off to your favourite music

### Powerful sound you can hear and feel

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Dynamic Bass Boost for deep and dramatic sound
- Digital Sound Control for optimised music style settings

# PHILIPS

# Highlights

## USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

## Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorised music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

## Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a completely new dimension of deep bass.

## Handy remote control



With a handy remote control for greater convenience at your fingertips, all you have to do is sit back and relax.

## Stereo headphone jack

Connect your own headphones with this Philips device for a more personal listening experience whenever you want it. You can


enjoy your favourite music in great sound without disturbing others by connecting your headphones to this device.

## Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## Digital tuning with presets

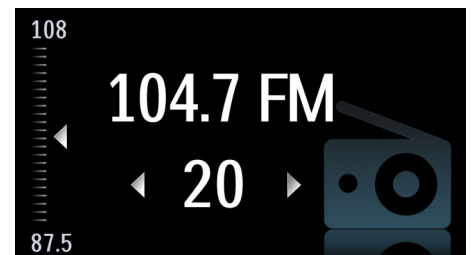

Simply tune into the station that you want to preset, then press and hold the preset button to memorise the frequency. With preset radio stations that can be stored, you can quickly access your favourite radio station without having to manually tune the frequencies each time.



# Specifications

## Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc playback modes: fast forward/reverse, next/previous track search, repeat/shuffle/programme
- Cassette deck technology: mechanical
- Number of decks: 1
- USB Direct playback modes: fast reverse/fast forward, play/pause, previous/next, programme play, repeat, shuffle, stop

## Connectivity

- USB: USB host
- Audio/Video output: Headphone (3.5 mm)
- Audio in (3.5 mm)

## Tuner/Reception/Transmission

- Antenna: FM antenna
- Tuner bands: FM
- Station presets: 20
- Tuner enhancement: auto digital tuning

## Sound

- Sound enhancement: Dynamic Bass Boost 2 steps
- Sound system: stereo
- Volume control: rotary (digital)
- Maximum output power (RMS): 12 W

## Loudspeakers

- No. of built-in speakers: 2
- Loudspeaker enhancement: 2-way bass reflex speaker
- Speaker grille finishing: metal

## Convenience

- Display type: LCD display with backlight
- Loader type: top

## Power

- Number of batteries: 6 x LR20 for main set (not included), 1x CR2025 for RC (included)
- Power type: 220–240 V

## Accessories

- Remote control
- Cables/Connection: power cord
- User Manual
- Warranty: Warranty leaflet

## Dimensions

- Product dimensions (WxDxH): 435 x 270 x 170 mm
- Packaging dimensions (WxDxH): 468 x 198 x 310 mm
- Product weight: 3 kg
- Weight incl. Packaging: 4 kg



Issue date 2016-09-29

Version: 1.0.5

12 NC: 8670 001 28218  
EAN: 48 95185 61366 6

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Avoid extensive use of the set at a volume higher than 85 decibels  
because this may damage your hearing.