



Philips
Cordless phone with
answering machine

30 min answering machine
4.6cm/ 1.8" TFT color display
Handset speakerphone

D6351W



Bold sophistication

Exquisite design meets high performance in the Philips D635 Cordless Phone, featuring a large full-color display, answering machine, privacy settings, baby monitor, and much more. HQ-Sound ensures stunning sound reproduction for clear conve

Experience true convenience

- High contrast, 4.6cm (1.8"), TFT color display
- Up to 30 minutes of messages on your answering machine
- Black list, anonymous call, silence mode, call barring
- Specific ringtone can be assigned to an identified contact
- Baby monitor alerts you when baby needs your attention
- Three-field entries for assigning 3 numbers to one contact
- Up to 18 hours of talk time on a single charge
- AOH / Caller ID – so you always know who is calling*

Exceptional sound

- HQ-Sound: high quality acoustic engineering for superb sound
- MySound profiles to match your sound preference
- Freestanding handset with a speaker for easy handsfree calls

Eco-conscious product

- Low radiation (ECO and ECO+ modes) and power consumption

PHILIPS

Cordless phone with answering machine
30 min answering machine 4.6cm/ 1.8" TFT color display, Handset speakerphone

D6351W/51

Highlights

4.6cm (1.8") TFT color display

High contrast, 4.6cm (1.8"), TFT color display

AOH / Caller ID*



Sometimes it is good to know who is calling before you answer. And our Caller ID lets you keep track of who is on the other end of the line.

Baby monitor function


Receive an alert when your baby needs you. Just place the DECT handset in the baby room and receive an alert on your base or on another DECT phone (i.e.. another landline number) or mobile phone (when you're out) when the baby starts to cry.

Eco-conscious model with ECO+



Philips phones are energy efficient and designed to be respectful to the environment. When ECO mode is activated the emitted radiation is reduced by up to 60%, and up to 95% when the phone is charging. With ECO+ mode activation the radiation drops to zero.

Extended privacy settings

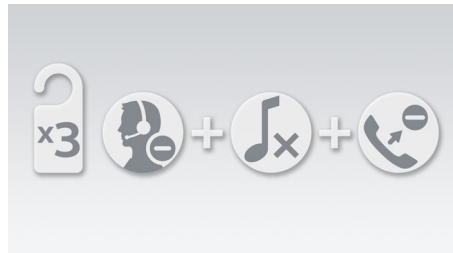


Black list restricts receiving calls from specific numbers or starting with certain digits, keeping you away from unwanted calls. You can block 4 sets of numbers. Anonymous call restricts incoming calls with hidden numbers, sometimes used by the telemarketers. The phone will also not ring such that you are not disturbed. With silence mode you can disable the ringtones for specific times to enjoy peace and silence. Thanks to Call barring you can avoid expensive phone bill surprises by blocking calls to specific numbers starting with certain digits (for example pay per call numbers).

Handset speakerphone




Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

HQ-Sound

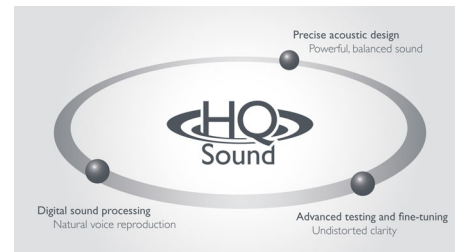

Philips cordless phones with HQ-Sound: build upon decades of experience and breakthrough innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything – high quality components, digital signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

MySound profiles

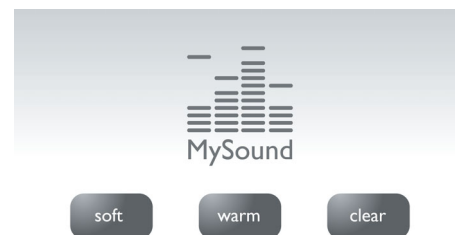

Sound perception is subjective, and everyone has their own listening preference. MySound brings personality back to every conversation by allowing you to choose the audio profile that best matches your sound preferences: Clear – to make voices sound crisper and clearer; Soft – for friendly, softer tones; Warm – to make voices sound welcoming and warm.

Specifications

Convenience

- Menu structure in the handset: Icon Menu
- Speakerphone - talk handsfree
- Personalization: Silent mode
- Call barring: Restrict the phone from making specific outgoing calls
- Signal strength indicator: 3-bar indicator
- Battery level indicator: 3-bar battery icon
- Intercom - multiple handsets
- Room monitoring
- Date / Time display
- Alarm Clock
- Event light on the handset
- Programmable hot keys: Keys 1 to 9
- Call Management: Call Waiting*, Caller ID*, Microphone mute, Missed Calls, Received Calls, Dialed calls
- Keypad lock
- Key tone on/off
- Auto Registration
- Auto hang up
- Multi handset capability: Up to 4
- Number of keys: 22
- Backlit keypad: White
- Illuminated keypad
- Enlarge dialing digit
- Base Station keys: Paging key, Volume control, Answering machine keys
- Up to 18 hrs talk time
- Up to 250 hrs standby time
- Charge time: 8 hours
- Line cord length: 1.8m
- Power cord length: 1.8m
- Range: Open field <300m; indoor <50m
- Family Notes
- Block callers/ Blacklist*: Restrict the phone from ringing on specific incoming numbers
- Event notifications: for voice message, missed call & mute on
- Non-slip grip: Ripple
- Visual ringer

Sound

- Sound Profile: MySound
- Volume control on handset
- Ringtones on handset: 10 Polyphonic / High quality ringtones
- HQ-Sound

Picture/Display

- Display size: 4.6cm / 1.8"
- Display type: TFT color 262K
- Backlight: Yes
- Backlight color: White

Answering Machine

- Recording time capacity: up to 30 minutes
- Pre-recorded OGM
- Answering machine control: from base & handset
- Loud speaker on base
- Message indication on base: LED (Soft Amber)

Memory Capacity

- VIP Caller Identification
- Phonebook: 100 names and numbers
- Redial List Capacity: 20 last numbers
- Call log entries: 50 entries
- Phonebook store in the base
- Multiple phonebook entries: up to 3 numbers

Power

- Battery capacity: 650mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240V ~50/60Hz
- Power Consumption: <0.75W

Security

- Transmission encryption : Yes

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: <0.1 W/kg

Eco Design

- EcoMode: automatic & manual
- Eco+

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 18.4 x 13.5 x 5.9 cm
- Gross weight: 0.384 kg
- Nett weight: 0.3065 kg
- Tare weight: 0.0775 kg
- EAN: 48 95185 61942 2



Issue date 2015-09-10

Version: 1.1.3

12 NC: 8670 001 33481
EAN: 48 95185 61942 2

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* *This feature requires additional subscription of Caller ID service.
Please check with your local network operator for details.