



Philips  
5.1 DVD Home theater

DVD  
Karaoke

HTD3510

## Powerful surround sound from compact speakers

### Home theater sound

Pump up your home entertainment experience with the Philips home theater. Exposed speaker drivers offering 300W powerful surround sound and DVD video upscaling to 1080p via HDMI for near-HD images.

#### **Great listening experience**

- 300W RMS power delivers great sound for movies and music
- Exposed speaker drivers for powerful surround sound
- Dolby Digital for ultimate movie experience

#### **Designed to enhance your cinema at home**

- Modern design to complement your home environment

#### **Simply enjoy all your entertainment**

- Audio in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- HDMI for high definition movies and picture quality
- Plays DVD, VCD, CD and USB devices
- DivX Ultra Certified for enhanced DivX video playback
- Karaoke for endless singing entertainment at home

# PHILIPS


# Highlights

## 300W RMS power



300W RMS power delivers great sound for movies and music

## Dolby Digital

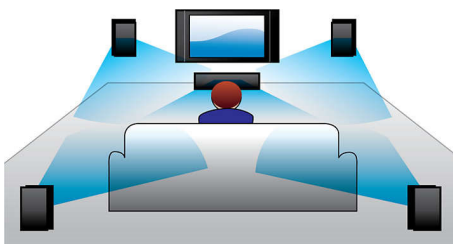

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

## Plays it all



Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

## Modern design

Modern design to complement your home environment

## Exposed speaker drivers



Exposed speaker drivers for powerful surround sound

## DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## Karaoke for endless singing



Karaoke for endless singing entertainment at home



# Specifications

## Sound

- Sound Enhancement: Night Mode
- Sound System: Dolby Digital 5.1
- Subwoofer output power: 50 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Cube speaker output power: 5 x 50 W
- Total Power RMS @ 30% THD: 300 W

## Loudspeakers

- Loudspeaker types: 5 x Cube speakers
- Cube speaker freq range: 150 - 20k Hz
- Cube speaker impedance: 4 ohm
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Passive
- Drivers per Cube speaker: 1 x 2.5" woofer
- Subwoofer impedance: 4 ohm

## Connectivity

- Front Connections: Hi-Speed USB, Microphone In, Audio in
- Rear Connections: AUX in, Composite video (CVBS) output, Digital optical in, HDMI 1.4 output (ARC), Mini Easy-Fit Speaker Jacks, Fixed FM Antenna

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

## Outer Carton

- EAN: 87 12581 67854 8
- Length: 47 cm
- Number of consumer packagings: 1
- Width: 37.7 cm
- Gross weight: 7.6 kg
- Height: 34.5 cm
- Nett weight: 6.5 kg
- Tare weight: 1.1 kg

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC)

## Power

- Power consumption: 50 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

## Packaging dimensions

- Height: 34.5 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 47 cm
- Depth: 37.7 cm
- Number of products included: 1
- EAN: 87 12581 67854 8

- Gross weight: 7.6 kg
- Nett weight: 6.5 kg
- Tare weight: 1.1 kg

## Product dimensions

- Height: 5.8 cm
- Width: 36 cm
- Depth: 33.5 cm
- Weight: 2.15 kg

## Accessories

- Compatible accessories: STS3001 Speaker stand
- Included accessories: HDMI cable, Power cord, AAA Battery (x1), Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, User Manual

## Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Main Unit Weight: 2.40 kg
- Center Speaker (W x H x D): 85 x 88 x 83 mm
- Center Speaker Weight: 0.26 kg
- Centre Speaker cable length: 1.2 m
- Front Speaker (W x H x D): 85 x 88 x 83 mm
- Subwoofer (W x H x D): 195 x 265 x 265 mm
- Front Speaker Weight: 0.26 kg
- Subwoofer Weight: 2.82 kg
- Front Speaker cable length: 2.2 m
- Rear Speaker (W x H x D): 85 x 88 x 83 mm
- Rear Speaker Weight: 0.26 kg
- Rear Speaker cable length: 7.2 m
- Subwoofer cable length: 2.2 m

## Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

## File Format

- Audio: mp3, wma
- Video: avi, divx, mpeg, mpg
- Picture: JPEG, BMP, GIF

## Picture/Display

- Picture enhancement: Video upscaling

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

## Still Picture Playback

- Picture Compression Format: BMP, GIF, JPEG, TIFF
- Picture Enhancement: Rotate, Zoom

## Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2



Issue date 2024-05-02

Version: 6.0.2

EAN: 87 12581 67854 8

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

\* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.