



Philips
Car entertainment system

- 17.8 cm (7")
- DVD
- Bluetooth

CED1700

Seaming music/video enjoyment

This Philips car audio with a 7" WVGA display for video and photo playback is the ultimate car audio video system. Enjoy movies and music from multiple sources, and never miss a call with the built-in Bluetooth receiver.

Enrich your AV entertainment experience

- USB Direct and SDHC card slots for music and video playback
- Play DVD, DVD+/-R, DVD+/-RW, (S)VCD, DivX® and MPEG4 movies
- AV-IN for portable video and music playback

Superb performance with full features

- Dynamic Bass Boost electronically enhances the low tones
- Super anti-shock protection for smooth music enjoyment
- Built-in Bluetooth receiver for call and music streaming
- 17.8 cm (7") motorized color widescreen with a touch panel
- Built-in 50W x 4 amplifiers for excellent sound quality
- Rear-view camera mode for backing up safety
- Dual video outputs for entertainment in rear seats

Design that blends into your car

- Perfect-fit 1.0 DIN chassis design
- Graphical user interface for easy navigation

PHILIPS

Specifications

Picture/Display

- Display screen type: LCD TFT
- Diagonal screen size: 7"
- Resolution: 800(W) x 480(H) x 3(RGB)
- Aspect ratio: Widescreen
- Brightness: 400 cd/m²
- Contrast ratio (typical): 400
- Effective viewing area: 157.2 x 82.32mm
- Pixel pitch: 0.1965(W) x 0.1715(H)
- Key illumination: Blue

Video Playback

- Playback Media: DVD, DVD-R/-RW, DVD+R/+RW, DVD+RW, Video CD, SVCD, Picture CD
- Disc Playback Modes: A-B Repeat, Chapter repeat, Disc Menu, Fast Backward, Fast Forward, OSD, PBC, Repeat, Resume Playback from Stop, Search forward/reverse, Slow Backward, Slow Forward, Still Picture, Zoom
- Video disc playback system: NTSC, PAL
- Compression formats: DivX 4.x, DivX 5.x, DivX 6.0, MPEG4

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA, WMA-CD, USB flash drive, SD Card
- Compression format: Dolby Digital, MP3, WMA
- Disc Playback Modes: Fast Forward/Backward, Introscan, Next/Previous Album Search, Next/Previous Track Search
- ID3 Tag support: Song title, artist, album
- MP3 bit rates: 32-320kbps and variable bit rate
- USB Direct / SD Modes: Play/Pause, Fast Backward/Fast Forward, Previous/Next, Repeat, Shuffle

Tuner/Reception/Transmission

- Tuner Bands: AM, FM Stereo
- Auto digital tuning
- Tuner Enhancements: Auto search and store
- No. of preset stations: 18(FM), 12(AM)
- RDS: Station Name, Program Type, Station

Information, News

Sound

- Equalizer: 3-bands
- Equalizer settings: Classic, Jazz, Pop, Rock, Flat, Optimal, Techno, User defined
- Sound Enhancement: Dynamic Bass Boost
- Output power (MAX): 50Wx4 channels
- Output power (RMS): 24Wx4 channels (4 ohms, 10% T.H.D.)

Connectivity

- USB: USB 2.0 Host
- Memory card: SD, SDHC
- Video Output - Analog: Composite video out
- Preamp output: 2 pairs RCA(L/R)
- Sub-woofer preamp output: With gain control
- AV input: Composite (CVBS) x1
- Bluetooth profiles: A2DP, AVRCP, Handsfree
- Bluetooth version: 2.0
- Navigation ready: Yes (Navigation box sold separately)
- Parking camera input: Yes (Switched on automatically in car reverse)

Security/Anti-theft

- Display blackout: 10/20 sec selectable

Accessories

- Remote control: Slim remote with battery
- User Manual: English, Traditional Chinese
- Quick start guide: English, Traditional Chinese

Power

- Power supply: 12V DC

Dimensions

- Product dimensions (W x H x D): 178 x 100 x 185.4 mm
- Chassis: 2 Din




Highlights

DBB Dynamic Bass Boost



Activate the Dynamic Bass Boost (DBB), and the low-end bass frequencies are electronically enhanced to achieve consistent sound reproduction, especially when the speaker volume is set at a low level. You hear impressive bass at all times.

USB Direct and SDHC card slots

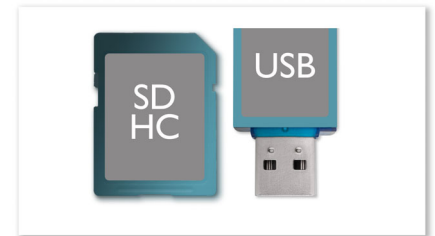

Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more music, videos and photos via the built-in USB Direct and SDHC card slots.

Built-in Bluetooth receiver



The Bluetooth hands-free feature lets you use your mobile phone safely while driving and you don't have to miss any important calls. With the built-in Bluetooth® receiver, you can also conveniently stream your music files from your phone to your car entertainment system.



Issue date 2013-05-10

Version: 1.0.1

12 NC: 8670 000 88379
EAN: 87 12581 63905 1

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com