



Philips  
5.1 Home theater

**Double Bass Sound**  
DVD



**HTS5543**

## Powerful cinematic surround sound with deep bass

### Obsessed with Sound

Bring the power of the cinema into your home! Pump up your home entertainment experience with speakers with double basspipes offering powerful 1000W surround sound and in Full HD 1080p with DVD Disc playback.

#### **Great listening experience**

- Powerful speakers with double basspipes for great sound
- Dolby Digital for ultimate movie experience
- 1000W RMS power delivers great sound for movies and music

#### **Simply enjoy all your entertainment**

- Plays DVD, VCD, CD and USB devices
- HDMI for high definition movies and picture quality
- EasyLink to control all HDMI CEC devices via a single remote

#### **Designed to enhance your cinema at home**

- Touch panel for intuitive playback and volume control
- Wireless rear speakers option for clutter free placement
- Compact design that fits anywhere

# PHILIPS


# Highlights

## Double Bass Sound



Powerful speakers with a bass-reflex system and double basspipes enhance the lower frequencies and deliver rock-solid, deep bass sounds. You'll be able to hear the lowest murmur or the deepest roar.

## Dolby Digital

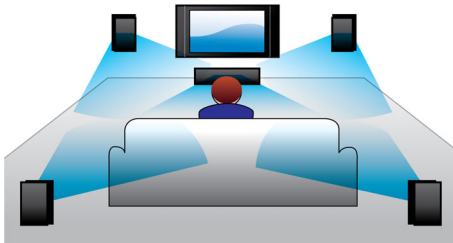

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## 1000W RMS power



1000W RMS power delivers great sound for movies and music

## Plays it all



Play virtually any disc and any media devices you want - whether they be DVDs, VCDs, CDs or USB devices. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theater system.

## HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.


## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard


protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## Touch panel for playback

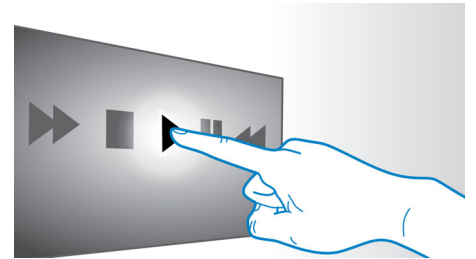


Intuitive touch panel controls allows you to control the volume as well as other playback options by simply pressing the touch sensitive controls on the front panel.

## Wireless rear speakers option

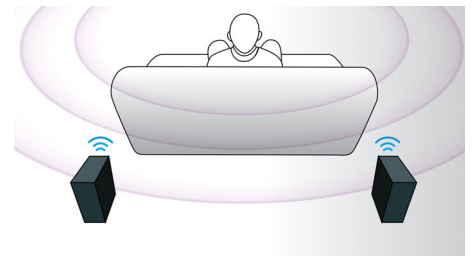

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.

## Compact design

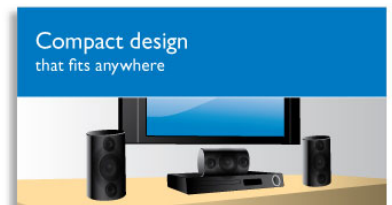

Compact design that fits anywhere



# Specifications

## Sound

- Equalizer settings: Movie, Music, Original, News, Gaming
- Sound Enhancement: Dolby Digital Prologic II, Double Bass Sound, Night Mode
- Sound System: Dolby Digital 5.1, DTS Digital Surround
- Center speaker output power: 166 W
- Satellite speaker output power: 2 x 166W
- Subwoofer output power: 166W
- Tallboy speaker output power: 2 x 166 W
- Total Power RMS @ 30% THD: 1000 W

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 2 x Satellite speakers, 2 x Tallboy speakers
- Center speaker freq range: 150-20k Hz
- Center speaker impedance: 4 ohm
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150-20k Hz
- Tallboy speaker freq range: 150-20k Hz
- Tallboy speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20-150 Hz
- Subwoofer impedance: 4 ohm
- Center speaker drivers: 1 x 3" Full range woofer
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Drivers per Tallboy speaker: 1 x 3" Full range woofer

## Connectivity

- Front Connections: Hi-Speed USB, Microphone In, Music iLINK
- Rear Connections: AUX IN 1, AUX IN 2, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital coaxial in, Digital optical in, FM Antenna Socket, HDMI 1.4 output (ARC), Wireless Rear Audio

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: Audio Return Channel (ARC)

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: mp3, wma

- Picture: JPEG
- Video: avi, divx, mpeg, mpg

## Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32 - 320kbps

## Karaoke Playback

- Standard functions: Echo level control, Mic volume control, Pitch control

## Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4

## Still Picture Playback

- Compression format: JPEG, JPEG HD
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 105 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.5W

## Dimensions

- Main Unit (W x H x D): 435 x 45 x 330 mm
- Main Unit Weight: 3.69 kg
- Center Speaker (W x H x D): 223 x 102 x 80 mm
- Center Speaker Weight: 0.57 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 90 x 187 x 82 mm
- Front Speaker Weight: 0.57 kg
- Front Speaker cable length: 4 m
- Rear Tallboy Speaker (WxHxD): 100 x 1092 x 65 mm
- Rear Speaker Weight: 0.82 kg
- Rear Speaker cable length: 10 m
- Subwoofer (W x H x D): 178 x 303 x 343 mm
- Subwoofer Weight: 3.9 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 668 x 400 x 418 mm
- Weight incl. Packaging: 17.18 kg

## Accessories

- Compatible accessories: RWSS5512 Wireless Rear module, STS3001 Speaker stand
- Included accessories: 2 x AAA Batteries, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, World Wide Warranty leaflet



Issue date 2015-08-10

Version: 4.1.4

12 NC: 8670 000 85252  
EAN: 87 12581 62699 0

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)