

Philips
MP3 Mini Hi-Fi System

FWM375



MP3-CD Playback

Impressive power and bass

For unlimited music enjoyment, the FWM375 offers a 3-CD changer and 30-hours non-stop playback. Plus, Max Sound and Dynamic Bass Boost ensure great sound!

Powerful sound you can hear and feel

- 2-Way Bass Reflex Speaker System for powerful sound
- 200W RMS total output power

Longer listening, greater enjoyment

- 3-disc changer for MP3-CD music playback
- 30 hours of MP3-CD music playback
- Stereo cassette deck
- MW / FM tuner

Personalized sound settings

- 3-step Dynamic Bass Boost for deep bass experience
- Digital Sound Control for optimized music style settings
- MAX Sound for instant power boost

PHILIPS
sense and simplicity

Highlights

3-disc changer for MP3-CD


3-disc changer for MP3-CD music playback

2-Way Bass Reflex System



2-Way Bass Reflex Speaker System for powerful sound

30 hours of MP3-CD music

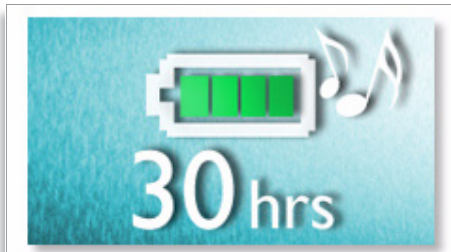

MP3 stands for "MPEG 1 Audio layer-3". MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. MP3 has become the standard audio compression format used on the world wide web, allowing quick and easy audio file transfer.

200W RMS total output power



200W RMS total output power

3-step Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from level one to level three - at the touch of a button! You can customize the bass level that fits your style. Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

MAX Sound



MAX Sound technology produces an instant boost in bass, maximizing volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.



Specifications

Sound

- Total Sound Power (RMS): 200 W
- Output power (RMS): 4X50W/ch
- Output Power: 2600W PMPO
- Sound Enhancement: MAX Sound, Dynamic Bass Boost 3 steps, Digital Sound Control 4 modes

Loudspeakers

- Number of Loudspeakers: 2
- Main Speaker: 4" woofer, 2" tweeter, 2 way, Bass Reflex Speaker System

Audio Playback

- Loader Type: 3 CD Carousel
- Number of Discs: 3
- Playback Media: CD, CD-R, CD-RW, MP3-CD
- Disc Playback Modes: Repeat/one/disk/program, Shuffle Play, 40-Track Programmable
- Number of decks: 1
- Cassette Deck Technology: Mechanical
- Cassette Playback Modes: Automatic Stop

Audio Recording

- Recording Media: Tape
- Tape Recording Enhancement: CD Synchro Start Recording

Tuner/Reception/Transmission

- Tuner Bands: MW, FM Stereo

Connectivity

- Audio Connections: RCA Aux in

- Headphone: 3.5 mm
- Microphone: Microphone socket
- Other connections: FM Antenna

Convenience

- Display Type: LCD
- Indications: DIM mode
- Karaoke: MIC volume
- Clock: On main display
- Alarms: CD Alarm, Radio Alarm, Tape alarm, Sleep timer

Accessories

- Remote control: 21-key
- User Manual: English
- Quick start guide: English
- Guarantee booklet: Global version
- Included Accessories: MW loop antenna

Dimensions

- Set dimensions (W x H x D): 265 x 310 x 380 mm
- Speaker Width: 215 mm
- Speaker Height: 349 mm
- Speaker Depth: 180 mm
- Packaging dimensions (W x H x D): 570 x 496 x 413 mm
- Weight incl. Packaging: 13.4 kg

Power

- Power supply: 200-240 V



Issue date 2009-07-17

Version: 1.1.2

12 NC: 8670 000 36882
EAN: 87 12581 39417 2

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com