



Philips  
wireless portable speaker

### Bluetooth®

Gesture control, splash proof  
Built-in microphone for calls  
8W, rechargeable battery



SB7220

## Big sound, shockingly clear

Tough it out loud and proud on the splash- and drop-proof Philips Shoqbox SB7200 speaker series. Take your music outdoors on this rugged road warrior that lets you enjoy music wirelessly - and fearlessly - in big, deep yet clear sound.

### Sound Performance

- Powered by 2 neodymium drivers
- Loud and clear sound
- Pair 2 shoqboxes into L-R speakers

### Versatility

- Bluetooth streaming
- Swipe sensor to skip songs
- Built-in mic for speaker phone
- Voice prompt for feedback

### Portability

- Drop it, splash it and just keep on using it
- Built-in lithium battery

# PHILIPS

Wireless portable speaker  
Bluetooth® Gesture control, splash proof, Built-in microphone for calls, 8W, rechargeable battery

SB7220/98

## Highlights

### Powered by 2 neodymium drivers



It is built with 2 neodymium speaker drivers and wOOx system; simply the great sound you could ever expect from a speaker that small. Big sound, shocking clarity and deep bass to allow you to enjoy the best sound performance anywhere.

### Bluetooth portable speakers

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphones, tablets or even laptops including iPod or iPhone on Bluetooth-enabled speaker easily.

### Drop and splash proof



This Philips SHOQBOX is made to withstand splash and drop, perfect for outdoor adventurers. No worries about rain or spills thanks to the splash protective design. The

rubber casing is a specialized tough material that can withstand drops and rough use. Simply drop it in your bag or hang it on your back pack. Perfect for the outdoors that requires an extra dose of ruggedness.

### Motion sensor



SHOQBOX is equipped with a motion sensor. Simply swipe over the sensor from left to right or right to left, to skip to the next or last track. Put your hand over the sensor for a second to pause the music. Do it again to put it back on. Easy gesture control allows you to control your music the simplest way.

### Built-in mic




With its built-in microphone, it also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

### Voice prompt



The voice prompt is available in different languages. It gives instant feedback on battery level or alert whether the speaker is connected properly to your device.

### Pairing 2 shoqboxes

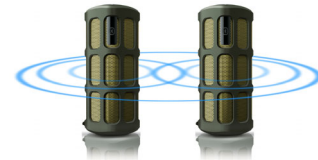

You can pair 2 SHOQBOX speakers with the smart sensor for a stereo system of Left and Right channels. Simply place the two speakers side by side and swipe your hands over both sensors from outside in simultaneously. Perfect for a party or gathering. Enjoy big stereo sound from music, movies and games.

## Wireless portable speaker

Bluetooth® Guesture control, splash proof, Built-in microphone for calls, 8W, rechargeable battery

SB7220/98

# Specifications

### Compatibility

- works with: most Bluetooth smartphones, tablets, music devices
- iPad: iPad 1, iPad 2, new iPad
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S
- iPod touch: 3rd generation or later
- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other music devices: with Bluetooth 2.1 or above

### Convenience

- Smart sensor: for skipping songs and pairing 2 Shoqboxes into L-R speaker
- Voice feedback: on battery level

### Connectivity

- Audio Connections: 3.5mm Line in
- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 10M or 30FT

### Sound

- Output power (RMS): 2 x 4W

- Sound System: Stereo
- Speakers: 2 x 1"

### Loudspeakers

- Loudspeaker enhancement: wOOx Bass Radiator
- Speaker drivers: Neodymium magnet system

### Power

- Power supply: 100-240VAC, 50/60Hz
- Battery type: lithium (built-in)
- Operating time on battery: 8 hr

### Accessories

- Included accessories: AC Power Cord, USB cable for PC charging, Warranty certificate, World Wide Warranty leaflet, Quick install guide

### Dimensions

- Product dimensions (WxDxH): 72 x 68 x 179 mm
- Packaging dimensions (WxDxH): 133 x 100 x 200 mm
- Product weight: 0.488 kg
- Weight incl. Packaging: 0.953 kg



Issue date 2014-06-18

Version: 4.0.3

12 NC: 8670 000 90072  
EAN: 87 12581 64418 5

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

- \* Drop proof is measured from approximate height of 0.8m. Drop protection varies depending on drop conditions.
- \* The body of SHOQBOX offers "splash-proof" water resistance equivalent to IEC 60529 IPX4. It is not waterproof and should never be immersed in water and should not be used in bathrooms.
- \* Battery life varies by use and settings.