

# Always there to help you

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

PD700

Question?  
Contact  
Philips



---

User manual

3

---

Mode d'emploi

19

---

# PHILIPS

# Contents

<b>1</b>	<b>Important</b>	<b>4</b>
	Important Safety Instructions	4
	Notice	7
<b>2</b>	<b>Your portable DVD player</b>	<b>9</b>
	Introduction	9
	What's in the box	9
	Overview of the main unit	10
<b>3</b>	<b>Get started</b>	<b>12</b>
	Charge the battery	12
	Connect additional equipment	13
<b>4</b>	<b>Use your player</b>	<b>14</b>
	Turn on	14
	Select OSD language	14
	Play discs	14
	Play options	14
<b>5</b>	<b>Adjust settings</b>	<b>15</b>
<b>6</b>	<b>Product information</b>	<b>16</b>
<b>7</b>	<b>Troubleshooting</b>	<b>17</b>

# 1 Important

## Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ For countries with a polarized mains, do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Caution: To prevent electric shock, match the wide blade of the plug to the wide slot, fully insert.



- ⑩ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑪ Only use attachments/accessories specified by the manufacturer.
- ⑫ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑬ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑭ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑮ **Battery usage CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, + and - as marked on the unit.
  - Do not mix batteries (old and new or carbon and alkaline, etc.).
  - Remove batteries when the unit is not used for a long time.
- ⑯ Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- ⑰ Apparatus shall not be exposed to dripping or splashing.
- ⑱ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑲ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).
- ⑳ Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



## Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

## Hearing safety

### **Listen at a moderate volume.**

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

### **To establish a safe volume level:**

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

### **Listen for reasonable periods of time:**

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

### **Be sure to observe the following guidelines when using your headphones.**

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.

- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.



### Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

---

## Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

---

## Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health. Please visit [www.recycle.philips.com](http://www.recycle.philips.com) for additional information on a recycling center in your area.



#### Caution

- Removal of the built-in battery invalidates the warranty and may destroy the product.



#### Caution

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cad, Ni-MH, and etc.) batteries.



Be responsible  
Respect copyrights

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.



Manufactured under license from Dolby Laboratories.  
“Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

**This apparatus includes this label:**



## 2 Your portable DVD player

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

---

### Introduction

Your portable DVD player plays digital video discs that conform to the universal DVD Video standard. With it, you can play movies with true cinema picture quality and stereo or multi-channel sound (depending on disc and playback set-up).

You can also select sound track, subtitle languages, and some play options. Besides, you can restrict the play of discs that are not suitable for children. You can play the following discs on the DVD player (including CD-R, CD-RW, DVD±R and DVD±RW):

- DVD-Video
- Video CD
- Audio CD
- MP3 CD
- Discs with JPEG files

---


### What's in the box


Check and identify the contents of your package:

- 1 x Portable DVD player
- 1 x AC power adaptor, ASUC12A-090080 (Philips)
- 1 x Car adaptor
- 1 x User Manual



## Overview of the main unit

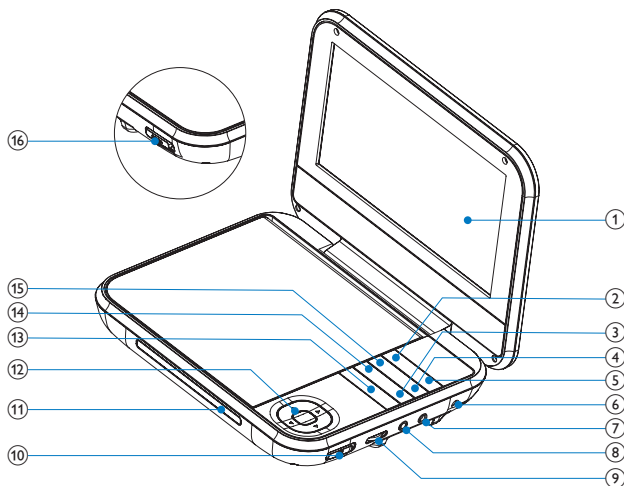

- ① **Display panel**
- ② **SETUP**
  - Accesses or exits the setup menu.
- ③ **STOP**
  - Stops disc play.
- ④ **SUBTITLE**
  - Selects DVD subtitle language.
- ⑤ **OPTIONS**
  - Accesses options relating to the current activity or selection.
- ⑥ **DC IN**
  - Power supply socket.
- ⑦  **Headphone jack.**
  - Headphone jack.
- ⑧ **AV OUT**

- Audio/video output jack.
- ⑨ **VOLUME**.....
  - Increases or decreases volume.
- ⑩ **POWER ON/OFF (CHR)**
  - Turns on/off DVD player.
- ⑪ **CHR/Ⓢ**
  - Charging indicator/Power indicator.
- ⑫ ▲, ▼, ◀, ▶
  - Navigates menus.
  - ◀, ▶
    - Searches backward/forward at different speeds.
  - ▶||/OK
    - Confirms an entry or selection.
    - Starts, pauses or resumes disc play.
- ⑬ ⏮, ⏭
  - Skips to the previous or next title, chapter, or track.
- ⑭ **DISC MENU**
  - For DVD, accesses or exits disc menu.
  - For VCD, turns on or off PBC (Playback Control) mode.
  - For VCD version 2.0 or SVCD with PBC turned on, returns to the menu.
- ⑮ **AUDIO**
  - For DVD, select an audio language.
  - For VCD, select an audio mode.
- ⑯ **OPEN▶**
  - Opens the disc compartment.

### 3 Get started



#### Caution

- Use the controls only as stated in this user manual.
- Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

### Charge the battery



#### Caution


- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the player.
- Use only the supplied AC adaptor to charge the battery.



#### Note

- The type plate is located on the bottom of the player.
- You can only charge the player when it is in power-off mode.

- 1 Slide the **POWER ON/OFF (CHR)** switch to **OFF (CHR)** position.
- 2 Connect the supplied AC adaptor to the player and to the AC outlet.

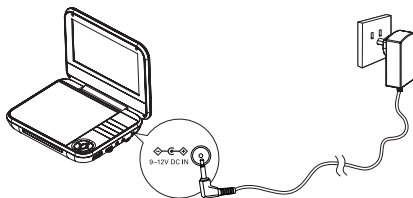

- ➡ The charge indicator turns on. It takes about 4.5 hours to fully charge the battery.
- ➡ When the battery is fully charged, the charge indicator turns off.

## Connect additional equipment




### Caution

- Turn off your player before connecting to any additional equipment.

You can connect the player to a TV or an amplifier to enjoy DVDs or Karaoke.

Match the color of the AV cables (the AV cables connected to TV are not supplied) with the jacks:

- the yellow cable is for the yellow video jack.
- the red/white cable is for the red/white audio jacks.

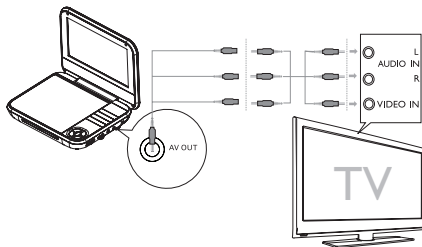

## 4 Use your player

---

### Turn on

Slide the **POWER ON/OFF (CHR)** switch to the **ON** position.

↳ The  indicator turns on.

---

### Select OSD language

You can choose a different language for the on-screen display text.

- 1 Press **SETUP**.  
↳ The setup menu appears.
  - 2 Select **[General] > [Language]**.
  - 3 Press **▶** to select an option.
  - 4 Press **▶||/OK** to confirm.
  - 5 Press **SETUP** to exit.
- 

### Play discs

- 1 Slide **OPEN▶** on the player.
  - 2 Insert the disc with label side facing up.
  - 3 Push down to close the disc compartment.  
↳ Play starts automatically. If not, press **▶||/OK**.
    - If a menu appears, select an item, then press **▶||/OK** to start play.
    - To pause, press **▶||/OK**. Press again to resume play.
    - To stop, press **STOP** twice.
    - To select the previous/next item, press **◀** or **▶**.
    - To start search within video/audio, press **◀** or **▶** once or more.
- 

### Play options

- 1 During play, press **OPTIONS** to select some play options.
- 2 Follow the on-screen instructions.

## 5 Adjust settings

To maximize your play experience, use **SETUP** to fine tune your settings.

- 1 Press **SETUP**.  
 ↳ The setup menu is displayed.
- 2 Use navigation keys to select an option and press **OK** to confirm.

<b>[General]</b>	
<b>[Language]</b>	Select on-screen display language
<b>[PBC settings]</b>	Set playback control function on/off.
<b>[Parental(DVD)]</b>	Select parental options.
<b>[Set password]</b>	Change existing password (3308 by default). not supplied.
<b>[Factory settings]</b>	Restore factory settings.
<b>[Video]</b>	
<b>[LCD Display]</b>	Set screen display aspect ratio.
<b>[TV standard]</b>	Set video output format to TV system.
<b>[Brightness]</b>	Adjust screen brightness.
<b>[Contrast]</b>	Adjust screen contrast.
<b>[ Audio]</b>	
<b>[Dolby]</b>	Set Dolby output.
<b>[Version]</b>	Check the version information.

- 3 Press ◀ to go back to the previous menu.
- 4 Press **SETUP** to exit.

## 6 Product information



### Note

- Product information is subject to change without prior notice.

Dimensions	195 x 38 x 154 mm
Weight	0.7 kg
Power supply	Input: 100-240V~ 50/60Hz Output: DC 9V--- 0.8A
Power consumption	7.2 W
Operating temperature range	0-45°C
Laser wavelength	650 nm
Video output	
Output format	PAL & NTSC
Output level	1V <sub>p</sub> - p ± 20%
Load impedance	75 Ω
Audio line out	
Audio out (analog audio)	Output level: 2V ± 10%
Load impedance	10 KΩ
Audio distortion + noise	≤ -80 (1KHz)
Frequency response	20Hz-20KHz ± 1dB
Signal/noise ratio	≥ 80 dB
Channel separation	≥ 80 dB
Dynamic range	≥ 80 dB

## 7 Troubleshooting



### Warning

- Risk of electric shock. Never remove the casing of the player.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using the player, check the following points before requesting service. If the problem remains unsolved, register your player and get support at [www.philips.com/welcome](http://www.philips.com/welcome).

### No power

- Ensure that both plugs of the mains cord are properly connected.
- Ensure that there is power at the AC outlet.
- Check if the built-in battery is drained.

### No sound

- Ensure that the AV cable is connected correctly.

### Distorted picture

- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Make sure that the video output format of the disc is compatible with the TV.
- Change the video output format to match your TV or program.
- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

### Cannot play disc

- Ensure the disc label is upwards.
- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Check if the disc is defective by trying another disc.

### The player feels warm

- When the player is in use for a long period of time, its surface will be heated. This is normal.





**Reproductor de DVD portátil****PD700/85**DC IN 9Vcc  $\approx$  0,8A

9 Wh

**Consumo de Energía Eléctrica**

9 Wh

**Consumo de Energía Eléctrica del aparato en Modo de Espera**

0,199 Wh

Modelo del adaptador: ASUC12A-090080 (AY4133)

Ent: 100-240V~50/60Hz 9Wh

Sat: 9Vcc  $\approx$  0,8A**IMPORT ADOR :** P&F MEXICANA . S.A. DE C.V.

Av. La Palma No.6, Col. San Fernando La Herradura.

Huixquilucan. Edo. Mexico. MEXICO C.P. 52787

Tel. 52 (55) 5269 - 9000

**EXPORT ADOR** P&F USA INC.**ENSAMBLADO EN:** CHINA**GARANTIA INCLUIDA EN EL****INSTRUCTIVO DE USO**

Specifications are subject to change without notice

© 2012 Koninklijke Philips Electronics N.V.

All rights reserved.

PD700\_85\_UM\_V1.2

