

Philips
DVD home theatre system



HTS6515

Be embraced by sound

with Ambisound

Featuring Ambisound, this exquisitely slim system delivers embracing 5.1 surround sound from just two speakers, in any sort of room. Also wall-mountable, it provides excellent sound and picture quality and fits stylishly into any home.

Hear

- Ambisound for 5.1 surround sound from fewer speakers
- FullSound™ to bring a CD listening experience to MP3

Live

- Sophisticated design that matches any flat TV
- Simple to set up on the wall or tabletop

See

- HDMI 1080p upscales to high definition for sharper pictures

Connect

- Hi-Speed USB 2.0 Link plays media from USB flash drives
- EasyLink for easy control of connected devices via HDMI CEC
- MP3 Link plays music from portable media players




asimpleswitch.com

PHILIPS

sense and simplicity


Highlights

Ambisound

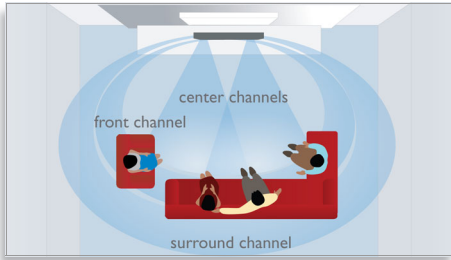

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.


Hi-Speed USB 2.0 Link

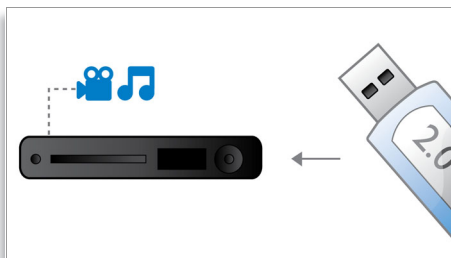

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the

12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

FullSound™

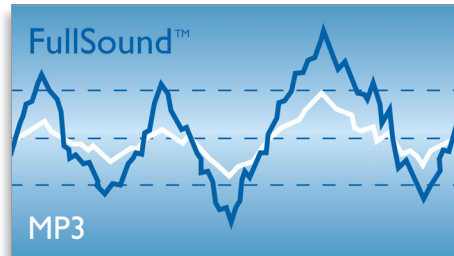

What is music without heart and soul? Philips' innovative FullSound technology faithfully restores sonic details to compressed music, dramatically enriching and enhancing it, so you experience truly immersive music — without any distortion.

HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan

(represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.



Specifications

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling, Progressive Scan

Sound

- Sound System: Ambisound, Dolby Digital, Dolby Prologic II, DTS, Stereo
- Sound Enhancement: Treble and Bass Control, Smart Surround, DoubleBass
- Equalizer settings: Action, Rock, Concert, Classic, Drama, Jazz, Gaming, Party, Sports, News

Loudspeakers

- Loudspeaker types: 2x Horizontal Speakers
- Speaker Drivers: 3 x 2.5" Full Range woofers
- Speaker Impedance: 4, 8 ohm
- Subwoofer type: Active
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer impedance: 4 ohm
- Subwoofer freq range: 30-180 Hz

Video Playback

- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: PAL, NTSC

Audio Playback

- Compression format: MP3, WMA
- Playback Media: Audio CD, CD-R/RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Picture compression format: JPEG
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive
- Picture enhancement: Slideshow with music playback, Rotate, Zoom

Tuner/reception/transmission

- Tuner Bands: FM
- RDS: Station Name

Connectivity

- Front/Side connections: USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, SCART1 (CVBS, RGB out), TV in (audio, cinch), Interconnect (to Power Box)
- Subwoofer (Power Box): Coaxial Digital input, AUX In (cinch, 2 pairs), FM Antenna, Easy Fit Speaker connectors, Interconnect (to Main Unit)

Dimensions

- Set dimensions with stand (W x H x D): 419 x 48 x 214 mm
- Set weight (with stand): 1.7 kg
- Speaker width (with stand): 336 mm
- Speaker height (with stand): 115 mm
- Speaker depth (with stand): 130 mm
- Speaker weight (with stand): 1.72 kg
- Subwoofer dimensions (W x H x D): 295 x 443 x 295 mm
- Subwoofer Weight: 9.5 kg
- Packaging dimensions (W x H x D): 496 x 355 x 595 mm
- Weight incl. Packaging: 20 kg

Accessories

- Included Accessories: Quick start guide, User manual, Remote Control, Batteries for remote control, Full SCART cable, Component Video cable, Audio Cable, FM antenna, Interconnect cable, Speaker Cables, Power cord, Wall mounting bracket, World Wide Warranty leaflet

Electricity

- Power supply: 220-240 V, 50 Hz
- Standby power consumption: <0.3 W



Issue date 2009-05-14

Version: 3.0.6

12 NC: 8670 000 36261
EAN: 87 12581 38885 0

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com