

Philips
DVD player



DVP3868G



Enjoy it all - from DVD or USB

with wireless game pad and 30 games

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Play all your movies and music

- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG
- DivX Ultra Certified for enhanced DivX video playback

Game-ready for extra fun

- Games CD provided for instant fun
- Wireless game pad for hassle-free fun

Bring audio and video to life

- 5.1 channel audio output for surround sound
- Progressive Scan component video for optimized image quality
- 12-bit/108MHz video processing for sharp and natural images

Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

Easy to use

- One-touch MP3 creation directly from CDs onto USB sticks

PHILIPS

Highlights

Multimedia DivX

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

5.1 channel audio output

5.1 channel audio output for surround sound

Wireless game pad

Unlike other game consoles that use cables, this player comes with an infrared, wireless game console to free you up and let you enjoy hours of hassle-free fun.

Games CD

This player comes pre-packed with a bonus games CD for extra fun. Just put a game CD in the disk drive and start having added enjoyment on the go.


DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player.


DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

USB Media Link

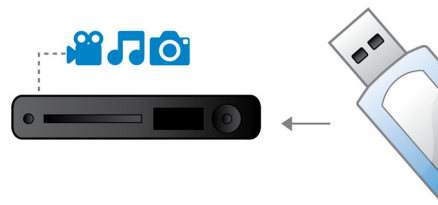

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Progressive Scan

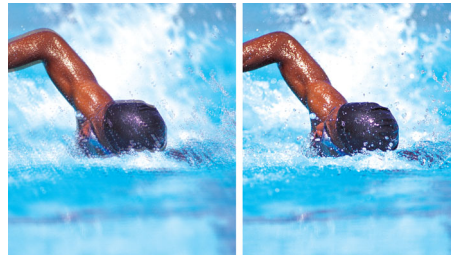

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum

resolution. At such a speed, your eye perceives a sharper picture with no line structure.

One-touch MP3 creation

Convert the contents of your favorite CDs to MP3 files on your Philips product, and store it directly on a thumbdrive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC, and even while the CD is playing.

12-bit/108MHz video processing



12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.



Specifications

Product dimensions

- Product dimensions (W x H x D): 31 x 4,05 x 22,6 cm
- Weight: 1,05 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 36 x 28,2 x 8 cm
- Nett weight: 1,2 kg
- Gross weight: 1,55 kg
- Tare weight: 0,35 kg
- EAN: 87 12581 57781 0
- Number of products included: 1
- Packaging type: Dummy
- Type of shelf placement: Dummy

Outer Carton

- Outer carton (L x W x H): 36 x 28,2 x 8 cm
- Nett weight: 1,2 kg
- Gross weight: 1,55 kg
- Tare weight: 0,35 kg
- EAN: 87 12581 57781 0
- Number of consumer packagings: 1

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upscaling, Video Upscaling(720p, 1080i/p), High Def (720p, 1080i, 1080p)

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 90
- Distortion and Noise (1kHz): 80 dB
- Crosstalk (1kHz): 90 dB
- Dynamic Range (1kHz): 80 dB
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD+R/+RW, DVD-R/-RW, DVD-Video, DivX
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra
- Video disc playback system: PAL

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps
- Compression format: MP3, Dolby Digital, PCM, WMA

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Rotate, Zoom, Slideshow, Flip photos, High Definition Resolution, Slideshow with MP3 playback

Connectivity

- Rear Connections: Analog audio Left/Right out, ComponentVideo out Progressive, Digital coaxial out, Analog audio Multi-channel out, Composite video (CVBS) output
- Front / Side connections: USB

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Hindi

Power

- Power consumption: < 10 W
- Power supply: 230V, 50Hz
- Standby power consumption: < 0.5 W

Accessories

- Included accessories: Remote Control, User Manual, Warranty Leaflet, Audio/Video cable, AAA Battery (x1)

Dimensions

- Packaging dimensions (W x H x D): 400 x 80 x 282 mm
- Set dimensions (W x H x D): 360 x 39 x 209 mm

Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3, DivX
- Multimedia connections: USB memory class device



Issue date 2015-03-24

Version: 3.2.6

12 NC: 8670 000 70559
EAN: 87 12581 57781 0

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com