Always there to help you

Register your product and get support at www.philips.com/support

PET741M



User manual	1	Mode d'emploi	45
Manual del usuario	21		

PHILIPS

Contents

1	Safety and notice Safety	3
	Compliance	6
	Care of the environment	7
	Copyright	8
2	Your portable DVD player	8
	What's in the box	8
	Overview of the main unit	9
3	Get started	11
	Connect power	11
	Turn on	13
	Select OSD language	13
4	Play discs	14
	Play options	14
	Connect additional equipment	16
5	Adjust settings	17
6	Product information	18
7	Troubleshooting	19

Register online at www.philips.com/welcome today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out.

Register online at www.philips.com/welcome to ensure:

*Product Safety Notification

By registering your product, you'll receive notification - directly from the manufacturer.

*Additional Benefits

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special moneysaving offers.

PHILIPS

Congratulations on your purchase, and welcome to the "family!"

Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties in the industry, What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

Most importantly, you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome - and thanks for investing in a PHILIPS product.

P.S. To get the most from your PHILIPS purchase, be sure to register online at:

www.philips.com/welcome

Know these

safetysymbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

For	Customer	مءا ا

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No	
Serial No.	

PHILIPS

Visit our World Wide Web Site at http://www.philips.com/welcome

1 Safety and notice

Read and understand all instructions before you use this product. If damage is caused by failure to follow the instructions, the warranty does not apply.

Safety



This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering.



The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. WARNING: To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device.

CAUTION:To prevent electric shock, fully insert the plug. (For regions with polarized plugs:To prevent electric shock, match wide blade to wide slot.)

Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- (3) Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.

- O not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ① Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- (1) Only use attachments/accessories specified by the manufacturer.
- (2) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- (3) Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- (5) Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and as marked on the unit.
 - · Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
 - · Remove batteries when the unit is not used for a long time.

 The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



- Perchlorate Material special handling may apply. See www.dtsc.ca.gov/ hazardouswaste/perchlorate.
- Apparatus shall not be exposed to dripping or splashing.
- ① Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- (18) This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can
 produce sounds in decibel ranges that may cause hearing loss for a normal
 person, even for exposure less than a minute. The higher decibel ranges are
 offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- · Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

 Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss. • Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Compliance

Notice for the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The set complies with the FCC-Rules, Part-15 and with 21 CFR 1040.10.

Operation is subject to the following two conditions:

- · This device may not cause harmful interference, and
- This device must accept any interference received, including interference that
 may cause undesired operation.

Canada:

CAN ICES-3(B)/NMB-3(B)

This apparatus includes this label:





Note

The type plate is located on the bottom of the product.

Any changes or modifications made to this product that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Care of the environment

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, and old equipment.

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or visit www.recycle.philips.com. This product contains non-removable batteries:

- Do not incinerate. Batteries may explode if overheated.
- For disposal or recycling information, please contact your local authorities or visit www.recycle.philips.com.



· Removal of the built-in battery invalidates the warranty and can destroy the product.

Copyright



This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

2 Your portable DVD player

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome. You can play the following discs on the DVD player (including CD-R, CD-RW, DVD±R and DVD±RW):

- DVD-Video
- Video CD
- Audio CD
- MP3 CD
- Discs with JPEG files


What's in the box

Check and identify the contents of your package:

Portable DVD player


- AC power adaptor, ASUC12A-090080 (Philips) & DSA-9PFB-09 FUS 090080 (DVE)
- Car adaptor
- User Manual

Overview of the main unit




OPEN ►

· Opens the disc compartment.



- (2) POWER ON/OFF
 - Turns on/off DVD player.
- (3) VOLUME
 - Increases or decreases volume.
- (4) AV OUT
 - Audio/video output jack
- (5)
 - Headphone jack
- (6) DC IN
 - Power supply socket

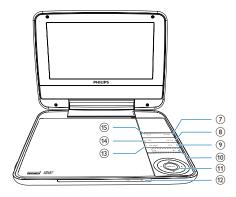

- (7) OPTIONS
 - Accesses options relating to the current activity or selection.
- 8 SUBTITLE
 - For DVD, selects a subtitle language.
- 9 STOP
 - Stops disc play.
- (10) I◀, ►I
 - Skips to the previous or next title, chapter, or track.
- (1) ▲, ▼, ◄, ▶
 - Navigates menus.
 - **⋖,** ▶
 - Searches backward/forward at different speeds.
 - ►II/OK
 - · Confirms an entry or selection.
 - Starts, pauses or resumes disc play.
- (12) CHR/ (1)
 - · Charging indicator/Power indicator
- (13) DISC MENU
 - For DVD, accesses or exits disc menu.
 - For VCD, turns on or off PBC (Playback Control) mode.
 - For VCD version 2.0 or SVCD with PBC turned on, returns to the menu.

- (14) AUDIO
 - For DVD, selects an audio language.
 - For VCD, selects an audio mode.
- (15) SETUP
 - · Accesses or exits the setup menu.

3 Get started



Caution

- · Use the controls only as stated in this user manual.
- · Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:

Model No. ______ Serial No.


Connect power

Charge the battery



Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed
 on the bottom of the player.
- · Use only the supplied adaptors to charge the battery.
- 1 Slide the **POWER ON/OFF** switch to **OFF** position.
- 2 Connect the supplied AC adaptor to the player and to the AC outlet.

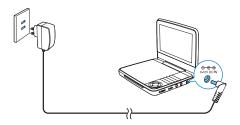

- The charge indicator turns on. It takes about 4.5 hours to fully charge the battery.
- When the battery is fully charged, the charge indicator turns off.




Note

- · You can only charge the player when it is powered off.
- . To maximize battery life, recharge the battery immediately once the battery is fully discharged. If you do not use the player for a long time, recharge the battery once every two months.

Charge through car adaptor

Connect the supplied car adaptor to the player and car cigarette lighter.



EN

Turn on

- To switch on, slide the **POWER ON/OFF** to the **ON** position.
 - → The power indicator turns on.




- To switch off, slide the **POWER ON/OFF** to the **OFF** position.
 - → The power indicator turns off.

Select OSD language

You can select a different language for the onscreen display text.

- 1 Press SETUP.
 - → The setup menu is displayed.



- 2 Select [-- General Setup Page --] > [OSD Language].
- 3 Press ▶ and ▲ / ▼ to select a language.
- 4 Press ►III/OK to confirm
- 5 Press SETUP to exit.

Play discs

- Slide **OPEN** ▶ on the player.
- Insert the disc with label side facing up.
- Push down to close the disc compartment.
 - Play starts automatically. If not, press ► III /OK.
 - If a menu appears, select an item, then press **II**/OK to start play.
 - To pause, press > II /OK. Press again to resume play.
 - To stop, press **STOP** twice.
 - To select the previous/next item, press ■ or ■.
 - To start search within video/audio, press ◀ or ▶ once or more.

Play options

Select a subtitle language

You can select a subtitle languages on DVDs.

- 1 Press OPTIONS
 - → The option menu is displayed.
- Select [Subtitle].
- Press ◀ / ▶ to select a subtitle.
- Press III /OK to confirm

Select an audio language

You can select an audio language on DVDs or DivX discs.

- 1 Press OPTIONS.
 - → The option menu is displayed.
- Select [Audio].
- Press ◀ / ▶ to select a language.
- Press II/OK to confirm.

EN

Repeat

During play, you can select different repeat options.

- 1 Press OPTIONS.
 - → The option menu is displayed.
- 2 Select [Repeat], then press navigation keys to select a repeat option. For DVD
 - [Repeat Off]: switch off the repeat mode
 - Chapter]: repeat the current chapter

 - (All]: repeat all titles on the disc

For VCD/MP3/CD/DivX

- [Repeat Off]: switch off the repeat mode
- **⇔** [All]: repeat all the tracks
- 3 Select an option, then press ► II /OK to confirm.
- 4 Press **OPTIONS** to exit.



Tip

You cannot repeat items when PBC is on during VCD/SVCD play.

Display play time

- 1 During play, press **OPTIONS**.
 - → The option menu is displayed.
- 2 Select [Time Disp.], then press ◀/▶ to select a display option.
 - igspace The display options are different depending on the disc type.

Option	Action
[Title Elapsed] / [Chapter Elapsed]	Displays DVD title or chapter elapsed play time.
[Title Remain] / [Chapter Remain]	Displays DVD title or chapter remaining play time.

Option	Action
[Total Elapsed] / [Single Elapsed]	Displays VCD/SVCD disc or track elapsed play time.
[Total Remain] / [Single Remain]	Displays VCD/SVCD disc or track remaining play time.

3 Select an option, then press ► II /OK.

Select an audio mode

When you play VCDs, you can select an audio mode.

- 1 Press OPTIONS.
 - → The option menu is displayed.
- 2 Select [Audio].
- 3 Press ◀/▶ to select audio channel: [Stereo], [Mono Left] or [Mono Right].

Rotate pictures

For IPEG CDs only. While the IPEG is displayed:

- Press ▲ to flip up/down.
- Press ▼ to flip left/right.

Connect additional equipment

You can connect the player to a TV or an amplifier to enjoy DVDs.

Connect to TV




Caution

· Turn off your player before connecting to any additional equipment.

Match the color of the AV cables (the AV cable is not supplied) with the jacks:

- · the yellow cable is for the yellow video jack,
- the red or white cable is for the red or white audio jacks.

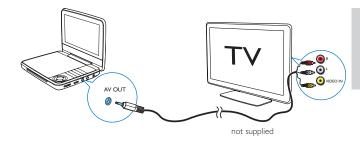

5 Adjust settings

To maximize your play experience, use **SETUP** to fine tune your settings.

- 1 Press SETUP.
 - → The setup menu is displayed.
- 2 Press ▲ ▼ to select an option and press ▶ III /OK to confirm.

[General Setup Page]	
[OSD Language]	Select on-screen display language.
[Screen Saver]	Activate/deactivate screen saver.
[Resume]	Select whether to start play from the point where it was last stopped.
[Angle Mark]	select angle mark display options.
[Display Setup Page]	
[Brightness]	Adjust screen brightness.
[Contrast]	Adjust screen contrast.
[TV Display]	Select display ratio.
[Password Setup Page]	
[Password]	Change password (3308 by default).
[Preference Page]	
[Audio]	Select audio language.
<u> </u>	Select audio language.

[Subtitle]	Select subtitle language.
[Disc Menu]	Select disc menu language.
[Parental]	Select parental level.
[Default]	Restore original settings.

Press ◀ to go back to previous menu level.

Press **SETUP** to exit.

6 Product information



Note

• Product information is subject to change without prior notice.

Dimensions	195 x 154 x 38 mm
Weight	0.7 kg
Power supply	Input: 100-240V 50/60Hz 0.3A Output: DC 9V 0.8A
Power consumption	9 W
Operating temperature range	0-45°C
Laser wavelength	650 nm
Video system	NTSC
Frequency response	20Hz-20KHz ± 1dB
Signal/noise ratio	≥ 80 dB
Audio distortion + noise	≤ -80 (1KHz)
Channel separation	≥ 80 dB
Dynamic range	≥ 80 dB
Audio out (analog audio)	Output level: 2V ± 10%
Load impedance	10 Κ Ω
Video out	Output level: 1Vp - p ± 20%
Load impedance	75 Ω

7 Troubleshooting



Risk of electric shock. Never remove the casing of the player.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using the player, check the following points before requesting service. If the problem remains unsolved, register your player and get support at www.philips.com/welcome.

No power

- Ensure that both plugs of the mains cord are properly connected.
- Ensure that there is power at the car cigarette lighter or AC outlet.

No sound

Ensure that the AV cable is connected correctly.

Distorted picture

- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Make sure that the video output format of the disc is compatible with the TV.
- Change the video output format to match your TV or program.
- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points(red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

Cannot play disc

- Ensure the disc label is upwards.
- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center;
- Check if the disc is defective by trying another disc.

The player feels warm

When the player is in use for a long period of time, its surface will be heated.
 This is normal.

PHILIPS LIMITED WARRANTY ONE (1) YEAR

WARRANTY COVERAGE:

PHILIPS warranty obligation is limited to the terms set forth

WHO IS COVERED:

Philips warrants the product to the original purchaser or the person receiving the product as a gift against defects in materials on workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

WHAT IS COVERED:

The Philips warranty cowers new products if a defect in material or workmanship occurs and a valid claim is received by Philips within the Warranty Period. At its option, Philips will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in Philips current inventory, or (3) refund the original purchase price of the product.

Philips warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Philips' property. When a refund is oliven, your product becomes Philips' property.

Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:

This Limited Warranty applies only to the new products manufactured by or for Philips that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any non-Philips hardware product or any software, even if packaged or sold with the product. Non-Philips manufacturers, suppliers, or publishers may provide a separate warranty for their own products backaged with the bundled product.

Philips is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or any non-Philips product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-Philips product, (b) to damage caused by service performed by anyone other than Philips or Philips Authorized Service Location, (c) to a product or a part that has been modified without the written permission of

Philips, or (d) if any Philips serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished Philips product sold "AS IS" by some retailers.

This Limited Warranty does not cover:

- · Shipping charges to return defective product to Philips.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna/signal source systems outside of the product.
- Product repair and/or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from velving fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of Philips.
- Damage or claims for products not being available for use, or for lost data or lost software.
- for lost data or lost software.
 Damage from mishandled shipments or transit accidents when
- returning product to Philips.

 A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or
- repair of products damaged by these modifications.

 A product used for commercial or institutional purposes
- (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- · Failure to operate per Owner's Manual.

TO OBTAIN ASSISTANCE IN THE U.S.A., CANADA, PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at: 1-866-309-0845

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL LOWARGES FOR BEACH OF
ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE
LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR
FITNESS FOR A PRATICULAR PURPOSE ON THIS PRODUCT
IS LIMITED IN DURATION TO THE DURATION OF THIS
WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.



Reproductor de DVD portátil

PFT741M/37

9 Wh

9 Wh

DC IN 9Vcc === 0.8A Consumo de Energía Eléctrica 0.2 Wh

Consumo de Energía Eléctrica del aparato en Modo de Espera

Modelo del adaptador: ASUC12A-090080 Ent: 100-240V~50/60Hz 0.3A

Sal: 9Vcc === 0.8A

IMPORTADOR: Ingram Micro México, S.A. de C.V.

Laguna de Términos No. 249 Col. Anáhuac

C.P. 11320 México, D.F. México

HECHO EN: CHINA GARANTIA INCLUIDA EN EL INSTRUCTIVO DE USO



Specifications are subject to change without notice © 2015 Koninklijke Philips N.V. All rights reserved. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

