



Philips  
CD Soundmachine

Silver

AZ102S

## Enjoy music wherever you go

You take pleasure in the simple things in life and delight in convenience. The compact and portable Philips CD soundmachine lets you indulge in the pleasures of enjoying your favorite music with the help of easy-to-use functions.

### Easy to use

- CD Shuffle/Repeat for personalized music enjoyment
- Line-in connection for your portable music playback

### Enjoy your music from multiple sources

- Play CD, CD-R and CD-RW
- FM/MW tuner for radio enjoyment

### Rich and clear sound

- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS


# Highlights

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## CD Shuffle/Repeat

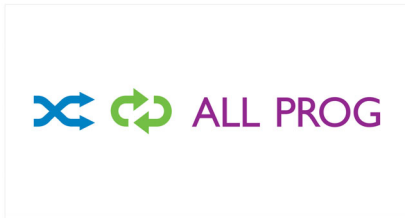

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.




## Play CD, CD-R and CD-RW



Philips is known for making products which are compatible with many discs available in the market. This audio system lets you enjoy music from CD, CD-R and CD-RW. A single CD can store up to 10 hours of music. CD-RW (CD-Rewritable Compatible) means that your audio system can play both CD-Recordable (CD-R) and CD-Rewritable (CD-RW) discs. CD-R discs are recordable once and can be played on any audio CD player while CD-RW discs can be recorded and rewritten multiple times and can only be played back on compatible audio CD players.

## FM/MW tuner

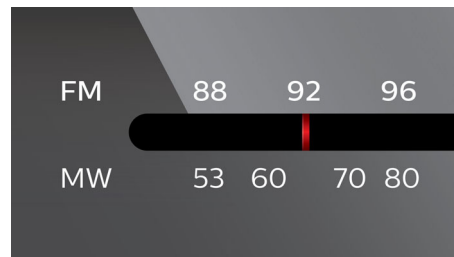

FM/MW (AM) stereo tuner

## Line-in connection

MP3 line-in connectivity allows direct playback of MP3 content via your audio system. By simply connecting your portable MP3 player to the audio system via its built-in line-in jack, you can enjoy superb sound quality while playing your favorite music from your portable MP3 player.

# Specifications

## Audio playback

- Playback media: CD, CD-R, CD-RW
- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program

## Tuner/Reception/Transmission

- Tuner bands: FM, MW
- Antenna: FM antenna

## Sound

- Sound enhancement: Dynamic Bass Boost
- Sound system: stereo
- Volume control: rotary (analogue)
- Output power: 2 x 1 W RMS

## Loudspeakers

- No. of built-in speakers: 2
- Speaker grille finishing: metal

## Connectivity

- MP3 Link: 3.5mm stereo line in

## Power

- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Number of batteries: 6
- Power type: AC Input

## Accessories

- Cables/Connection: power cord
- Others: User Manual
- Warranty: Warranty Certificate

## Convenience

- Loader type: top

## Dimensions

- Gross weight: 2.1 kg
- Packaging depth: 264 mm
- Packaging height: 155 mm
- Packaging width: 284 mm
- Weight: 1.7 kg
- Main unit depth: 245 mm
- Main unit height: 123 mm
- Main unit width: 262 mm



Issue date 2015-01-22

Version: 1.0.12

12 NC: 8670 000 37846  
EAN: 87 12581 40254 9

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)