

5.播放/暂停 ▶||

▶|| = x1

7.通话

☎ = x1

☎ = 长按

☎ = x1

⌚ : 01

9.耳机充电提示

耳机放入充电盒时，耳机白灯长亮表示耳机和充电盒接触良好并在充电中。

10.充电盒电量提示

当耳机放入充电盒时，此灯会显示充电盒电量:

01. 红色灯亮5秒熄灭 < 25%
02. 蓝色灯闪一次熄灭 25%-50%
03. 蓝色灯闪二次熄灭 50%-75%
04. 蓝色灯闪三次熄灭 75%-90%
05. 蓝色灯闪四次熄灭 90%-100%

6.上一曲/下一曲 ◀◀/▶▶

◀◀ = 长按

▶▶ = 长按

⌚ : 02

8.语音助手

☎ = x2 = 唤醒语音助手

PHILIPS

1000 系列

TAT1285

快速指南

1.充电盒充电 ⌚2小时 ⚡

☎ = ⚡ = 充电盒充电时 蓝色LED灯闪烁

☎ = ⚡ = 充电盒充满电时 蓝色LED灯常亮

☎ = ⚡ = 拔掉USB充电线 蓝色LED灯熄灭

3.开/关机 ⏻/⏿

将耳机从充电盒中取出将自动开机

将耳机放入充电盒中将自动关机

2.耳机充电 ⌚2小时 ⚡

☎ = ⚡ = 耳机充电时 白色LED灯灭

4.配对 📶

蓝灯慢闪

白蓝灯交替闪烁

打开手机蓝牙设置 选择 "Philips TAT1285"

Welcome to Philips!

For an optimal experience register your product at: www.philips.com/welcome


Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips NV, and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

LEA CUIDADOSAMENTE ESTE INSTRUMENTO ANTES DE USAR SU APARATO

飞生(上海)电子科技有限公司 上海市闵行区东川路555号乙楼5060A室 邮编: 201100 热线: 4009-555-666 传真: 021-80217400

TAT1285

*在以下网站上注册产品并获得支持: www.philips.com/support

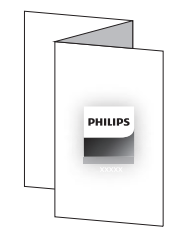

快速安装指南

展开尺寸: 295*130mm
成型尺寸: 74*130mm

60G书写纸 双面1C 无表面处理 3折 风琴折