




Philips  
True Wireless  
Headphones

### Natural sound

Noise Canceling  
Clearer calls on the go  
Bluetooth LE Audio

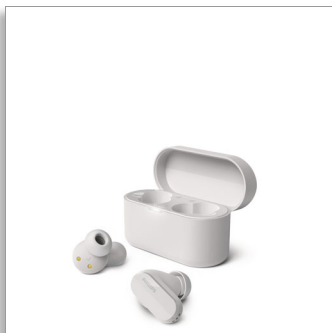

TAT3508WT

## Music to calls, flow through your day

Always be working it! These true wireless noise-canceling earbuds sound great, and they reduce wind noise. You can immerse in your tunes and enjoy clear calls on the go. Slip the charging case into your pocket and you're set for the day.

### Great sound

- Warm, natural sound. Philips sound signature
- Always hear your music. Noise Canceling
- Clearer calls on the go. They'll hear you, not the noise
- Better connectivity and sound. Next-generation Bluetooth\*

### Comfortable and convenient

- Secure, comfortable in-ear fit
- IPX4 splash and sweat resistant
- Multipoint connection and touch controls
- Philips Headphones app. Control noise canceling and more

### Ready for you

- Always ready. Pocket-sized charging case and mono mode
- No worries. Up to 21 hours play time with the case
- Quick charge for 15 minutes and get an extra hour
- Charging case dimensions: 35x62x28 mm

# PHILIPS

# Highlights

## Noise Canceling



Noise canceling quietens external noise, including wind, so you can focus on your tunes or calls. Leave it on auto or use the Philips Headphones app to adjust. Want to hear more of what's going on around you? Tap an earbud to activate Awareness Mode.

## Clearer calls on the go



When you're on a call, a dedicated mic picks up the sound of your voice while an AI algorithm removes background noise from the world around you. The person you're speaking to will hear you, not the traffic or the chatter of people standing next to you!

## Next-generation Bluetooth



These earbuds will work with devices that support Bluetooth LE Audio and the LC3 codec to give you a steadier connection and noticeably better sound. The sound won't dip if you're streaming music or taking calls in built-up areas, and there's virtually no lag if watching movies or gaming.\*

## Philips sound signature

Music to podcasts, love what you hear! These true wireless earbuds feature large 10 mm drivers, tuned to the Philips sound signature. Whatever you're into, you'll enjoy a warm, natural sound with deep bass.

## Pocket-sized charging case

Head out with the small charging case in your pocket and your earbuds will always be ready for you. They'll stay protected and charging when you're not using them, and mono mode means you can use either earbud while the other one charges.

## Multipoint and touch controls

Touch controls on the earbud stalks keep things simple and multipoint lets you connect

to two Bluetooth devices (iOS or Android) at the same time. Google Fast Pair lets you pair to a compatible Android device with a single tap.

## IPX4 splash/sweat resistant

Never mind the weather, an IPX4 rating means these earbuds are splash resistant so they don't mind a little rain! Wearing them during a quick workout or on a particularly hot day? They won't mind a little sweat either.

## 21 hours play time with case

You get 7 hours play time from a full charge, and an extra 14 hours from the case. Pop the earbuds back in the case and they'll recharge fully in 2 hours. If you need a quick boost, just 15 minutes gives you an extra hour. The case can be charged via USB-C.

## Philips Headphones app

You can use the Philips Headphones app to customize noise canceling, turn auto wind noise reduction off, and adjust the level of transparency when using Awareness Mode. An equalizer lets you fine-tune your sounds, and you can keep your headphone's software up to date via the app too.

## Secure, comfortable in-ear fit

You get real comfort thanks to soft, interchangeable silicone ear-tip covers. The ear tips insert securely into your ear canal, creating a perfect seal that helps diminish external noise. Plus, the stalks make these earbuds easy to insert and remove.

# Specifications

## Sound

- Impedance: 32 Ohm
- Speaker diameter: 10 mm
- Sensitivity: 95 dB (1k Hz)
- Frequency range: 20 - 20,000 Hz
- Maximum power input: 5 mW
- Driver type: Dynamic

## ANC features

- ANC (Active Noise Canceling)
- ANC technology: Hybrid
- Awareness mode
- Auto wind noise cancelation

## Telecommunication

- Wind noise reduction
- Microphone for call: an AI mic

## Connectivity

- Bluetooth version: 5.3
- Supported codec: SBC, LC3
- Maximum range: Up to 10 m
- Bluetooth profiles: A2DP, AVRCP, HFP, TMAP
- Type of wireless transmission: Bluetooth
- Multipoint connection
- Wireless

## Convenience

- Google fast pair
- Philips Headphones app support
- Firmware updates possible
- Water resistance: IPX4
- Mono mode for TWS
- Type of controls: Touch

## Design

- Color: White
- Ear coupling material: Silicone
- Ear fitting: In-ear
- In-ear fitting type: Silicone ear tip

## Power

- Music play time: 7 + 14 hr
- Battery type(Earbud): Lithium Polymer (built-in)
- Battery capacity(Earbud): 55 mAh
- Battery type(Charging case): Lithium Polymer (built-in)
- Battery capacity(Case): 400 mAh
- Charging time: 2 hr
- Fast charging time: 15 mins for 1 hr

- Number of batteries: 3 pcs
- Battery weight (Total): 11.5 g

## Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Manual
- Voice assistant support

## Accessories

- Eartips: 3 pairs (S/M/L)
- Charging case
- Charging cable: USB-C cable, 200 mm
- Quick Start Guide

## Dimensions

- Charging case dimension(WxDxH): 6.28 x 2.81 x 3.54 cm
- Earbud dimension(WxDxH): 2.52 x 2.14 x 2.55 cm
- Total weight: 0.045 kg

## Packaging dimensions

- Packaging type: Box
- Number of products included: 1
- Type of shelf placement: Hanging
- Packaging dimensions (W x H x D): 11 x 13 x 4.2 cm
- Gross weight: 0.113 kg
- Nett weight: 0.066 kg
- Tare weight: 0.047 kg
- EAN: 48 95229 13161 3

## Outer Carton

- Number of consumer packagings: 24
- Outer carton (L x W x H): 29.5 x 25.5 x 27.7 cm
- Gross weight: 3.83 kg
- Nett weight: 1.584 kg
- Tare weight: 2.246 kg
- GTIN: 1 48 95229 13161 0

## Inner Carton

- Number of consumer packagings: 3
- Inner carton (L x W x H): 13.7 x 11.7 x 11.9 cm
- Gross weight: 0.41 kg
- Nett weight: 0.198 kg
- Tare weight: 0.212 kg
- GTIN: 2 48 95229 13161 7

## UPC

- UPC: 8 40063 20311 2



Issue date 2023-07-05

Version: 4.0.1

12 NC: 8670 001 87846  
EAN: 48 95229 13161 3

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Requires a software update. The Philips Headphones app will notify you when the latest software version is available.