



Philips
Soundbar Home theater

200W RMS power
DVD playback

HSB4352

Bring your movie to life

with a powerful subwoofer

Bring your movies to life with great surround sound. With 200w of sound power, a built-in DVD player and HDMI 1080p upscaling, you can now enjoy your movies in high quality sound and picture, without the clutter!

Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- Built-in FM tuner

Connect and enjoy all your entertainment

- HDMI 1080p upscales to high definition for sharper pictures
- EasyLink to control all HDMI CEC devices via a single remote

Designed to enhance your living space

- Flexible placement on the wall or tabletop
- SoundBar design best fitting a 81 cm (32") flat TV or larger


Great listening experience

- 200W RMS power delivers great sound for movies and music
- Dolby Virtual Speaker for realistic surround sound
- Subwoofer for powerful bass

PHILIPS

Highlights

Dolby Virtual Speaker

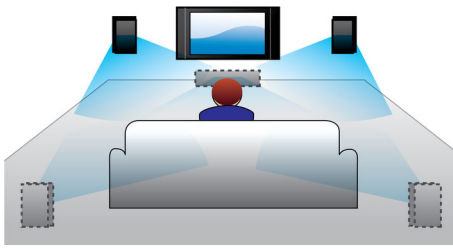

Dolby Virtual Speaker is a sophisticated audio virtualization technology that produces rich and immersive surround sound from a two-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. DVD playback is enhanced by expanding the 2-channel environment. When combined with Dolby Pro Logic II processing, any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.


HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can

now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Hi-Speed USB 2.0 Link

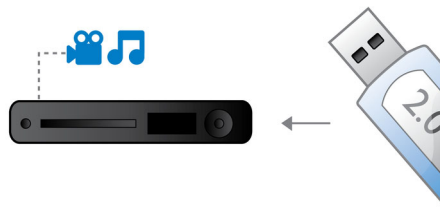

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Specifications

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Video upscaling

Sound

- Output power (RMS): 200
- Sound System: Dolby Digital, Dolby Prologic II, DTS, Stereo
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Jazz, News, Party, Rock, Sports

Video Playback

- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2
- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, Video CD/SVCD
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32-256 kbps and VBR
- Playback Media: Audio CD, CD-R/RW, USB flash drive

Still Picture Playback

- Picture Compression Format: JPEG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive

Tuner/Reception/Transmission

- Tuner Bands: FM
- RDS: Station Name

Connectivity

- Front / Side connections: MP3 Line-in, USB
- Rear Connections: Component Video output, Easy-Fit Speaker Connectors, HDMI output, TV in (audio, cinch)

Power

- Power supply: 220-240V, 50Hz
- Standby power consumption: <1W

Loudspeakers

- Subwoofer freq range: 35-200 Hz
- Subwoofer driver: 1 x 6.5" Long Throw woofer
- Subwoofer type: Active
- Subwoofer impedance: 4 ohm
- Speaker impedance: 6 ohm

Accessories

- Included accessories: Batteries for remote control, FM antenna, Power cord, Quick start guide, Remote Control, User Manual, World Wide Warranty leaflet

Dimensions

- Set dimensions (W x H x D): 800 x 140 x 97 mm
- Subwoofer dimensions (W x H x D): 170 x 330 x 340 mm
- Weight incl. Packaging: 12.5 kg

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Packaging dimensions (W x H x D): 56.5 x 39.5 x 35 cm
- Gross weight: 12.5 kg
- Nett weight: 9.2 kg
- Tare weight: 3.3 kg
- EAN: 87 12581 48000 4

Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 56.5 x 39.5 x 35 cm
- Gross weight: 12.5 kg
- Nett weight: 9.2 kg
- Tare weight: 3.3 kg
- EAN: 87 12581 48000 4



Issue date 2020-07-08

Version: 5.0.7

12 NC: 8670 000 52055
EAN: 87 12581 48000 4

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com