

PHILIPS



True Wireless Headphones

Noise Cancelling Pro
Wind-noise reduction
Sophisticated design
Universal fit



TAT8506WT

Immerse in style

Hit all the right notes in true wireless earbuds that sound as good as they look. Noise Cancelling Pro blocks external noise so you can immerse yourself in podcasts and playlists. On a call outside? You'll be heard clearly even if it's windy.

Wherever you go

- Crystal-clear calls. Wind noise reduction.
- IPX4 Splash and sweat resistant, whatever the weather
- Seven sizes of silicone ear-tip cover
- 35 hours play time with the Qi-compatible charging case

Beautiful sound. Beautiful earbuds.

- Focus where you want it. Noise Cancelling Pro
- Detailed sound. Rich bass
- Refined circular design. Perfectly comfortable fit
- Bluetooth multipoint connectivity. Work better

Seamlessly brilliant

- IR sensor. Music pauses when you take an earbud out
- Philips Headphones app. Control noise cancelling and more
- Fast pairing and touch controls

Highlights

Noise Cancelling Pro



Focus on the sounds that you want to hear. Hybrid noise cancellation uses multiple mics and advanced audio processing to filter out external noise. You can activate Awareness Mode by touching an earbud, and you can control wind-noise reduction via the Philips Headphones app.

Detailed sound. Rich bass



Whether it's a song or a podcast, perfectly tuned 13 mm drivers deliver rich bass and thrilling clarity. The sound pauses if you take an earbud out, and the best codec for your iOS or Android device is selected automatically. You'll enjoy superb sound whichever streaming service you use.

Refined design



The circular design of these earbuds is a real head-turner, and you can choose a dark or light colourway to go with your look. Six sizes of silicone ear-tip covers and an extra pair of comply foam help ensure a secure, comfortable fit.

Bluetooth multipoint




Streamline your working day. These true wireless earbuds can connect to two Bluetooth devices at the same time-and switch between them as you need. So you can take calls from your laptop and listen to music on your phone.

Crystal-clear calls



Multiple mics and a dedicated algorithm focus on the sound of your voice as well as reducing noise from the world around you. Even wind noise is filtered out, so you can be heard clearly when on a call outside.

35 hours play time with case

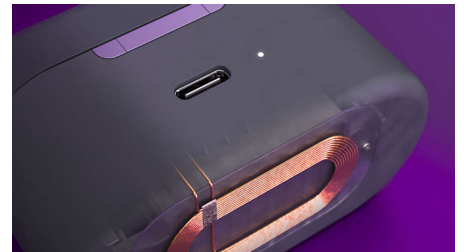

With these earbuds fully charged-and a fully charged case, you can travel with more than a day of play time in your pocket. Plus, the music pauses if you take an earbud out, so you never need to miss a beat. The Qi-compatible case can be charged wirelessly or via USB-C.

Philips Headphones app

The Philips Headphones app lets you adjust the level of noise cancellation by switching between preset modes, and you can use the app to activate wind-noise cancellation. An equaliser lets you fine-tune your sounds to fit your mood.

Fast pairing. Touch controls

Touch controls keep things simple, and Google Fast Pair lets you pair with a compatible Android device with a single tap. When the headphones are placed near your Android device, you are automatically asked if you want to connect.

Specifications

Sound

Frequency range: 7–40,000 Hz
Speaker diameter: 13 mm
Impedance: 16 Ohm
Maximum power input: 5 mW
Sensitivity: 104 dB (1K Hz)
Driver type: Dynamic
Hi-Res Audio

Connectivity

Bluetooth version: 5.2
Wireless
Bluetooth profiles: AVRCP, A2DP, HFP
Maximum range: Up to 10 m
Multipoint connection
Supported codec: LDAC, AAC, SBC
Type of wireless transmission: Bluetooth

Outer Carton

Length: 44.8 cm
Number of consumer packages: 24
Width: 31.1 cm
Gross weight: 7.045 kg
Height: 19.6 cm
GTIN: 1 48 95229 11856 7
Net weight: 1.704 kg
Tare weight: 5.341 kg

Convenience

Automatic power off: 60 minutes
Water resistance: IPX4
Philips Headphones app support
Mono mode for TWS
Auto pause (IR sensor)
Firmware updates possible
Type of controls: Touch

Inner Carton

Length: 14.7 cm
Number of consumer packages: 3
Width: 10.5 cm
Height: 16.7 cm
Net weight: 0.213 kg
Gross weight: 0.633 kg
Tare weight: 0.42 kg
GTIN: 2 48 95229 11856 4

Power

Rechargeable
Number of batteries: 3 pcs
Talk time: 9 hr
Charging time: 2 hour(s)

Wireless charging

Music play time (ANC on): 8 + 24 hour(s)
Music play time (ANC off): 9 + 27 hour(s)
Fast charging time: 15 mins for 1 hr
Battery type (Charging case): Lithium Polymer (built-in)
Battery type (Earbud): Lithium Polymer (built-in)
Battery weight (Total): 10.1 g
Battery capacity (Case): 410 mAh
Battery capacity (Earbud): 50 mAh
Battery life standby time: 200 hr

Packaging dimensions

Height: 17.7 cm
Packaging type: Box
Type of shelf placement: Hanging
Width: 9.7 cm
Depth: 4.5 cm
Number of products included: 1
EAN: 48 95229 11856 0
Gross weight: 0.243 kg
Net weight: 0.071 kg
Tare weight: 0.172 kg

Product dimensions

Height: 4.3 cm
Width: 6.8 cm
Depth: 3.3 cm
Weight: 0.071 kg

Accessories

Quick Start Guide
Eartips: 6 pairs
Charging case
Comply foam: 1 pair
Charging cable: USB-C cable, 500 mm

Design

Colour: White
Wearing style: In-ear
Ear coupling material: Comply foam, Silicone
Ear fitting: In-ear
In-ear fitting type: Silicone ear-tip

Telecommunication

Microphone for call: 3 mic
ENC microphone
Wind noise reduction

UPC

UPC: 8 40063 20171 2

ANC features

ANC technology: Hybrid, ANC Pro+
Awareness mode
Adaptive ANC
Microphone for ANC: 4 mic
ANC (Active Noise Cancelling)

Voice assistant

Voice assistant compatible: Google Assistant, Apple Siri
Voice assistant activation: Manual
Voice assistant support

