

Philips
Portable DVD Player with
Zero Bright Dot™ screen

7" widescreen LCD display

DivX playback



PET731



DVD and DivX® movies on the go

with Smart Car Mount and SD card slot

Watch DVD movies on the 7" colour LCD display of the Philips PET731 with enhanced screen quality, thanks to Philips' Zero Bright Dot™. Enjoy DivX®, MPEG4 movies, MP3/WMA-CD music on the go. Comes with SD card slot and Component Video output.

Immerse yourself in AV entertainment on the go

- Play DVD, DVD+/-R and DVD+/-RW, (S)VCD, DivX® & MPEG4 movies
- Play MP3/WMA-CD, CD and CD-RW
- Share JPEG image files with Picture CD
- SD/MMC card slot for added multimedia support

Comfortable viewing anywhere

- Zero Bright Dot™ screen for optimal screen quality
- 7" TFT colour LCD display for high-quality viewing
- Watch movies in 16:9 widescreen format
- Built-in quality stereo speakers

For ultimate convenience

- Up to 4-hour playback with rechargeable battery*
- Smart Car Mount for ease of use
- Share entertainment fun with dual headphone jacks

PHILIPS
sense and simplicity

Highlights

Play DVD, DivX and MPEG4




With DivX® support, you are able to enjoy DivX® encoded videos in the comfort of your living room. The DivX® media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, memory cards and DVD-video. DivX® CDs can be played back on selected DVD players, DVD Recorders and Home Theatre Systems.

Zero Bright Dot™ screen

Enjoy highest-quality images that are free from annoying blank spots on the LCD screen. LCD displays commonly have imperfections, termed

'bright dots' by the LCD industry. A limited number of bright dots was once considered an inevitable side effect of LCD mass production. With Philips' strict quality control procedures used for our Portable DVD Players, our LCD displays are produced with zero tolerance for bright dots. Select Portable DVD Players come with Philips Zero Bright Dot™ Policy to guarantee optimal screen quality.


Smart Car Mount

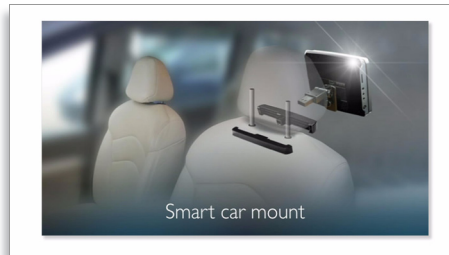

To enjoy entertainment on the go, why not bring your portable DVD player from home on the road with you? A unique Car Mount system ensures ease-of-use, with a quick-release arm that facilitates easy removal of the

player when not in use. You can bring the portable DVD player with you, leaving just the Mount behind in the car.

SD/MMC card slot

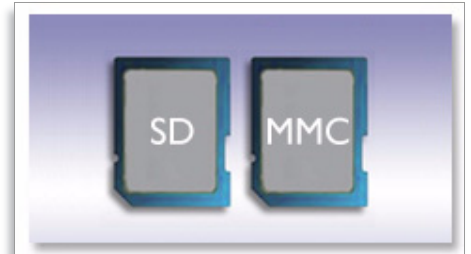

View and share your video clips, photos and music — easily and instantly. For ultra convenience, the player features a built-in card slot for SD/MMC memory cards. Simply insert the memory card into the slot located on the side of the player to access your multimedia files stored on the card.



Specifications

Picture/Display

- Display screen type: LCD TFT
- LCD panel type: Anti-glare polariser
- Diagonal screen size (inch): 7 inch
- Resolution: 480(w) x 234(H) x 3(RGB)
- Brightness: 200 cd/m²
- Contrast ratio (typical): 250:1
- Effective viewing area: 154.1 x 86.6 mm
- Pixel pitch: 0.107(w) x 0.370(H) mm
- Response time (typical): 30 ms

Sound

- Output Power: 250 mW RMS (built-in speakers)
- Output power (RMS): 10 mW RMS (earphone)
- Signal to noise ratio: >80 dB (line out), >76 dB (earphone), >62 dB (built-in speakers)

Video Playback

- Playback Media: DVD, DVD+R/+RW, DVD-R/-RW, SVCD, Video CD, CD, CD-R/CD-RW, MP3-CD, WMA, Picture CD
- Disc Playback Modes: OSD, A-B Repeat, Angle, Disc Menu, Fast Reverse, Fast Forward, Repeat, Shuffle Play, Slow Reverse, Slow Forward, Zoom
- Video disc playback system: NTSC, PAL
- Compression formats: Divx, MPEG4

Audio Playback

- Compression format: Dolby Digital, MP3, WMA
- Playback Media: CD, MP3-CD, CD-R, CD-RW, WMA-CD
- File systems supported: ISO-9660, Joliet
- MP3 bit rates: 32 - 320 kbps
- WMA bit rates: 32 - 192 kbps

Connectivity

- Audio Output - Digital: Coaxial (cinch)
- DC in: 9~12 V
- AV output: Composite (CVBS) x 1
- Headphone jack: 3.5 mm Stereo Headphone x 2
- Other connections: Component Video out Interlaced
- SD/MMC card slot: SD card slot

Convenience

- Shock proof
- Battery charging indication

Accessories

- AC/DC Adapter: AY4112/00 (110-240 v, 50/60 Hz)
- Car kit: cigarette outlet adapter, 12vDC
- Remote control: AY5507 slim remote
- Cables: 1 x AV Cables
- User Manual: English
- Smart car mount: 1 pcs

Power

- Battery Type: Built-in battery

Dimensions

- Master carton dimensions: 430 x 255 x 265 mm
- Master carton quantity: 3
- Master carton weight: 9.1 kg
- Packaging type: D-box
- Packaging dimensions (W x H x D): 250 x 228 x 138 mm
- Product dimensions (W x H x D): 193 x 33 x 170 mm
- Product weight: 0.85 kg



Issue date 2009-06-17

Version: 1.0.2

12 NC: 8670 000 38704
EAN: 87 12581 41015 5

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com

* DivX, DivX Certified and associated logos are trademarks of DivXNetworks, Inc. and are used under licence.

* Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

* Battery life varies by use and settings.