



Philips Fidelio  
wireless studio speakers

Bluetooth® aptX, AAC and NFC

Digital-in, Analog-in  
USB port for charging  
100W max



BTS7000

## Wireless stereo speakers

Experience massive, hi-fi sound with these 100W studio speakers and incredible bass reproduction. Stream music wirelessly using Bluetooth® with aptX® and AAC. Premium finishes complement any stylish home décor.

### Enrich your sound experience

- 100W maximum output power
- Silk dome tweeter for crystal clear sound
- Dolby Digital for ultimate movie experience
- Digital Sound Control for optimized music style settings
- Bass Reflex Speaker System delivers a powerful, deeper bass

### Connect and enjoy all your entertainment

- Bluetooth® (aptX® and AAC) for wireless music streaming
- HDMI ARC to access all the sound from your TV
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Optical/coaxial in for connecting your TV, PC or game console

### Designed to enhance your living space

- Luxurious cloth perfectly defined for best sound performance
- Minimalistic chic design to suit a modern decor
- Real wood finish for modern home décor

**PHILIPS**  
Fidelio

Wireless studio speakers  
Bluetooth® aptX, AAC and NFC Digital-in, Analog-in, USB port for charging, 100W max


## Highlights

### Silk dome tweeter



A silk dome tweeter holds a diaphragm made with silk - a material superior to the others that is used in ordinary tweeters. The silk material used in the diaphragm has superior sound damping characteristics and its soft texture ensures minimal acoustic breakup. As a result, the sound produced by a silk dome tweeter is smooth, warm and has a wide range.

### Bluetooth® (aptX® and AAC)

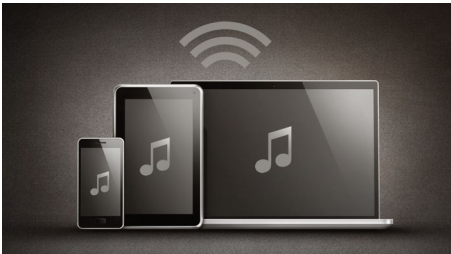

Bluetooth® (aptX® and AAC) for wireless music streaming

### NFC technology




Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

### HDMI ARC

HDMI ARC to access all the sound from your TV

### Dolby Digital

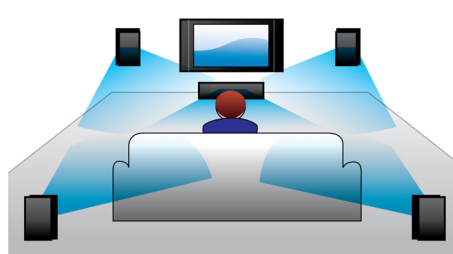

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

BTS7000/10

## Specifications

### Sound

- Output power (RMS): 100W 30% THD

### Loudspeakers

- Speaker drivers: 4" woofer, dome tweeter
- Speaker types: bass reflex speaker system

### Connectivity

- MP3 Link: 3.5mm stereo line in
- Rear Connections: Digital coaxial in, Digital optical in
- Wireless connections: Bluetooth APT-X and AAC
- HDMI 1: HDMI (Audio Return Channel)
- USB charging

### Convenience

- EasyLink (HDMI-CEC): System volume control, One touch standby
- USB Charging: 0.5 A

### Dimensions

- Set dimensions (W x H x D): 161 x 305 x 161 mm

### Accessories

- Included accessories: Quick Use Guide, User Manual, Batteries for remote control, DIN Cable, IFU / User Manual

### Power

- Power supply: 110-240V, 50Hz
- Standby power consumption: <0.5 W



Issue date 2014-10-30

Version: 2.2.6

12 NC: 8670 001 07113  
EAN: 08 71258 16985 46

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)