

# PHILIPS



## True Wireless Headphones

Natural sound

Noise Canceling

Clearer calls on the go

Bluetooth LE Audio\*



TAT3508BK

## Music to calls, flow through your day

Always be working it! These true wireless noise-canceling earbuds sound great, and they reduce wind noise. You can immerse in your tunes and enjoy clear calls on the go. Slip the charging case into your pocket and you're set for the day.

### Great sound

- Warm, natural sound. Philips sound signature
- Always hear your music. Noise Canceling
- Clearer calls on the go. They'll hear you, not the noise
- Better connectivity and sound. Next-generation Bluetooth\*

### Comfortable and convenient


- Secure, comfortable in-ear fit
- IPX4 splash and sweat resistant
- Multipoint connection and touch controls
- Philips Headphones app. Control noise canceling and more

### Ready for you

- Always ready. Pocket-sized charging case and mono mode
- No worries. Up to 21 hours play time with the case
- Quick charge for 15 minutes and get an extra hour
- Charging case dimensions: 35x62x28 mm

# Highlights

## Noise Canceling

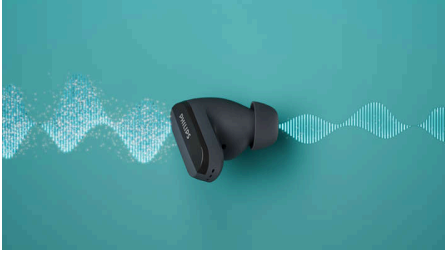

Noise canceling quiets external noise, including wind, so you can focus on your tunes or calls. Leave it on auto or use the Philips Headphones app to adjust. Want to hear more of what's going on around you? Tap an earbud to activate Awareness Mode.

## Clearer calls on the go



When you're on a call, a dedicated mic picks up the sound of your voice while an AI algorithm removes background noise from the world around you. The person you're speaking to will hear you, not the traffic or the chatter of people standing next to you!

## Next-generation Bluetooth\*



These earbuds will work with devices that support Bluetooth LE Audio and the LC3 codec\* to give you a steadier connection and noticeably better sound. The sound won't dip if you're streaming music or taking calls in built-up areas, and there's virtually no lag if watching movies or gaming.

## Philips sound signature

Music to podcasts, love what you hear! These true wireless earbuds feature large 10 mm drivers, tuned to the Philips sound signature. Whatever you're into, you'll enjoy a warm, natural sound with deep bass.

## Pocket-sized charging case

Head out with the small charging case in your pocket and your earbuds will always be ready for you. They'll stay protected and charging when you're not using them, and mono mode means you can use either earbud while the other one charges.

## Multipoint and touch controls

Touch controls on the earbud stalks keep things simple and multipoint lets you connect to two Bluetooth devices (iOS or Android) at the same time. Google Fast Pair lets you pair to a compatible Android device with a single tap.

## IPX4 splash/sweat resistant

Never mind the weather, an IPX4 rating means these earbuds are splash resistant so they don't mind a little rain! Wearing them during a quick workout or on a particularly hot day? They won't mind a little sweat either.

## 21 hours play time with case

You get 7 hours play time from a full charge, and an extra 14 hours from the case. Pop the earbuds back in the case and they'll recharge fully in 2 hours. If you need a quick boost, just 15 minutes gives you an extra hour. The case can be charged via USB-C.

## Philips Headphones app

You can use the Philips Headphones app to customize noise canceling, turn auto wind noise reduction off, and adjust the level of transparency when using Awareness Mode. An equalizer lets you fine-tune your sounds, and you can keep your headphone's software up to date via the app too.

## Secure, comfortable in-ear fit

You get real comfort thanks to soft, interchangeable silicone ear-tip covers. The ear tips insert securely into your ear canal, creating a perfect seal that helps diminish external noise. Plus, the stalks make these earbuds easy to insert and remove.

# Specifications

## Sound

Frequency range: 20 - 20,000 Hz  
Speaker diameter: 10 mm  
Impedance: 32 Ohm  
Maximum power input: 5 mW  
Sensitivity: 95 dB (1k Hz)  
Driver type: Dynamic

## Connectivity

Bluetooth version: 5.3  
Wireless  
Bluetooth profiles: A2DP, AVRCP, HFP, TMAP  
Maximum range: Up to 10 m  
Multipoint connection  
Supported codec: SBC  
Type of wireless transmission: Bluetooth

## Outer Carton

Length: 29.5 cm  
Number of consumer packagings: 24  
Width: 25.5 cm  
Gross weight: 3.83 kg  
Height: 27.7 cm  
GTIN: 1 48 95229 13160 3  
Nett weight: 1.584 kg  
Tare weight: 2.246 kg

## Convenience

Water resistance: IPX4  
Philips Headphones app support  
Google fast pair  
Mono mode for TWS  
Firmware updates possible  
Type of controls: Touch

## Inner Carton

Length: 13.7 cm  
Number of consumer packagings: 3  
Width: 11.7 cm  
Height: 11.9 cm  
Nett weight: 0.198 kg  
Gross weight: 0.41 kg  
Tare weight: 0.212 kg  
GTIN: 2 48 95229 13160 0

## Power

Number of batteries: 3 pcs  
Music play time: 7 + 14 hour(s)  
Charging time: 2 hour(s)  
Fast charging time: 15 mins for 1 hr

Battery type(Charging case): Lithium Polymer (built-in)

Battery type(Earbud): Lithium Polymer (built-in)  
Battery weight (Total): 11.5 g  
Battery capacity(Case): 400 mAh  
Battery capacity(Earbud): 55 mAh

## Packaging dimensions

Height: 13 cm  
Packaging type: Box  
Type of shelf placement: Hanging  
Width: 11 cm  
Depth: 4.2 cm  
Number of products included: 1  
EAN: 48 95229 13160 6  
Gross weight: 0.113 kg  
Nett weight: 0.066 kg  
Tare weight: 0.047 kg

## Accessories

Quick Start Guide  
Eartips: 3 pairs (S/M/L)  
Charging case  
Charging cable: USB-C cable, 200 mm

## Design

Color: Black  
Ear coupling material: Silicone  
Ear fitting: In-ear  
In-ear fitting type: Silicone ear tip

## Telecommunication

Microphone for call: an AI mic  
Wind noise reduction

## Dimensions

Charging case dimension(WxDxH): 6.28 x 2.81 x 3.54 cm  
Earbud dimension(WxDxH): 2.52 x 2.14 x 2.55 cm  
Total weight: 0.045 kg

## UPC

UPC: 8 40063 20310 5

## ANC features

ANC technology: Hybrid  
Awareness mode  
ANC (Active Noise Canceling)  
Auto wind noise cancelation

## Voice assistant

Voice assistant compatible: Apple Siri, Google Assistant  
Voice assistant activation: Manual  
Voice assistant support

