




Philips  
wireless portable speaker

### Bluetooth®

Audio-chain  
Built-in microphone for calls  
10W, rechargeable battery

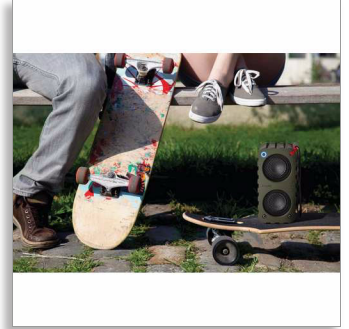

SB5200K



## Great sound · Ruggedised · Chainable

Keep the party pumping wherever you go with the epic-sounding SB5200 portable speaker and its hot design. Hit the Indoor mode for crisp, clear sound at home, or flick it to Outdoor mode and crank the volume to get people jumping.

#### Sound that blows you away

- wOOx™ loudspeaker Technology for deep and powerful bass
- 2 selectable sound settings tuned for Outdoor and Indoor use
- Outdoor mode for bigger and louder music
- Indoor mode for deep bass and clarity for high-quality sound

#### Designed to go places

- Rugged design and oversized strap for active use
- Built-in rechargeable battery for even better portability

#### Advanced versatility


- Wireless music streaming via Bluetooth
- Chain multiple BR-1Xs into a bigger music system
- Built-in microphone for speakerphone conversation
- Audio-in for easy portable music playback

# PHILIPS

Wireless portable speaker  
Bluetooth® Audio-chain, Built-in microphone for calls, 10W, rechargeable battery

## Highlights

### Wireless music streaming

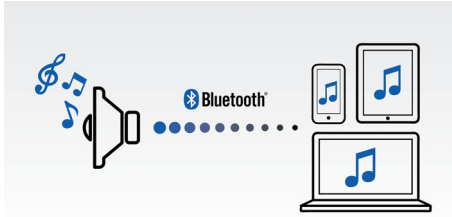

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

### wOOx™ Technology



wOOx technology is a revolutionary loudspeaker concept that allows you to hear and feel profoundly deep bass that is richer than any other audio system. Special speaker drivers work in harmony with the wOOx bass radiator, and precise tuning between the main driver and the tweeter ensures smooth transitions from low-mid to high frequencies. Dual suspension and a totally symmetrical sandwich construction deliver low and precise bass without noticeable distortion. wOOx produces exceptionally deep and dynamic bass by using the speaker box full volume to truly magnify the impact of the music.

### 2 selectable sound settings

Two sound settings designed for your convenience and greater versatility: indoor mode and outdoor

mode. Use Indoor mode when you want strong bass and crystal clear sound and Outdoor mode when you need maximum loudness and power in the open air.

### Chain multiple BR-1Xs



To get bigger sound outdoors, chain together as many BR-1Xs as you want with the special audio cable supplied. Once they are connected, the volume on all BR-1Xs will synchronise. Simply change the volume on the BR-1X connected to your device to change it on all of them.

### AUDIO-IN (3.5 mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device into the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

### Built-in microphone

Built-in microphone for speakerphone conversation

SB5200K/10

## Specifications

### Compatibility

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5
- iPod touch: 3rd generation or later
- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above
- work with: Bluetooth 4.0 or below
- other Bluetooth-enabled device

### Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)
- micro USB port: to charge up BR-1X via PC

### Convenience

- Built-in microphone: for speaker conference

### Sound

- Output power (RMS): 2 x 5 W
- Sound System: Stereo
- Volume control: up/down

### Loudspeakers

- Loudspeaker enhancement: wOOx Bass Radiator
- Speaker drivers: 2 x 2"

### Power

- Power supply: 100-240 VAC, 50/60 Hz
- Battery type: Lithium polymer (built-in)
- Operating time on battery: 6 hr

### Accessories

- Included accessories: AC Power Cord, hand strap, audio cable to chain up BR-1Xs, Warranty certificate, World Wide Warranty leaflet, Quick install guide

### Dimensions

- Product dimensions (WxDxH): 210 x 100 x 80 mm
- Packaging dimensions (WxDxH): 260 x 110 x 110 mm
- Product weight: 0.5 kg
- Weight incl. Packaging: 0.95 kg



Issue date 2015-03-20

Version: 1.0.8

12 NC: 8670 001 06172  
EAN: 08 71258 16964 74

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Battery life varies by use and settings.