




User manual

Playing the speakers and subwoofer

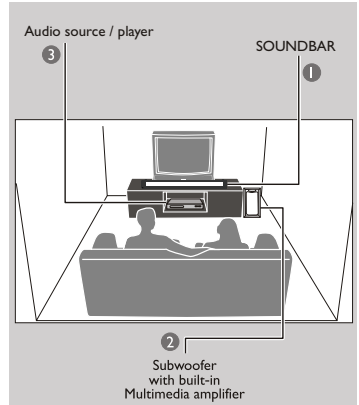

System positioning :

The subwoofer is recommended to be put on the floor to get a better acoustic effect.


The soundbar is recommended to be put on the flat desktop to get a better acoustic effect.

Helpful Hint:

- To avoid magnetic interference, do not position the speakers, too close to your TV.

总尺寸: 660x173mm
工艺: 风琴折 105G铜版纸 双面印刷
成品尺寸: 110x86.5mm
料号: 30709L003102-003

成品正面:

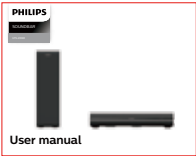

成品背面:



General information

Safety instructions

Please read carefully the safety mark on the back side

This mark is intended to alert the user from the non isolated dangerous voltage within the product that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This mark is intended to alert the user for important operating and servicing instruction.

Warnings

- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the loudspeaker cones.
- Please switch off the system from the wall socket, when not in use.
- Do not open the cover or back panel to avoid electrical shock or any other accidents. No user-serviceable parts are inside.
- Only for indoor use.
- Plug the system to the AC outlet with the right voltage marked on the back panel of the Subwoofer and soundbar.
- The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

- The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Attention should be drawn to the environmental aspects of battery disposal.

Care and safety information

Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any source of danger on the Subwoofer, and satellite (e.g. liquid filled objects lighted candles).
- Do not install near heat sources.

Do not block any ventilation opening

- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.
- At high volume the back cover of Subwoofer becomes hot. Do not touch it.


Care of the cabinet

- Use a soft cloth slightly moistened to clean the cabinet. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Accessories

Item	Audio-2RCA cable	Remote control	User manual	Optical cable	Connection cable
Quantity	1	1	1	1	1

Connections

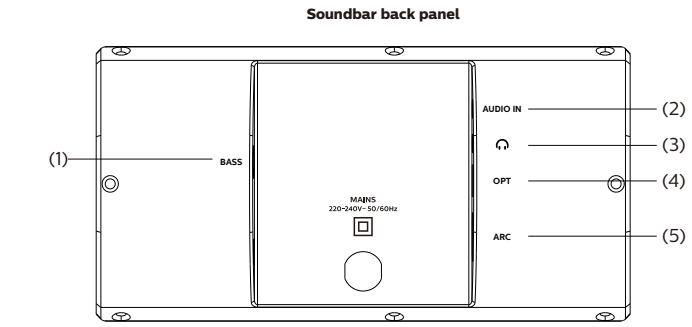

- Bass connection.
- Input Connect to sound sources such as computer, CD player, MP3, etc.
- Headphone output.
- Optical Input.
- HDMI ARC Input.

Top panel operation

- 0/SOURCE: The Speaker system is in stand by mode when power on, with LED lights on. Please press the "0/SOURCE" to select appropriate source. Keeping the "0/SOURCE" key pressed for long will put it back in stand by mode. You can toggle through the input modes by pressing the "0/SOURCE" key. "BT" denotes Bluetooth Mode, "ARC" denotes HDMI ARC Mode, "OPT" denotes Optical Mode, "AUDIO IN" denotes Audio Mode, "USB" denotes USB* mode.
- II: Play/Pause the songs.
- II/VOL-: Long press for volume decrease/ short press for prev track.
- II/VOL+: Long press for volume increase/ short press for next track.
- USB Slot.

- 0/SOURCE
- II
- II/VOL-
- II/VOL+
- USB

Remark:

In order not to disturb in the dark, the LED display of soundbar is set to be off, if there is no operation after 90 seconds of stand by mode.

* AVAILABLE IF CONNECTED

Warranty

This Philips soundbar is warranted against any defect due to defective materials or workmanship for 12 months from the date of purchase, should a defect develop during the warranty. **TPV Technology India Pvt. Ltd.**, affiliate of MMD Hong Kong Holding Limited, undertake to repair the apparatus FREE OF CHARGE at any of its authorized service center in India.

The warranty is not valid in case :

- Proof of purchase is not accompanied with this warranty card.
- The warranty card is not completed immediately after purchase.
- The apparatus is not used according to this user manual.
- Defects are caused due to improper or reckless use.
- Any repairs are done by persons other than Philips authorized service centre.
- The serial number is tampered with.
- Defects due to causes beyond control like lightning, abnormal voltage or while in transit to the purchaser's residence.

All Consumables and parts susceptible to normal wear and tear are not covered under this warranty. For detailed Terms and Conditions applicable, please refer www.philips.com/support.

Model No. _____ Product Sl. No. _____

Invoice Number _____ Date of Purchase: ____/____/____

Customer's Name and address: _____

Always there to help you!

Visit us at www.support.philips.com
Helpline: 1800 425 6396
Email: india.callcentre@tpv-tech.com
(10 a.m. to 9 p.m. Mondays to Saturdays & 10 a.m. to 6 p.m. on Sundays)

Dealer Name & Stamp:



Remote controls

- 0
- RESET
- MUTE
- VOL+
- II
- II
- II
- BT
- ARC
- OPT
- AUD
- USB
- EQ

Remark:

In order not to disturb in the dark, the LED display of soundbar is set to be off, if there is no operation after 90 seconds of stand by mode.

* AVAILABLE IF CONNECTED

Product specifications*

Total system power	60W RMS	Soundbar	2 Way
Soundbar power	15 x2W RMS	Speaker size	2.25 inches * 2
Subwoofer power	30W RMS	Impedance	8 Ohm
Separation	≥40db	Frequency range	140Hz - 20KHz
SNR	≥55db	Product Dimension (mm) W x H x D	437x 88 x 62
Audio input socket	Audio-2RCA cable	Net Weight	1.20 kg
Power consumption	12.7 W		
		BT version	V5.0
Subwoofer	1 Way	BT range	Up to 10 meters
Speaker size	5.25 inches	USB max capacity	Up to 32GB
Impedance	4 Ohm	playability	MP3 track
Frequency range	60Hz - 150Hz		
Dimension (mm) W x H x D	120 x 380 x 260		
Weight	2.88kg		

*Specification subject to change without prior notice. Measured under specific conditions.

Register you product and get support at www.philips.com/welcome

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

