



Philips Fidelio SoundHub
2.1 Home theatre with
Crystal Clear Sound

3D Blu-ray

Titanium tweeters

SoundHub



HTS9221

Breathtaking clarity of all sound details

Obsessed with Sound

Discover Crystal Clear Sound with the new Philips SoundHub home cinema system HTS9221. The titanium tweeters deliver astonishing clarity of every sound detail. Start enjoying your favourite movies and music as they were meant to be heard.

Discover Crystal Clear Sound

- Crystal Clear Sound for superbly clear and detailed sound
- Titanium tweeters for undistorted sound with superb clarity
- Premium Class D Amplifiers to preserve every sound detail
- Virtual Surround Sound for a realistic movie experience

Designed to enhance your cinema at home

- Unique speakers with exposed tweeter for undisturbed sound
- Lifestyle design in high quality brushed aluminium and glass

Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Built-in dock for convenient playback from your iPod/iPhone
- Built-in Wi-Fi to enjoy your connected media wirelessly
- Smart TV to enjoy online services and access multimedia on your TV




PHILIPS
Fidelio

sense and simplicity


Highlights

Titanium tweeters

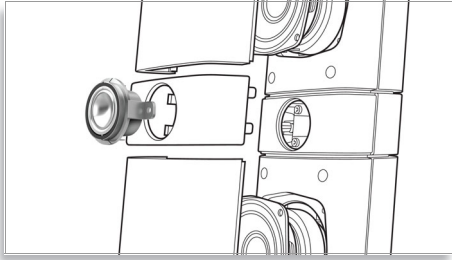

The co-developed tweeters, crafted in titanium, are very rigid and light to guarantee undistorted sound. Their incredible resistance to distortion and resonance through the whole audible frequency range guarantees superb clarity for all sound details.

Premium Class D Amplifiers

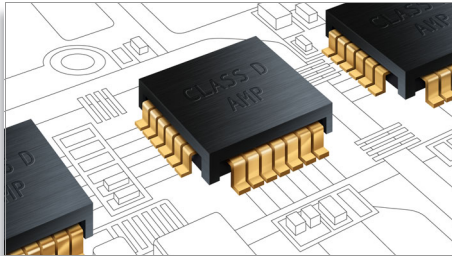

The Philips proprietary Premium Class D Amplifiers are designed to preserve the original sound source for greater audio signal accuracy, thus allowing acoustic details in music and movies to be delivered exactly as the artist or director intended.


Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080 x 1920 HD resolution. Watching these images through special glasses with right and left

lenses that are timed to open and close in synchrony with alternating images creates the full HD 3D viewing experience in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high-quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Built-in dock for iPod/iPhone

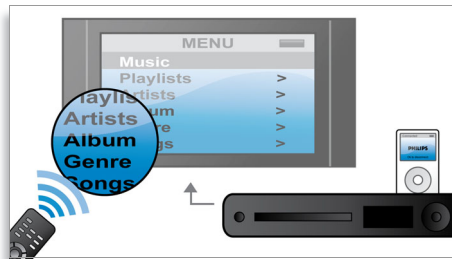

A built-in dock for iPod/iPhone lets you play movies, music and photos from your iPod/iPhone. What's more, you can charge and control the iPod/iPhone and browse through its contents on your TV screen - all with the home theatre's remote. Doing away with cumbersome cables and connections, the integrated dock brings portable entertainment into your home - with absolute ease.

Smart TV



Philips home theatre systems with Smart TV offer you an array of enhanced features, including Net TV, DLNA and MyRemote. Net TV brings a wide range of online information and entertainment to your TV. Simply select Net TV in the Home Menu and start browsing for services like video-on-demand shops* for the latest releases in HD, and Catch-up TV. With DLNA, you can access photos, music and

movies stored on your PC from the comfort of your sofa. Can't find the remote control? Simply use your smartphone or tablet PC to control your home theatre via the Philips MyRemote app.



Perfect match to Philips 9000 series TV*

Perfect match to Philips 9000 series TV

Intensify your cinematic experience at home with a

matching Philips 9000 series TV. This 2011 3D TV was awarded Best LCD TV by EISA for the past 10 years; it brings innovation in picture and connectivity. Perfect Pixel HD Engine and LED give you the most true to life images. Ambilight and 3DMax bring movies to life. Both TV and home theatre can be operated with only one remote control and the combined set ensures the best picture and sound performance with Philips Easylink via HDMI. In addition they are both designed with the same materials and finishing for a perfect visual match!



asimpleswitch.com

Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.



Specifications

Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Dialogue Enhancer, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Satellite speaker output power: 135 W x2
- Subwoofer output power: 230 W
- Total Power RMS @ 30% THD: 500 W

Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Drivers per Satellite speaker: 1 x 1" Titanium tweeter, 2 x 3" Full range woofers
- Satellite speaker freq range: 150–20k Hz
- Satellite speaker impedance: 5 ohm
- Subwoofer type: Active
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20–150 Hz
- Subwoofer impedance: 3 ohm

Connectivity

- Smart TV: DLNA, MyRemote, Net TV
- Front/Side connections: Music iLINK, USB
- Integrated Connections: Dock for iPod/iPhone, Wi-Fi
- Rear Connections: AUX IN 1, AUX IN 2, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), Mini Easy-Fit Speaker Jacks, SD/SDHC Card slot, Subwoofer out

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep colour

Tuner/Reception/Transmission

- RDS: Station Name
- Tuner Bands: FM
- Number of Pre-set Channels: 40

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, wav, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, DivX, mkv, mp4, mpeg, mpg, wmv

Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320 kbps

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, WMV HD, WMV SD

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Power

- Power consumption: 135 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.5 W

Sustainability

- Packaging: 80% recycled corrugated board, Electronic User Manual, No polyfoam, Soya based ink

Dimensions

- Main Unit (W x H x D): 307 x 66 x 304 mm
- Main Unit Weight: 3.87 kg
- Satellite Speaker (W x H x D): 131 x 334 x 99 mm
- Satellite Speaker Weight: 1.2 kg
- Satellite Speaker Cable length: 3 m
- Subwoofer (W x H x D): 196 x 397 x 342 mm
- Subwoofer Weight: 5.3 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 570 x 413 x 400 mm
- Weight incl. Packaging: 16.6 kg

Accessories

- Included accessories: 2 x AAA Batteries, FM antenna, Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

Matching Philips Televisions*

- 9000 Series: 32PFL9606, 37PFL9606, 40PFL9606, 46PFL9606, 52PFL9606



Issue date 2013-03-03

Version: 10.2.10

12 NC: 8670 000 71828
EAN: 87 12581 58164 0

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com



* The home theatre can also be matched with all other Philips TVs.
* To check whether Video on Demand is available in your country, please visit www.philips.com/blu-ray.