

Philips  
5.1 Home theater

3D Blu-ray  
dock iPod/iPhone

HTS8562



## Get immersed in the sound details of every movie

### Obsessed with sound

With Philips' Crystal Clear Sound, you can hear and appreciate every sound detail, as the artist or director intended! Crystal Clear Sound keeps audio processing to a minimum and reproduces the sound source precisely without any distortion.

#### Discover Crystal Clear Sound

- Crystal Clear Sound for superbly clear and detailed sound
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- Auto calibration synchronizes speakers for perfect acoustics
- Premium soft dome tweeters for Crystal Clear Sound

#### Designed to enhance your cinema at home

- Wireless rear speakers option for clutter free placement
- Elegant speakers in aluminum and glass ensure a robust sound


#### Simply enjoy all your entertainment

- Built-in WiFi to enjoy your connected media wirelessly
- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- HDMI Hub to connect HDMI devices for great sound and picture
- Smart TV to enjoy online services & access multimedia on TV

# PHILIPS


# Highlights

## Premium soft dome tweeters

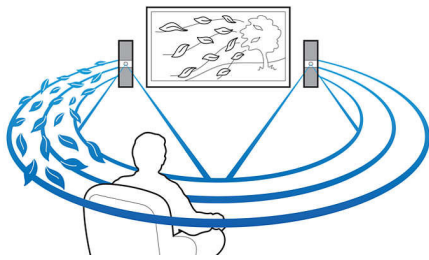


With Philips' Crystal Clear Sound, you will now be able to discern and appreciate every sound detail, the way it's meant to be heard and as the artist or director intended! Crystal Clear Sound reproduces the sound source - whether it's an action movie, a musical or a live performance - faithfully, precisely and without any distortion. Philips home theaters with Crystal Clear Sound keep audio processing to a minimum, preserving the purity of the original audio content. The result is greater sonic accuracy delivered to your ears.

## Auto calibration

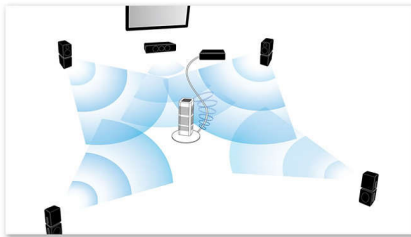


Adjusting your new Philips home theater for optimum sound experience is now a breeze. With the simple touch of a button on the remote, the intelligent pre-loaded sound calibrator software is launched and emits test signals to the speakers. These signals are captured and analyzed by the auto-calibration microphone and the necessary adjustments are made, taking into consideration the distances between speakers and listening positions, the loudness and the delay response of audio signals from each speaker. In 60 seconds, your in-room sound experience is enhanced and optimized.

## HDMI Hub

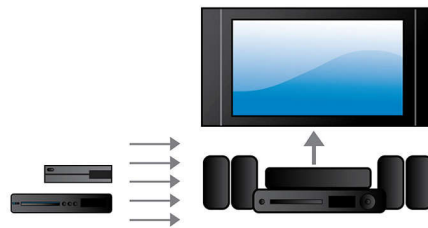

HDMI Hub provides additional HDMI ports to allow you to connect other devices such as your game console or HD set-top box to your home theater conveniently. By connecting your devices through the HDMI Hub, you can enjoy high-definition sound and picture for all your entertainment.

## Built-in WiFi

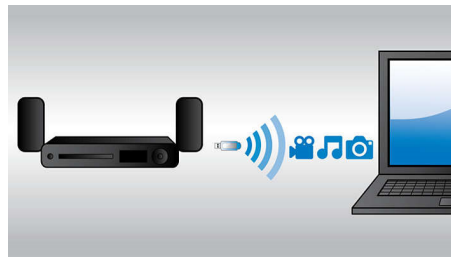

Thanks to built-in WiFi, by simply connecting your home theater directly to your home network, you can experience a rich selection of popular online services. You can enjoy some of the best websites offering movies, pictures, infotainment and other online contents tailored to fit your TV screen.

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images


through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## Smart TV



Philips home theater systems with Smart TV offer you an array of enhanced features, including Net TV, DLNA and MyRemote. Net TV brings a wide range of online information and entertainment to your TV. Simply select Net TV in the Home Menu and to start browsing for services like, video-on-demand stores\* for the latest releases in HD, and Catch-up TV. With DLNA, you can access photos, music and movies stored on your PC from the comfort of your couch. Can't find the remote control? Simply use your smart phone or tablet PC to control your home theater via the Philips MyRemote app.

## Wireless rear speakers option

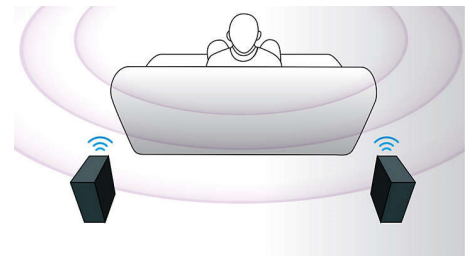

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.

# Specifications

## Sound

- Sound Enhancement: Auto Volume Leveler, Dialog Enhancement, Dolby Digital Prologic II, DoubleBass, FullSound, Night Mode, Surround Plus, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Subwoofer output power: 230 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Center speaker output power: 230 W
- Satellite speaker output power: 4 x 135 W
- Total Power RMS @ 30% THD: 1000 W

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Center speaker drivers: 1 x 1" tweeter, 2 x 3" woofers
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 5 ohm
- Subwoofer freq range: 20 - 150 Hz
- Center speaker impedance: 3 ohm
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Passive
- Center speaker freq range: 150 - 20k Hz
- Drivers per Satellite speaker: 1 x 1" tweeter, 2 x 3" Woofers
- Subwoofer impedance: 3 ohm

## Connectivity

- Front / Side connections: Music iLINK, USB
- Integrated Connections: Wi-Fi
- Rear Connections: AUX in, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), HDMI IN 1, HDMI IN 2, iPod/iPhone Dock Jack, Mini Easy-Fit Speaker Jacks, SD/SDHC Card slot, Wireless Rear Audio
- Smart TV: DLNA, MyRemote, Net TV

## Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40
- RDS: Station Name

## Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

## Power

- Power consumption: 105 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: <math>\leq 0.5\text{W}</math>

## Accessories

- Compatible accessories: RWSS5510 Wireless Rear

- Audio, STS1300 Floor stand, STS9501 Speaker stands, STS9510 Wall mount brackets
- Included accessories: 2 x AAA Batteries, Auto-Calibration Mic, DCK3060 Dock for iPod/iPhone, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

## Dimensions

- Main Unit (W x H x D): 435 x 63.5 x 342.5 mm
- Weight incl. Packaging: 18.9 kg
- Main Unit Weight: 4 kg
- Packaging (W x H x D): 565 x 443 x 395 mm
- Center Speaker (W x H x D): 280 x 95 x 92 mm
- Center Speaker Weight: 1.4 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 97 x 301 x 120 mm
- Subwoofer (W x H x D): 196 x 395 x 342 mm
- Front Speaker Weight: 1.45 kg
- Subwoofer Weight: 4.9 kg
- Front Speaker cable length: 4 m
- Rear Speaker (W x H x D): 97 x 301 x 120 mm
- Rear Speaker Weight: 1.5 kg
- Rear Speaker cable length: 10 m
- Subwoofer cable length: 3 m

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320kbps

## File Format

- Audio: aac, mka, mp3, wav, wma
- Video: asf, avi, divx, mkv, mp4, mpeg, mpg, wmv
- Picture: GIF, JPEG, JPG

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Matching Philips Televisions\*

- Cinema 21:9 Gold Series: 50PFL7956

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Sustainability

- Packaging: 80% recycled corrugated board, Electronic User Manual, No polyfoam, Soya based ink

## Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, WMV HD, WMV SD



Issue date 2024-05-02

Version: 2.2.1

EAN: 87 12581 62076 9

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* To check whether Video on Demand is available in your country,  
please visit [www.philips.com/blu-ray](http://www.philips.com/blu-ray).