

PHILIPS

Headphones

8.6 mm drivers/closed-back

In-ear

SHE3850RD



Bright beats, punchy bass

High quality vacuum metallised matt finishing

Stylish Philips MyJam Chromz in-ear headphones deliver punchy bass, comfort and good looks. Multiple vacuum metallised, matt coating colour options match the iPhone 6S.

Lasting comfort

- Oval sound tube insert provides ergonomic comfort fit
- 3 interchangeable rubber ear caps for an optimal fit
- Vacuum metallised, stylish matt coat offers extra protection

Revel in quality sound


- Powerful drivers reproduce clear sound with big bass
- Perfect in-ear seal blocks out external noise

Enhanced durability

- Reinforced cable relief enhances durability and connectivity


Highlights

3 sizes of ear caps

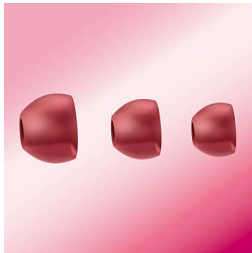


Ear caps come in a choice of 3 sizes - small, medium and large - for a personalised and perfect fit.

metallised matt coating

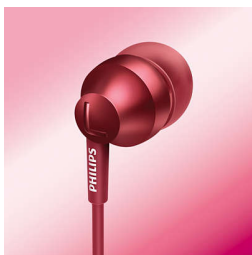


A high quality vacuum metallised matt coating offers extra surface protection and matches the iPhone 6S perfectly.

Oval sound tube

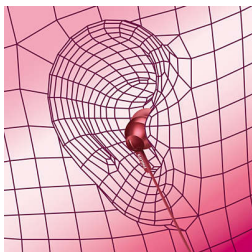


An oval sound tube insert provides ergonomic comfort to fit the true shape of the ear.

Perfect in-ear fit

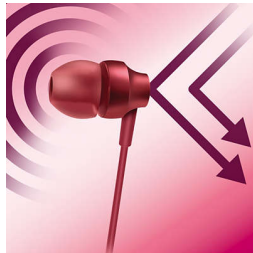

Ultra small earphones fit perfectly inside the ear, creating a seal that blocks out external noise.

Powerful drivers

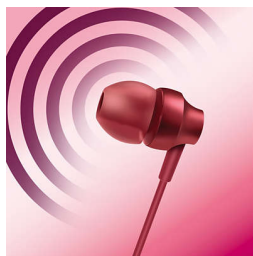

Philips Chromz in-ear headphones house powerful speakers in a compact design to ensure a perfect fit with clear sound with big bass.

Reinforced cable relief

To extend the life of your headphones, a soft rubber relief between them and the cable protects the connection from damage through repeated bending.

Sound

Acoustic system: Closed
Frequency response: 10–22,000 Hz
Diaphragm: PET
Magnet type: Neodymium
Voice coil: CCAW
Speaker diameter: 8.6 mm
Sensitivity: 107 dB
Maximum power input: 20 mW
Impedance: 28 ohm

Connectivity

Type of cable: Copper
Cable Connection: symmetrical
Finishing of connector: chrome-plated
Cable length: 1.2 m
Connector: 3.5 mm

Outer Carton

Length: 38 cm
Number of consumer packages: 24
Width: 21 cm
Gross weight: 1.347 kg
Height: 15 cm
GTIN: 1 69 25970 70920 7
Net weight: 0.288 kg
Tare weight: 1.059 kg

Inner Carton

Length: 17.9 cm
Number of consumer packages: 3
Width: 9.5 cm
Height: 6 cm
Net weight: 0.036 kg
Gross weight: 0.135 kg
Tare weight: 0.099 kg
GTIN: 2 69 25970 70920 4

Packaging dimensions

Height: 17.2 cm
Packaging type: Blister
Type of shelf placement: Both
Width: 5 cm
Depth: 3 cm
Number of products included: 1
EAN: 69 25970 70920 0
Gross weight: 0.036 kg
Net weight: 0.012 kg
Tare weight: 0.024 kg

Accessories

Eartips: 3 sizes S, M, L

