



Philips
DVD player

HDMI 1080p

USB 2.0
DivX Ultra
CinemaPlus

DVP2880

Get sharper, clearer pictures

with HDMI 1080p upscaling

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player DVP2880 delivers your movies and music entertainment experience.

Bring audio and video to life

- CinemaPlus for better, sharper and clearer images
- HDMI 1080p upscales to high definition for sharper pictures
- Screen Fit for optimal viewing every time

Easy to use

- EasyLink to control all HDMI CEC devices via a single remote

Play all your movies and music

- DivX Ultra Certified for enhanced DivX video playback
- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG
- ProReader Drive for smooth playback on virtually any disc

Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives


PHILIPS

DVD player
HDMI 1080p USB 2.0, DivX Ultra, CinemaPlus

DVP2880/94

Highlights

CinemaPlus

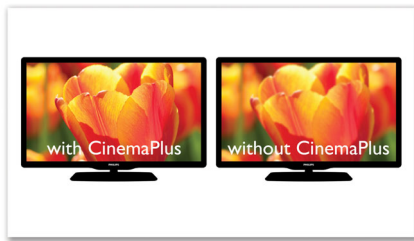

Feast your eyes on images that are razor sharp and a match for reality. An intelligent algorithm, CinemaPlus goes right down to each pixel in each frame, analyzing it before optimizing sharpness and color stability. The results are obvious - you get to see more details, pictures become crystal clear and everything looks superbly natural. Movie nights will never be the same again.

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Multimedia DivX


Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

Screen Fit

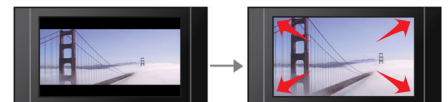

Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full-screen



Specifications

File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: avi, divx, mpeg, mpg

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD

Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Slideshow with MP3 playback, Zoom

Audio Playback

- Compression format: Dolby Digital, MP3, PCM, WMA
- MP3 bit rates: 8 - 320 kbps
- WMA bit rates: 32 - 192 kbps

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video Upscaling(720p, 1080i/p)

Connectivity

- Front Connections: USB 2.0
- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, HDMI output

Convenience

- Child Protection: Child Lock, Parental Control

Power

- Power consumption: < 11 W
- Power supply: 220-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

Sound

- Crosstalk (1kHz): > 100 dB
- D/A converter: 24 bit, 192 kHz
- Distortion and Noise (1kHz): > 85 dB
- Dynamic Range (1kHz): > 90 dB
- Frequency response: 30-20000 Hz
- Signal to noise ratio: > 100 dB
- Sound System: Dolby Digital

Accessories

- Included accessories: AAA Battery (x1), Audio/Video cable, Remote Control, User Manual, Warranty Leaflet, World Wide Warranty leaflet

Dimensions

- Product (W x H x D): 270 x 37.5 x 201 mm
- Product weight: 1 kg
- Packaging (W x H x D): 316 x 77 x 280 mm
- Weight incl. Packaging: 1.38 kg

Product dimensions

- Product dimensions (W x H x D): 27 x 3.75 x 21 cm
- Weight: 0.8775 kg

Packaging dimensions

- Number of products included: 1
- Packaging type: Carton
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 28 x 31.6 x 7.7 cm
- Gross weight: 1.4 kg
- Nett weight: 1.061 kg
- Tare weight: 0.339 kg
- EAN: 48 95185 61193 8

Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 31.6 x 28 x 7.7 cm
- Gross weight: 1.4 kg
- Nett weight: 1.061 kg
- Tare weight: 0.339 kg
- EAN: 48 95185 61193 8



Issue date 2017-04-04

Version: 1.2.6

12 NC: 8670 001 27349
EAN: 48 95185 61193 8

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com