

Philips
Micro music system

120W

DualDock
Dock for iPod/iPhone

DCM3160



Rich and powerful sound

Fill your home with tunes from your iPod/iPhone with Philips DualDock via Lightning & 30pin connectors. Let the trendy Philips Micro sound system set your music free with details.

Enjoy your music from multiple sources

- DualDock to charge & play iPod/iPhone (Lightning & 30-pin)
- Play MP3-CD, CD and CD-R/RW
- USB Direct for easy MP3 music playback
- Audio-in for portable music playback

Enrich your sound experience

- Dynamic Bass Boost for deep and dramatic sound
- Digital Sound Control
- 120W RMS total output power


Easy to use

- Motorized CD loader for convenience access
- Radio Data System for station information and data services

PHILIPS

Highlights

120W RMS

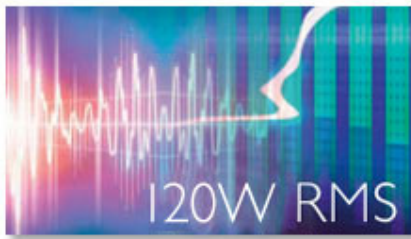

This system has 120W RMS total output power. RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.

Audio-in




The Audio in connectivity allows direct playback of Audio in content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound

quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

Digital Sound Control

Digital Sound Control offers you a choice of pre-set balanced, clear, powerful, warm and bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

DualDock to charge & play

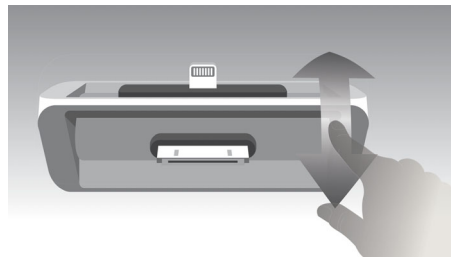

DualDock to charge & play iPod/iPhone (Lightning & 30-pin)

Play MP3-CD, CD and CD-R/RW



MP3 stands for "MPEG 1 Audio layer-7.6 cm (3)". MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. MP3 has become the standard audio compression format used on the world wide web, allowing quick and easy audio file transfer.

USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.



Specifications

Sound

- Sound Enhancement: Digital Sound Control, Dynamic Bass Boost
- Maximum output power (RMS): 120W

Loudspeakers

- Loudspeaker types: Dome tweeter
- Main Speaker: 2 way, wOOx Bass Radiator

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, USB flash drive
- Disc Playback Modes: Repeat/one/all/program, Shuffle Play, 20-Track Programmable, Fast Forward/Backward, Next/Previous Track Search
- Loader Type: Motorised
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Shuffle, Stop
- Cradle playback mode: Charging iPod, Charging iPhone, Fast forward and backward, Next and Previous track, Play and Pause, Menu, Up and Down

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Tuner Enhancements: Auto Store
- RDS: Program Type, Station Name, Radio Text
- Station presets: 20
- Antenna: FM antenna (75 ohm)

Connectivity

- USB: USB host
- Headphone: 3.5 mm
- 3.5mm stereo line in: Audio in
- Rear Connections: AUX in, FM Antenna
- Other connections: FM Antenna

Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm, Sleep timer
- Clock: On main display, sleep timer
- Display Type: VFD display
- Charging device: iPhone, iPod

Accessories

- Included accessories: AC Power Cord, FM antenna
- User Manual: 16 languages
- Quick start guide: English, German, Dutch, French, Spanish, Italian
- Remote control

Dimensions

- Main speaker dimensions (W x H x D): 140 x 304 x 215 mm
- Set dimensions (W x H x D): 230 x 235 x 196 mm
- Packaging dimensions (W x H x D): 514 x 360 x 290 mm
- Gross weight: 8.8 kg
- Net weight: 7.6 kg

Power

- Power supply: 220-240V, 50Hz

iPhone compatibility

- Compatible with: iPhone 5

iPod compatibility

- Compatible with: iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod nano 6th generation, iPod touch, iPod touch 2nd Generation, iPod touch 3rd generation, iPod touch 4th generation, iPod 5th generation, iPod 6th Generation



Issue date 2015-09-04

Version: 1.0.2

12 NC: 8670 001 22342
EAN: 48 95185 60573 9

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com