

Philips 2.1 3D Blu-ray Home theater

Smart TV HDMI ARC 300W



HTB3260



Pure surround sound

with 3D Blu-ray

With the Philips home cinema system HTB3260 you enjoy your movies, music and TV experience in great surround sound by exposed speakers drivers and in Full HD 1080p with 3D Blu-ray Disc playback.

Great listening experience

- 300W RMS power delivers great sound for movies and music
- · Dolby TrueHD and DTS-HD for high fidelity surround sound
- Virtual Surround Sound for a realistic movie experience
- Exposed speaker drivers for powerful surround sound

Simply enjoy all your entertainment

- · Audio in to enjoy music from iPod/iPhone/MP3 player
- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- WiFi ready for easy access to all your entertainment
- Access your favorite YouTube videos & Picasa photos easily
- EasyLink to control all HDMI CEC devices via a single remote
- DivX Plus HD Certified for high definition DivX playback

Designed to enhance your cinema at home

• Modern design to complement your home environment



Highlights

Full HD 3D Blu-ray




Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Bluray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

300W RMS power



300W RMS power delivers great sound for movies and music

Virtual Surround Sound

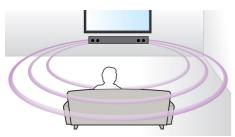

Philips Virtual Surround Sound produces rich and immersive surround sound from less than

five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multichannel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet direct to your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Dolby TrueHD and DTS-HD



Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

Access YouTube and Picasa



Get YouTube videos and Picasa photos on your TV now. Enjoy the huge collection of online videos on a larger screen, without even having to turn on your computer. Simply ensure that your Blu-ray player or Home cinema system is connected to the Internet, either wirelessly over Wi-Fi or with a cable to the LAN connector - then sit back and enjoy the best of YouTube & Picasa.

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.



















Specifications

Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, dts ES, DTS-HD High Resolution Audio, DTS-HD Master Audio Essential
- Satellite speaker output power: 2 x 75 W
- Subwoofer output power: 150 W
- Total Power RMS @ 30% THD: 300 W

Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Drivers per Satellite speaker: 1 x 2.5" woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150 20k Hz
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 150 Hz
- Subwoofer impedance: 8 ohm

Connectivity

- Rear Connections: AUX in, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital optical in, Ethernet, HDMI 1.4 output (ARC), Fixed FM Antenna
- Front Connections: Music iLINK, USB

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color
- Online services: Picasa, YouTube

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Optical Playback Media

 Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- · Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- · Video: avi, divx, mkv, mp4, mpeg, mpg

Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 320kbps

Video Playback

 Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Picture/Display

 Picture enhancement: HD (720p, 1080i, 1080p/ 24fps), Progressive scan, Video upscaling

Power

- Power consumption: 60 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: 0.5 W

Dimensions

- Main Unit (W \times H \times D): 360 \times 58 \times 325 mm
- Main Unit Weight: 2.40 kg
- Satellite Speaker (W x H x D): 85 x 160 x 95 mm
- Satellite Speaker Weight: 0.35 kg
- Satellite Speaker Cable length: 3 m
- Subwoofer (W x H x D): $\overline{195}$ x $\overline{265}$ x $\overline{265}$ mm
- Subwoofer cable length: 2 m
- Subwoofer Weight: 3.20 kg
- Packaging (W x H x D): 470 x 345 x 377 mm
- Weight incl. Packaging: 8.7 kg

Accessories

- Compatible accessories: STS3001 Speaker stand, WUB1110 Wi-Fi USB Adaptor
- Included accessories: 2 x AAA Batteries, Power cord, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User manual on CD-ROM, World Wide Warranty leaflet, Quick start guide



Issue date 2015-09-03

Version: 8.2.7

© 2015 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

12 NC: 8670 000 91128 EAN: 87 12581 64849 7

www.philips.com