



Philips
Wireless multiroom music
system

wall-mountable

CD, MP3-CD, USB, FM
Bluetooth®
with MULTIPAIR



BM50B

One tap to play music in every room

Philips izzy music system plays music via Bluetooth, CD/USB & FM. With a tap of button, music from smartphones, CD/USB & radio stations will play simultaneously to any izzy speaker in any room. Easy setup with no router, password or app.

Enrich your sound experience

- 40W RMS maximum output power
- Digital Sound Control for optimized music style settings

Enjoy your music from multiple sources

- Digital tuning with preset stations for extra convenience
- Play MP3-CD, CD and CD-R/RW
- USB Direct for easy MP3 music playback
- Swap music instantly between 2 devices with MULTIPAIR


Philips izzylink™ for multiroom music

- Group up to 5 izzy with izzylink™ for multiroom enjoyment
- One tap to set up izzylink™, no router, no password, no apps
- Stream all your music source, CD, FM, USB, via izzylink™
- Play music in one room wirelessly via Bluetooth
- Change the master speaker in the group with just one tap

PHILIPS

Highlights

izzylink™

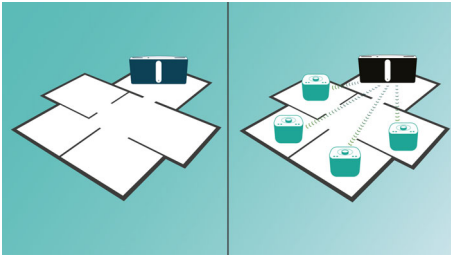

izzylink™ is a wireless technology that uses the IEEE 802.11n standard to enable the link-up of multiple speakers to form a wireless network. The network connects up to five speakers without the need of a router, Wi-Fi password, or any smart device mobile app to set it up. You can add izzy speakers to the network easily to enjoy music playing at the same time in different rooms. Each speaker can still be switched between single mode for individual use or group mode for multiroom music with one tap.

One tap to set up izzylink™



No router, no password, no apps needed for set up. Just long press the "GROUP" button on

two speakers to set up for the first time. Repeat to add a 3rd, 4th, or 5th speaker. Each long press of the "Group" button adds one new speaker at a time. Multiroom music has never been easier. Once complete, the izzylink™ network will be stored even when the speaker is unplugged.

Music from multiple sources



izzylink™ expands all the music source, your favorite apps from smartphone, tablet or computer, CDs, FM radio stations, USB, Audio-in wirelessly to every room.


Play music in one room



Philips izzy speaker lets you stream all your favorite music from your phone, tablet or

computer, no matter which music or radio app you use.


Switch the lead speaker easily

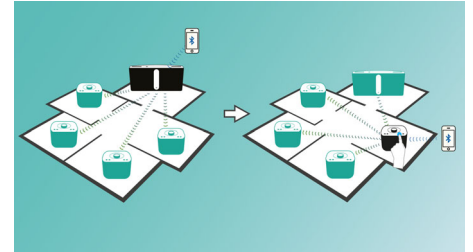

In each izzylink™ group, any individual speaker can be the master, streaming music to the others. When you want to take the lead to share your own music, press the Bluetooth button on the speaker in your room and share that music from your device instantly. Other speakers in the same izzylink™ group will play the same music in sync at the same time. Sharing music with each other is just that easy.

Swap music between 2 devices

Pair with 2 smart devices simultaneously so you can stream music from whichever device you want, without the hassle of un-pairing and re-pairing. To play a song on a different device, pause the song on the original device first and then play the new song on a different device to take over. It's perfect for sharing music with friends, parties, or just playing different songs stored on different devices. Let friends and family pair at the same time, so you can swap between each other's music easily.



Specifications

Sound

- Output power (RMS): 40 W
- Sound Enhancement: Digital Sound Control
- Volume control: up/down

Loudspeakers

- No. of built-in speakers: 2
- Speaker drivers: 2.5" woofer
- Speaker types: bass reflex speaker system

Tuner/Reception/Transmission

- Tuner bands: FM stereo, FM mono
- Station presets: 20
- Antenna: FM antenna (75 ohm)

Connectivity

- USB: USB host
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)

Convenience

- Alarms: CD Alarm, USB alarm
- Clock: On main display, sleep timer
- Loader type: slot
- Display type: LED display

Accessories

- Included accessories: FM antenna, World Wide Warranty leaflet, Quick Use Guide
- Remote control
- AC/DC Adaptor: 100-240V

Dimensions

- Packaging dimensions (WxDxH): 555 x 268 x 150 mm
- Product dimensions (WxDxH): 500 x 63 x 218 mm
- Product weight: 2.56 kg
- Weight incl. Packaging: 4.3 kg

Power

- Power supply: 110-240V, 50/60 Hz

Audio playback

- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Playback media: CD, MP3-CD, USB flash drive, CD-R/RW
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop

Compatibility

- iPod touch: 3rd generation or later
- iPad: iPad 1, iPad 2, iPad Air, iPad Air 2, iPad mini, iPad mini 2, iPad mini 3, iPad with Retina display, new iPad
- iPhone: iPhone 5C, iPhone 5S, iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 6, iPhone 6 Plus
- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above



Issue date 2016-03-04

Version: 5.1.6

12 NC: 8670 001 30561
EAN: 87 12581 73588 3

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

