




Philips  
wireless portable speaker

Bluetooth® and NFC  
with MULTIPAIR  
Rechargeable battery  
Black

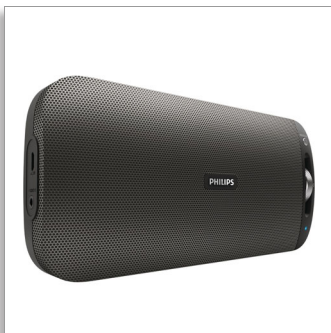

BT3600B

## Small size, great sound

Great sound merge in a body so slim it can be slipped in everywhere. Built-in NFC makes device pairing as easy as a tap, and Bluetooth multipair lets you swap music from two different devices instantly.

### Impressive sound

- Advanced audio performance with a slim design
- Impressive with 10W RMS
- Anti-clipping function for loud, distortion free music

### Simplicity in use

- Wireless music streaming via Bluetooth
- Swap music instantly between 2 devices with MULTIPAIR
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Built-in microphone for hands-free phone calls
- Audio-in for easy connection to almost any electronic device

### Designed for grab and go

- Built-in rechargeable battery for music playback anywhere


# PHILIPS

wireless portable speaker  
Bluetooth® and NFC with MULTIPAIR, Rechargeable battery, Black

BT3600B/00

# Highlights

## Wireless music streaming

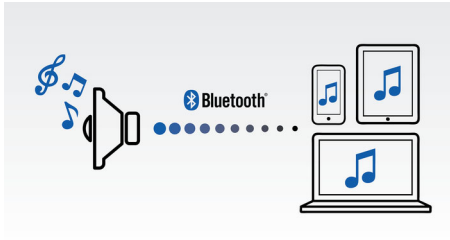


Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## Swap music between 2 devices


Pair with 2 smart devices simultaneously so you can stream music from whichever device you want, without the hassle of un-pairing and re-pairing. To play a song on a different device, pause the song on the original device first and then play the new song on a different device to take over. It's perfect for sharing music with friends, parties, or just playing different songs stored on different devices. Let friends and family pair at the same time, so you can swap between each other's music easily.

## Anti-clipping function

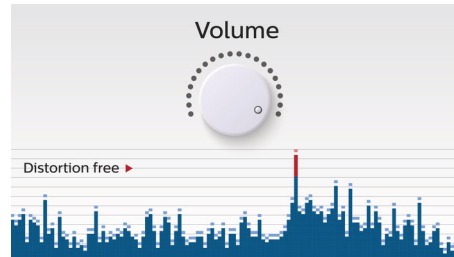

Anti-Clipping lets you play music louder and keeps it high quality, even when the battery is low. It accepts the input signals from 300mV to 1000mV and keeps your speakers safe from damage by distortion. This speaker handles anti-clipping through a dedicated audio limiter IC. This monitors the musical signal as it goes through the amplifier and keeps peaks within the amp's range, preventing the audio distortion caused by clipping without affecting loudness. A speaker's ability to reproduce musical peaks decreases along with battery power, yet anti-clipping reduces peaks caused by low battery.

## Built-in rechargeable battery

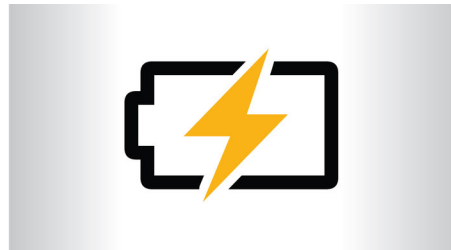

Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of entangled power cords and the inconvenient

search for an electrical outlet. Enjoy great music with the freedom of portability now.

## Built-in microphone


With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

## Audio-in



Audio-in for easy connection to almost any electronic device

## NFC technology

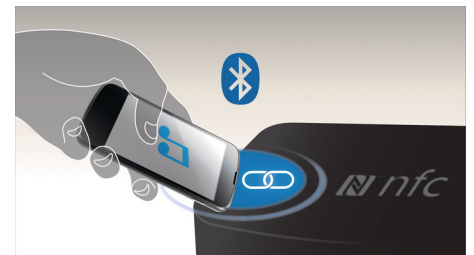

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

# Specifications

## Compatibility

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus
- iPod touch: 3rd generation or later
- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other music devices: with Bluetooth 2.1 or above

## Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 10M or 30FT
- NFC: Tap-to-pair Bluetooth; works with Android 4.0 or above, and Windows phone 8 or above
- Audio in (3.5mm)

## Convenience

- Built-in microphone: for speaker conference

## Sound

- Output power (RMS): 10W
- Sound System: Stereo

## Loudspeakers

- Speaker drivers: 2 x 1.5"

## Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: 10 hr

## Accessories

- Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

## Dimensions

- Product dimensions (WxDxH): 207 x 34 x 97 mm
- Packaging dimensions (WxDxH): 230 x 46 x 175 mm
- Product weight: 0.43 kg
- Weight incl. Packaging: 0.59 kg



Issue date 2020-07-08

Version: 1.0.8

12 NC: 8670 001 22574  
EAN: 48 95185 60590 6

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)