




Philips
Portable video player

17.8 cm (7") LCD
3hr playtime

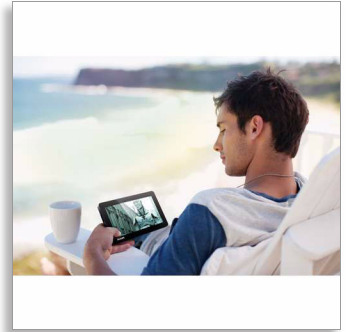

PV7005



Enjoy convenient videos on the go

with touch screen

Enjoy movies and more on the go with the Philips PV7005 Portable video player. Intuitive control and navigation with 7" touch screen. Plays virtually all digital media files. Watch video on the TV with the HDMI connection.

Play your movies, music and photos on the go

- 17.8 cm/7" TFT color LCD display in 16:9 wide screen format
- Full touch screen for a great viewing experience
- 800x480 resolution
- Plays virtually all digital media formats
- DivX Certified for standard DivX video playback
- RMVB video playback

Ultimate on-the-go convenience

- Enjoy up to 3 hours playback with a built-in battery*
- 4GB* built-in memory
- USB connection for video, photo and music playback
- Micro SD card slot for up to 32 GB of 16-hour HD videos
- Direct TV connection via HDMI for viewing your videos in HD
- Protective pouch included



PHILIPS

Highlights

18 cm/7" TFT color LCD (16:9)

The color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints. The 16:9 widescreen aspect ratio is standard for universal to high-definition digital television. A native 16:9 aspect ratio means video display without bars at top and bottom of the picture and without the quality loss that comes from scaling, altering an image to fit on a different screen size.

DivX Certified

With DivX[®] support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films.

The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs, USB storage and other memory cards for playback on your DivX Certified[®] Philips device.

Full touch screen

Operating your digital photo album is as easy as a flick or a touch of your finger. The full touchscreen lets you swap photos around, or add and delete photos quickly and easily. The icon-driven menu makes the Philips Digital photo frame simple to use; the touchscreen makes it a joy to view and experience.

RMVB video playback

This Philips player supports video playback using RMVB, a digital video file format which is developed by Realnetworks[™]. Typically used for multimedia content, files using this format have the file extension ".rmvb". The digital format ensures high quality of still images and substantially improves the quality of movement images, hence enabling an optimal equilibrium between image quality and file size.

USB connection

Simply plug in your portable USB device to the USB connector on your Philips portable DVD player and playback your digital videos, music or photos directly. Now you can share your favorite moments with family and friends.



Specifications

Picture/Display

- Diagonal screen size: 7 inch / 17.8 cm
- Resolution: 800x480 pixels
- Touch-sensitive screen: Resistive touch-screen
- Aspect ratio: 16:9

Video Playback

- Compression formats: Divx, AVCHD, AVI, H.263, H.264, MKV, MPEG1, MPEG2, MPEG4 (.avi files only), MPEG4 (AVC), RMVB, WMV

Audio Playback

- Compression format: MP3, WMA, WAV
- File systems supported: ISO-9660, Joliet
- ID3 Tag support: Song title, artist, album
- WMA bit rates: 5-192 kbps

Still Picture Playback

- Picture Compression Format: JPEG

Connectivity

- HDMI: Mini HDMI
- Headphone jack: 3.5mm Stereo Headphone
- SD/MMC card slot: Micro SD
- USB: High speed mini USB

Sound

- Built-in speakers

Convenience

- Battery charging indication
- Firmware upgradeable
- Battery low indication
- Function: Keypad lock

Power

- Battery lifetime: Up to 3 hours *
- Battery Type: Built-in battery, LI-Polymer
- Rechargeable: Yes, via USB

Storage Media

- Built-in memory (RAM): 4 GB

System Requirements

- PC OS: Windows XP (SP3 or higher)/ Vista/ 7

Accessories

- Car kit: cigarette outlet adaptor, 12vDC
- Included accessories: Quick start guide
- Pouch: Pouch for protective and stand
- Remote control: Slim remote
- USB cable: USB cable for data and charge

Product dimensions

- Product dimensions (W x H x D):
18,4 x 11,6 x 1,3 cm
- Weight: 0,297 kg

Packaging dimensions

- Type of shelf placement: Dummy
- Packaging type: Dummy
- Number of products included: 1
- Packaging dimensions (W x H x D):
24,4 x 5,3 x 18,7 cm
- Gross weight: 0,84 kg
- Nett weight: 0,67 kg
- Tare weight: 0,17 kg
- EAN: 87 12581 61184 2

Outer Carton

- Number of consumer packagings: 5
- Outer carton (L x W x H): 28 x 25 x 19,6 cm
- Gross weight: 4,43 kg
- Nett weight: 3,35 kg
- Tare weight: 1,08 kg
- GTIN: 1 87 12581 61184 9



Issue date 2016-12-14

Version: 1.1.7

12 NC: 8670 000 79655
EAN: 87 12581 61184 2

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.
* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.
* Battery life varies by use and settings.
* RMVB is a trademark or a registered trademark of RealNetworks, Inc.