




Philips  
Micro music system

with Lightning connector  
for iPod/iPhone  
CD, MP3-CD, USB, FM  
50W max, Bass radiator

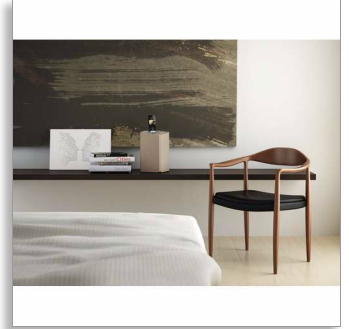

DCM3155

## Sound that fits your home

Obsessed with sound

Compatible with the iPhone 5's Lightning connector, this Philips micro sound system features wOOx technology, delivering powerful bass. The angled speaker design gives a wide stereo audio experience and the mono block design fits any home.

### Enrich your sound experience

- wOOx™ loudspeaker Technology for deep and powerful bass
- 50W RMS maximum output power

### Enjoy your music from multiple sources

- Fast charging and play music via Lightning connector
- Play MP3/WMA-CD, CD and CD-RW
- USB Direct for MP3/WMA music playback
- Audio-in for portable music playback
- Digital tuning with preset stations for extra convenience

### Design that blends into your interior

- Mono block design to fit in anywhere at home

# PHILIPS

Micro music system  
with Lightning connector for iPod/iPhone, CD, MP3-CD, USB, FM, 50W max, Bass radiator

## Highlights

### Play and charge via Lightning



Enjoy your favorite music while charging your iPod/iPhone via the new Lightning connector! Just dock it directly on the speaker to play your hand-picked tunes in superb sound. It also charges your device quickly while playing, so you don't have to work about the battery running out.

### wOOx™ Technology



wOOx technology is a revolutionary loudspeaker concept that allows you to hear

and feel profoundly deep bass that is richer than any other audio system. Special speaker drivers work in harmony with the wOOx bass radiator, and precise tuning between the main driver and the tweeter ensures smooth transitions from low-mid to high frequencies. Dual suspension and a totally symmetrical sandwich construction deliver low and precise base without noticeable distortion. wOOx produces exceptionally deep and dynamic bass by using the speaker box full volume to truly magnify the impact of the music.

### USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

### Audio-in



The Audio in connectivity allows direct playback of Audio in content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.



## Micro music system

with Lightning connector for iPod/iPhone, CD, MP3-CD, USB, FM, 50W max, Bass radiator

# Specifications

### Sound

- Sound enhancement: wOOx™ Technology, digital sound control
- Volume control: up/down
- Maximum output power (RMS): 50W

### Loudspeakers

- No. of built-in speakers: 2
- Speaker drivers: 2.5" woofer

### Audio playback

- Disc playback modes: fast forward/backward, next/previous track search, Repeat
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive, WMA-CD
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, stop
- Docking playback modes: fast forward and backward, menu, up and down, next and previous track, play and pause
- Others: ID3-tag support

### Tuner/Reception/Transmission

- Tuner bands: FM mono, FM stereo
- Station presets: 20
- Antenna: FM antenna
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)

### Connectivity

- USB: USB host
- Audio in (3.5mm)

### Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm, iPod Alarm
- Clock: On main display, sleep timer
- Charging device: iPhone, iPod
- Display Type: LCD
- Loader type: Front, Slot-in

### Accessories

- Included accessories: AC Power Cord, User Manual
- Remote control: 21-keys remote

### Dimensions

- Set dimensions (W x H x D): 238 x 345 x 234 mm
- Packaging width: 238 mm
- Packaging height: 244 mm
- Packaging depth: 445 mm
- Gross weight: 3.6 kg
- Net weight: 2.6 kg

### Power

- Power supply: 110-240V, 50/60 Hz

### iPod compatibility

- Compatible with: iPod nano 7th generation, iPod touch 5th generation

### iPhone compatibility

- Compatible with: iPhone 5



Issue date 2014-06-12

Version: 2.0.8

12 NC: 8670 000 95168  
EAN: 87 12581 66003 1

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)