



Philips
Design cordless phone

60-min answering machine

2.0" display/black backlight
Speakerphone
With answering machine

Redefining the home phone

Impeccable craftsmanship meets iconic style with the Philips M8 cordless phone.

Advanced manufacturing transforms premium materials into a work of art, heralding a new class of designer home phone that is a pleasure to behold.



M8881W

Exquisite design with high quality execution

- Sophisticated design with genuine metal highlights
- Sensually curved handset for pure balance and comfort
- Calibrated, seamlessly integrated keys for precise dialling
- Charge handset either way around
- Smart, nicely designed cable management

Ultimate calling experience

- High resolution 5.1 cm (2") TFT colour display
- Advanced sound testing and tuning for superb voice quality
- Handset speakerphone allows you to talk hands-free
- Up to a 60 min. message on your answering machine
- Privacy settings: call barring, silence mode with filtering
- Talk for up to 18 hours on a single charge

Eco-conscious product

- Low radiation (ECO and ECO+ modes) and power consumption

PHILIPS

Design cordless phone
60-min answering machine 2.0" display/black backlight, Speakerphone, With answering machine

M8881W/10

Highlights

Eco-conscious model with ECO+



Philips phones are energy efficient and designed to be respectful to the environment. When ECO mode is activated, the emitted radiation is reduced by up to 60%, and up to 95% when the phone is charging. With ECO+ mode activation, the radiation drops to zero.

Calibrated keypad



The calibrated keypad allows you to clearly feel every keystroke whenever you are dialling a number or entering a phonebook contact. Detailed study of keypad materials and structures, as well as extensive user tests results in the right balance between the key pressing force and the key response to ensure precise dialling.

Comfortable handset

Sensually curved handset for pure balance and comfort

Handset speakerphone



Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you

to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

Hassle-free charging



For reliability and convenience the handset can be charged in both directions of the docking station.

Natural materials



The design of the Philips M8 features genuine die-cast metal that has been immaculately crafted and brushed for a truly refined look and feel.


Privacy modes



Value your privacy and quiet at home? Easily disable the ringtones for specific "no call" times to enjoy peace and silence. An additional filtering function allows the ring still to sound when you receive a call from any number chosen from the phone book, making sure that only the "right" people can reach you. Thanks to call barring you can avoid expensive phone

bill surprises by blocking calls to specific numbers, numbers starting with certain digits (for example pay-per-call numbers) or specific area codes.

Smart cable management

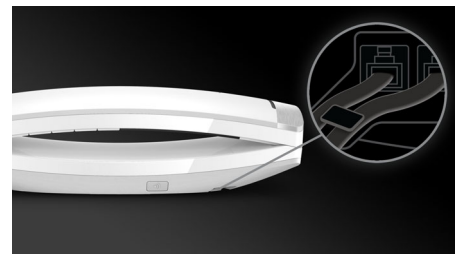

The smart cable management system cleverly hides the wires from sight. Intelligently designed concealed sockets and an internal cable guide ensure everything is clutter-free and neatly tucked away.

Up to 60 min. message



With up to 60 minutes recording time on your answering machine, you'll never miss an important message.

Specifications

Sound

- HQ-Sound
- Sound Profile: MySound
- Ringtones on handset: 10 HQ ringtones

Picture/Display

- Display size: 5.1 cm/2.0"
- Display type: TFT 16-bit colour
- Backlight: Yes
- Backlight colour: White

Answering Machine

- Recording time capacity: Up to 60 minutes
- Pre-recorded OGM
- Answering machine control: Control from handset

Convenience

- Menu structure in the handset: Icon Menu
- Speakerphone — talk hands-free
- Personalisation: Silence mode and Night mode
- Call barring: Restrict the phone from making specific outgoing calls
- Signal strength indicator: 3-bar indicator
- Battery level indicator: 5-bar battery icon
- Intercom — multiple handsets
- Room monitoring
- Date/Time display
- Alarm Clock
- Battery charge indication
- Signal strength indication
- Programmable hot keys: Keys 1 to 9
- Call Management: Call Waiting*, Caller ID*, Microphone mute, Missed Calls, Received Calls
- Keypad lock
- Key tone on/off
- Auto hang up
- Multi-base capability: 1
- Multi-handset capability: Up to 4 handset
- Number of keys: 23
- Backlit keypad: White
- Enlarge dialling digit
- Up to 18 hrs talk time
- Up to 250 hrs standby time

- Charge time: 8 hours
- Line cord length: 1.8 m
- Power cord length: 1.8 m
- Range: Open field <300 m; indoor <50 m
- Ease of Use: Full Duplex Hands-free

Memory Capacity

- VIP Caller Identification
- Phonebook: 250 names and numbers
- Redial List Capacity: 20 entries
- Call log entries: 50 entries
- Phonebook store in the base

Power

- Battery capacity: 550 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240 V ~50/60 Hz
- Power Consumption: <0.75 W

Security

- Transmission encryption: Yes

Network Features

- Compatible: GAP
- Network service menu: Available only for operator version

SAR Value

- Philips handsets: <0.1 W/kg

Eco Design

- Eco+

Packaging dimensions

- EAN: 87 12581 71441 3
- Packaging dimensions (W x H x D): 31.8 x 9.5 x 8 cm
- Gross weight: 0.611 kg
- Net weight: 0.4736 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.1374 kg
- Type of shelf placement: Laying



Issue date 2015-06-08

Version: 3.1.4

12 NC: 8670 001 12937
EAN: 87 12581 71441 3

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com