

Philips
DVD player

DVP3522



Simply plays it all

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Play all your movies and music

- Plays MP3, WMA and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW

Bring audio and video to life

- Progressive Scan component video for optimized image quality
- 12-bit/108MHz video processing for sharp and natural images
- Screen Fit for optimal viewing every time

Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drive

Easy to use

- One-touch MP3 creation directly from CDs onto USB sticks
- My Wallpaper for a personalized welcome screen

PHILIPS

Specifications

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: > 90
- Distortion and Noise (1kHz): > 65 dB
- Crosstalk (1kHz): > 70 dB
- Dynamic Range (1kHz): > 80 dB
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- Compression format: MP3, Dolby Digital, PCM, WMA
- MP3 bit rates: 32 - 320 kbps

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Zoom,

Slideshow, Slideshow with MP3 playback

Connectivity

- Front / Side connections: USB
- Rear Connections: Analog audio Left/Right out, ComponentVideo out Progressive, Composite video (CVBS) output, Digital coaxial out

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: Brazilian Portuguese, English, Mexican Spanish

Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 10 W
- Standby power consumption: < 1W

Accessories

- Included accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, World Wide Warranty leaflet, User Manual, VDE to 2-pin Flat Adaptor, Power cord

Dimensions


- Packaging dimensions (W x H x D): 400 x 80 x 282 mm
- Set dimensions (W x H x D): 360 x 39 x 209 mm

Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: JPEG Still pictures, MP3

Highlights

Hi-Speed USB 2.0 Link

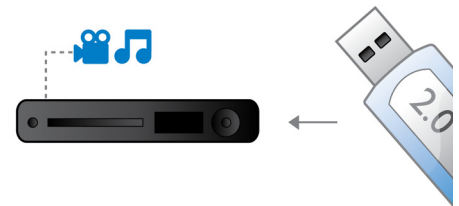

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

One-touch MP3 creation

Convert the contents of your favorite CDs to MP3 files on your Philips product, and store it directly on a thumbdrive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC, and even while the CD is playing.

Screen Fit

Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full-screen



Issue date 2014-02-12

Version: 3.4.4

12 NC: 8670 000 62464
EAN: 87 12581 54017 3

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com