



Philips Fidelio  
SoundCurve wireless  
speaker

with AirPlay



DS8800W

## Experience true fidelity

Obsessed with sound

Get more out of your music, gaming and video experience now. Smart and chic, this speaker delivers stunning sound and ensures convenience with wireless streaming from iPod Touch, iPhone, iPad and iTunes via AirPlay.

### Exceptional sound performance

- SoundCurve for superb crystal-clear sound
- FullSound enhances sound detail for rich and powerful sound
- Bass-reflex design for deep, tight bass reproduction
- 30W RMS total output power

### Chic and classy

- Stylish design in an aluminum and fabric finish

### Advanced versatility

- Stream music with AirPlay wireless technology
- Charge your iPod/iPhone/iPad via USB port
- AUX-in for easy connection to almost any electronic device


### Intuitive control

- SoundStudio app for complete control of audio settings
- Remote control complements speaker design and finishing

**PHILIPS**  
Fidelio


# Highlights

## SoundCurve

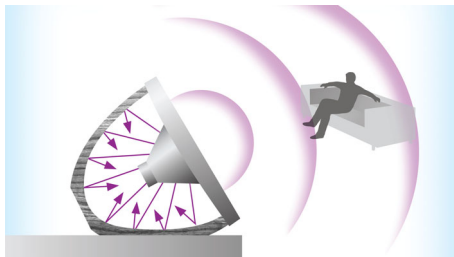

The carefully designed curved back cover of this Philips docking speaker creates a highly effective acoustic structure for sound reproduction. Its clean curve enforces the rigidity of the speaker cabinet, dramatically reducing internal resonance and eliminating the vibration and distortion of sound. You get to enjoy superb crystal-clear sound in stunning looking speakers.

## FullSound™

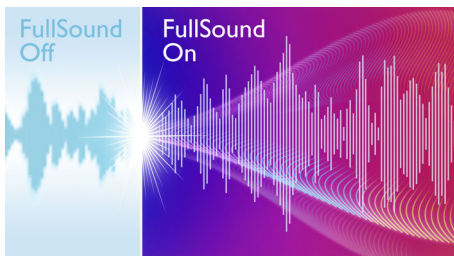

Philips' proprietary FullSound technology uses latest-generation Digital Signal Processing to faithfully enhance music rendering. Music content is dynamically analyzed and optimized to let you experience music with great detail and warmth.

## Bass-reflex design


Bass-reflex acoustic load uses a bass pipe tuned to the acoustic volume of the speaker box, in order to reproduce deep bass from compact enclosures. The carefully designed profiled bass-pipe helps air flow and allows for deep and impactful bass, even at loud volumes while minimizing air turbulence that may cause distortion.

## AirPlay wireless technology



AirPlay lets you stream your entire iTunes music collection to your Fidelio docking stations. It plays wirelessly from the iTunes program on your computer, iPhone, iPad or iPod Touch - to any AirPlay-enabled speaker in your home. All you have to do is ensure your speakers are connected to your Wi-Fi network. AirPlay also lets you play simultaneously on every speaker in every room. Get your favorite tunes to follow you whichever room you go.

## SoundStudio App

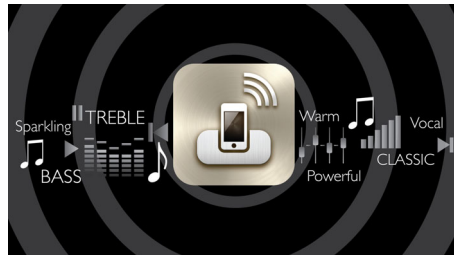

Have music the way you like it now. SoundStudio truly puts the power over your music into the palm of your hands. It lets you change every aspect of sound, using only your iPhone, with controls that are intuitive and simple. Now you can tweak, tailor and create your desired sound experience and have your favorite songs come to new life. SoundStudio also lets you listen to thousands of Internet radio stations worldwide, broadening your music experience even further.

## USB charging

This docking device is equipped with a USB port which allows you to charge your iPod, iPhone or iPad.

# Specifications

## Compatibility

- Compatible with: all iPod, iPhone and iPad

## iPod/iPhone/iPad App

- App name: SoundStudio, Free download from App store
- Compatibility: iPod touch, iPhone, iPad iOS 4.3 or later

## Loudspeakers

- Speaker drivers: 2 x 3" / 8cm full-range driver
- Output power (RMS): 30W

## Accessories

- Included accessories: Remote Control, 3.5mm stereo line in cable, AC Power Cord, Quick start guide, Warranty certificate, World Wide Warranty leaflet

## Connectivity

- AirPlay
- Aux in
- USB: for charging iPod/iPhone/iPad

## Dimensions

- Product dimensions (WxDxH): 455 x 150 x 165 mm
- Packaging dimensions (WxDxH): 525 x 225 x 215 mm
- Product weight: 2.5 kg
- Weight incl. Packaging: 3.5 kg

## Power

- Power supply: 100 - 240V AC, 50/60Hz



Issue date 2014-03-14

Version: 6.0.6

12 NC: 8670 000 75769  
EAN: 00 60958 52138 69

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)