




PHILIPS

AZ1330D

1 Choosing Power Supply


- a Connect the AC power cord to the AC~ Mains inlet and the wall socket.
 OR-
- b Open the **battery door** and insert 6x D batteries (not included).



R-20, UM-1 or D-cells (not included)

2 Listening to Radio

- a Press **SOURCE** repeatedly to select the tuner source.
- b Press PROGRAM for more than two seconds to program all available stations in order of waveband.
- c Press PRESET/ALBUM +- until the desired preset station is displayed.

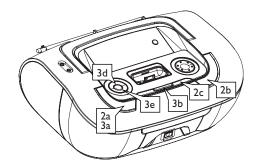

3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW. MP3-CD and WMA.

- a Press **SOURCE** repeatedly to select **CD**.
- b Open the disc door.
- c Insert a disc with the printed side facing up and close the door.
- d Press ►II to start playback.
- e To stop disc playback, press ■.


4 Playing Apple iPod using AZ1330D

- Select a correct iPod adaptor, then snap it to the dock to provide a snug fit for the player to be docked.
 - 8 dock adaptors of different type, as indicated at the back of the adaptor, are included to fit the following iPod: 20GB, 40GB, 20/30GB photo, 40/60GB photo, 30GB video, 60/80GB video, mini and nano.
- b Snap a compatible iPod into the dock connector.
 - AZ1330D will auto switch to DOCK source.
- The connected player will play automatically.
 - In the power-on and standby mode of AZ1330D, you can charge the iPod when docking.
 - The buttons (►II, I◄◄, ►►I and VOLUME) on the AZ1330D and its remote control can work only with playback of the audio contents stored on the docked player.

Tip:

Refer to the user manual supplied for detailed descriptions of "Compatible portable player", "Selecting the correct dock adaptor", "Installing the dock adaptor", and the important notes for dock operation.



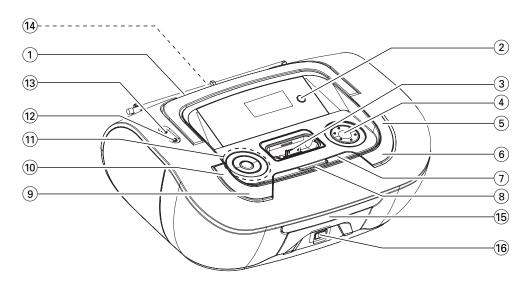

- 1 Telescopic antenna improves FM reception
- 2 DOCK selects dock source (iPod)
- 3 Dock connector- connects iPod player
- (4) **VOLUME** adjusts volume level
- (5) **MODE** selects different play modes: e.g. REPEAT or SHUFFLE (random order)
- 6 PROGRAM

For disc – programs tracks and reviews the program
For Tuner – auto searches and stores radio stations

ALBUM/PRESET +/For MP3-CD/ WMA play:

- select albums

For Tuner

- selects a preset radio station
- (8) ≜ opens/closes the disc tray
- SOURCE: selects CD/MP3-CD, iPod mode, Tuner or AUX
- 10 POWER powers on/off the system

11 - starts or pauses disc/iPod playback

For disc/ iPod play:


- skips to the beginning of a current/ previous/ later track
- fast searches backwards and forwards within a track

For Tuner:

- tunes to a radio station
- – stops disc playback;
 - erases a program

DBB - turns on/off bass enhancement

- \bigcirc \bigcirc 3.5 mm stereo headphone socket
 - **Helpful hints:** The speakers will be muted when head-phones are connected to the set.
- (3.5 mm socket)
- (4) Battery door opens to insert 6 x 1.5V R-20/ -UM1/ D-cells
- 15 Disc tray loads a disc
- 16 iR infrared sensor for remote control



Removing the insulation plastic tab before use