



Philips
Wireless speaker

Bluetooth®
20 W Output Power
12 hours play time



TAS5505

Unwind in style

Relax with the Bluetooth speaker that complements any interior. You get 12 hours of play time and rich sound with warm bass. The wool-blend speaker fabric adds a sophisticated touch and the built-in mic lets you take hands-free calls.

Beautifully simple

- Bluetooth 5.0. Up to 20 m wireless range
- Play it loud. Pair for stereo
- Built-in mic for hands-free calls
- Dimensions: 191 x 72 x 70 mm
- IPX7-rated speaker driver. For peace of mind*

Plays well in any room

- 12 hours of play time. 3.5 hours charging time
- 3.15" full-range driver. Vibrant sound
- Lanyard hole for a carrying strap or cord
- Passive radiator for strong bass

Elegant, tactile design

- Form and function in perfect harmony
- Embossed buttons for vol., stereo pairing and more
- Kvadrat speaker fabric. Designed to let the sound through

PHILIPS

Wireless speaker
Bluetooth® 20 W Output Power, 12 hours play time


Highlights

Form and function in harmony



This speaker looks great wherever you place it. Embossed buttons let you control playback, Bluetooth and more. The built-in mic lets you take hands-free calls and you can thread a carrying strap through the speaker's lanyard hole.

12 hours play time

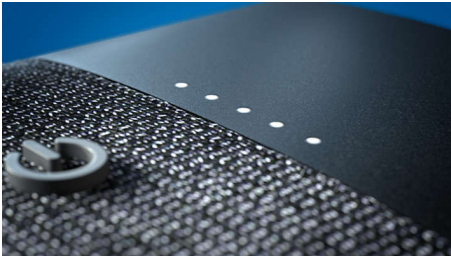

Go from working sessions to dinner parties with ease. You get 12 hours of play time from

a single charge and the wireless range is 20 m. Charging the speaker takes 3.5 hours via the included USB-C cable.

Kvadrat speaker fabric

This speaker is covered with a premium speaker fabric created by high-end manufacturer Kvadrat. The beautiful wool-blend material is acoustically transparent, allowing the sound to flow freely from the speaker into the room.

Play it loud. Pair for stereo



A passive radiator delivers strong bass. The sound from the 3.15" full-range driver stays clear even at high volume. Want to make your music sound even bigger? Pair with an identical speaker for stereo sound.

TAS5505/00

3.15" full-range driver

3.15" full-range driver. Vibrant sound

Bluetooth 5.0

Bluetooth 5.0. Up to 20 m wireless range

Built-in mic

Built-in mic for hands-free calls

Embossed buttons

Embossed buttons for vol., stereo pairing and more

Easy to carry with lanyard

Lanyard hole for a carrying strap or cord

Passive radiator

Passive radiator for strong bass

Dimensions: 191 x 72 x 70 mm

Dimensions: 191 x 72 x 70 mm

IPX7-rated speaker driver

IPX7-rated speaker driver. For peace of mind*

Specifications

Sound

- Output power (RMS): 20 W
- Sound System: Mono
- Frequency response: 20 Hz – 20 KHz
- Output power (MAX): 40 W

Design and finishing

- Colour: Grey

Loudspeakers

- Full-range driver diameter: 80 mm
- Number of full-range drivers: 1
- Driver configuration: Full range
- Number of sound channels: 1

Connectivity

- Type of cable: USB charging cable (Type-C)
- Bluetooth version: 5.0
- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 20 m or 66 ft
- DLNA Standard: No
- Multiple speaker connection
- Multiple speaker scenario: Stereo
- Multiple speaker technology: TWS

Convenience

- Automatic power off
- Ease of Installation: Automatic pairing
- Call Management: Answer/End Call
- Volume control: Digital up/down
- Water resistance: IPX7*
- Built-in microphone
- Light Effect: No
- Display screen: No
- Hands-free calling

Compatibility

- Smartphone/tablet APP control: No

Power

- Battery Capacity: 3.7 V, 4800 mAh

- Battery type: lithium (built-in)
- Input: 5 V, 2 A
- Operating time on battery: 12 hour(s)
- Charging time: 3.5 hour(s)
- Power bank: No

Packaging dimensions

- Height: 8.6 cm
- Packaging type: Box
- Width: 24.6 cm
- Depth: 12.2 cm
- Height: 3.4 inch
- Number of products included: 1
- EAN: 48 95229 10870 7
- Width: 9.7 inch
- Gross weight: 0.793 kg
- Depth: 4.8 inch
- Net weight: 0.628 kg
- Gross weight: 1.748 lb
- Net weight: 1.384 lb
- Tare weight: 0.165 kg
- Tare weight: 0.364 lb

Product dimensions

- Height: 7.2 cm
- Width: 19.1 cm
- Depth: 7 cm
- Width: 7.5 inch
- Height: 2.8 inch
- Depth: 2.8 inch
- Weight: 0.581 kg
- Weight: 1.281 lb

Accessories

- Included accessories: Quick install guide, Warranty Card, World Wide Warranty leaflet
- Cable: USB charging cable

UPC

- UPC: 8 40063 20234 4



Issue date 2024-03-24

Version: 8.2.2

EAN: 48 95229 10870 7

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The IPX7 rating means the speaker driver can be submerged for up to 30 minutes at a depth of up to 1 m. The speaker fabric is not waterproof but can withstand a drop of water.