

Philips
DVD player

DVP3358K



Enjoy it all — from DVD or USB

With 5.1 audio and stereo output

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Brings audio and video to life

- 5.1 channel audio output for surround sound
- Screen Fit for optimal viewing every time

Easy to use

- One-touch MP3 creation directly from CDs onto USB sticks

Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drives
- Media Copy transfers photos & music to USB flash drives

Plays all your movies and music

- Plays DivX, MP3, WMA and JPEG digital camera photos
- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW
- DivX Certified for standard playback of DivX videos


Enjoy enhanced karaoke

- Karaoke scoring for fun and exciting song contests at home

PHILIPS
sense and simplicity


Highlights

Plays it all

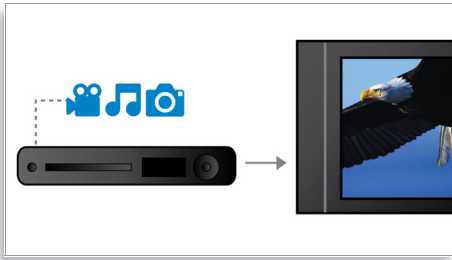


Play virtually any media format you want - whether it is DivX, MP3, WMA or JPEG. Experience the unbeatable convenience of great playability and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

5.1 channel audio output

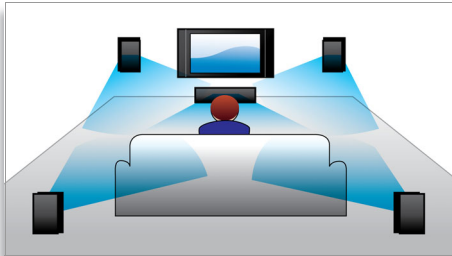

5.1 channel audio output for surround sound


One-touch MP3 creation

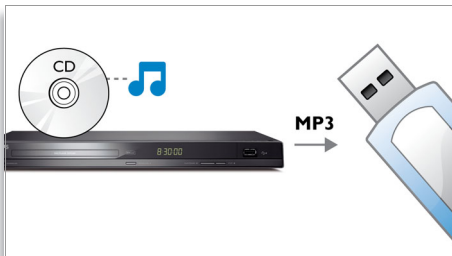

Convert the contents of your favourite CDs to MP3 files on your Philips product and store

them directly on a thumb drive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC and even while the CD is playing.

Hi-Speed USB 2.0 Link

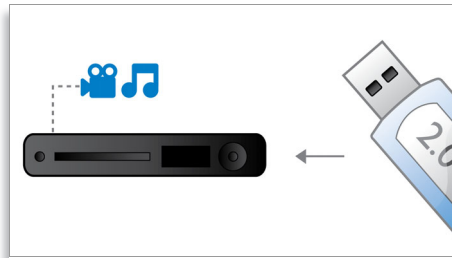


The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps of original USB devices. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Media Copy



Share your photos and music with family and friends in your living room — and elsewhere. Simply copy the files onto your USB thumb drive and carry your favourites with you wherever you go.

Screen Fit

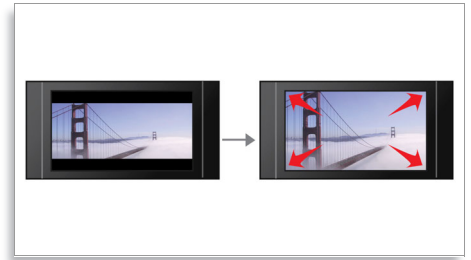

Whatever you're watching, on whatever TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full screen

Karaoke scoring



Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.



Specifications

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: > 90
- Distortion and Noise (1 kHz): > 65 dB
- Crosstalk (1 kHz): > 70 dB
- Dynamic Range (1 kHz): > 80 dB
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: NTSC, PAL

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- Compression format: MP3, Dolby Digital, PCM, WMA
- MP3 bit rates: 32 - 320 kbps

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Zoom,

Slideshow, Slideshow with MP3 playback

Connectivity

- Front/Side connections: Microphone, USB
- Rear Connections: Component/Video out Progressive, Composite video (CVBS) output, Digital coaxial out, Analogue audio multi-channel out, Analogue audio Left/Right out

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Korean, Malay, Thai, Traditional Chinese
- Karaoke: MIC volume

Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 10 W
- Standby power consumption: <1 W

Accessories

- Included accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, World Wide Warranty leaflet, User Manual, Power cord

Dimensions

- Packaging dimensions (W x H x D): 415 x 82 x 282 mm
- Set dimensions (W x H x D): 360 x 37 x 209 mm

Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: DivX, JPEG Still pictures, MP3



Issue date 2010-03-11

Version: 2.0.8

12 NC: 8670 000 50794
EAN: 87 12581 47226 9

© 2010 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com